

ASSEMBLY INSTRUCTIONS

Description: Dani Accent Chair


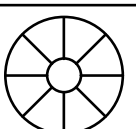
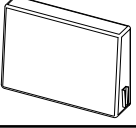
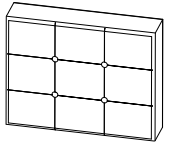
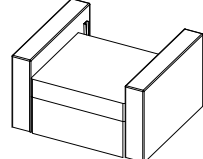
Important safety instructions:

- Please read carefully all instructions before assembly.
- For your safety and ease, assembly by two or more adults is recommended.
- Keep instructions for future use.

Pre-assembly:

- Do not discard any content until assembly is complete to avoid accidentally discarding small parts or hardware.
- Take out all parts and hardware from box.

Parts List


Item	Description		QTY
P1	Legs		4
P2	Plastic Washer		4
P3	Chair Back		1
P4	Back Cushion		1
P5	Chair Seat		1

DISCLAIMER:


WHEN PROPERLY ASSEMBLED, THIS ITEM IS SAFE FOR INTENDED USE. SELLER IS NOT LIABLE FOR ANY DAMAGES RESULTING FROM ITEM BEING IMPROPERLY ASSEMBLED AFTER PURCHASE.

Assembly Procedures:


Step 1: Assemble the chair on a flat, soft surface such as a carpet or cloth to prevent scratching the finish.
Take out the legs from carton box.

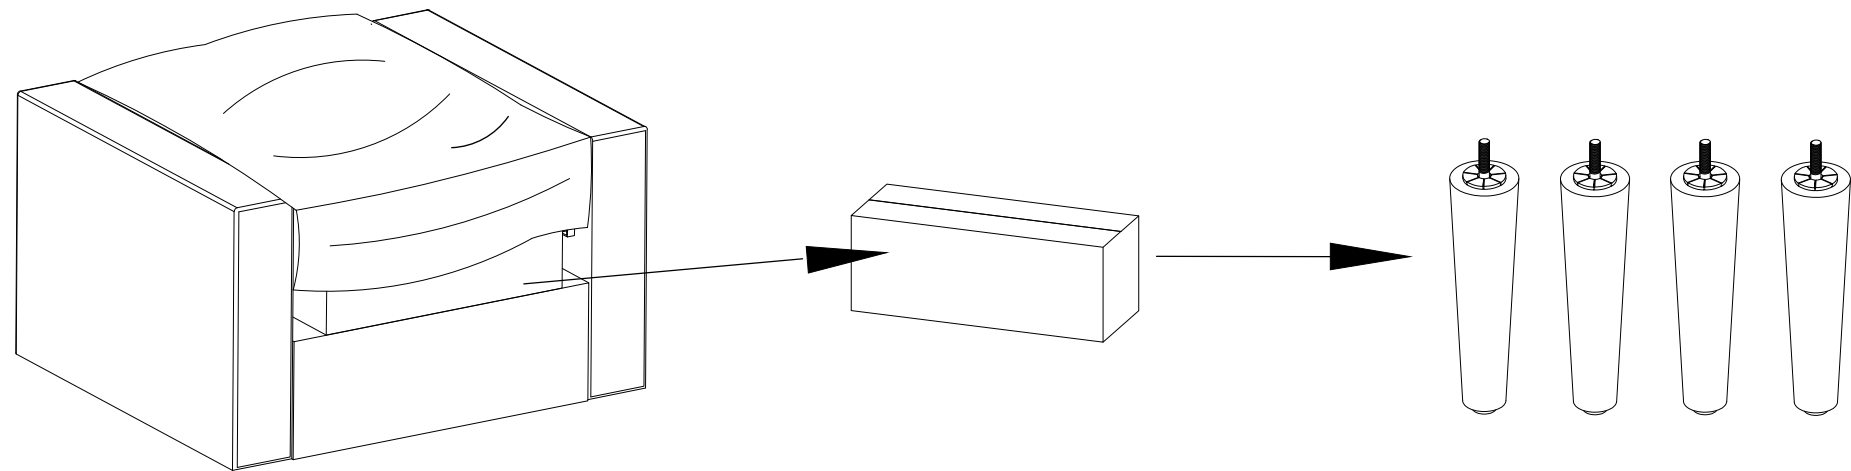


Step 2: Attach the legs (P1) into the holes on the bottom of chair seat (P5) through plastic washer (P2) as shown below:

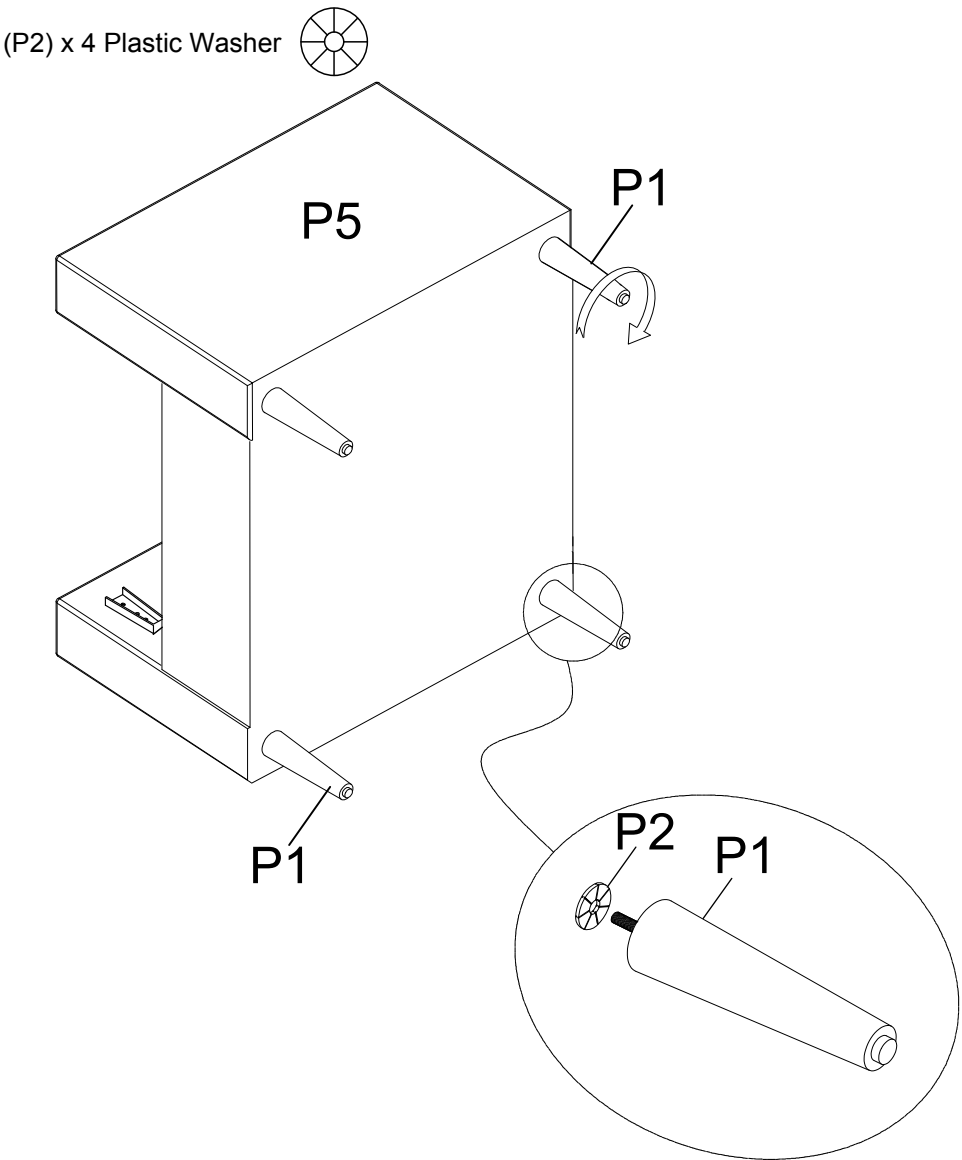


Step 3: Turn the chair over and place it upright on a level surface. Attach the Chair Back (P3) to Chair seat (P5) as shown below.

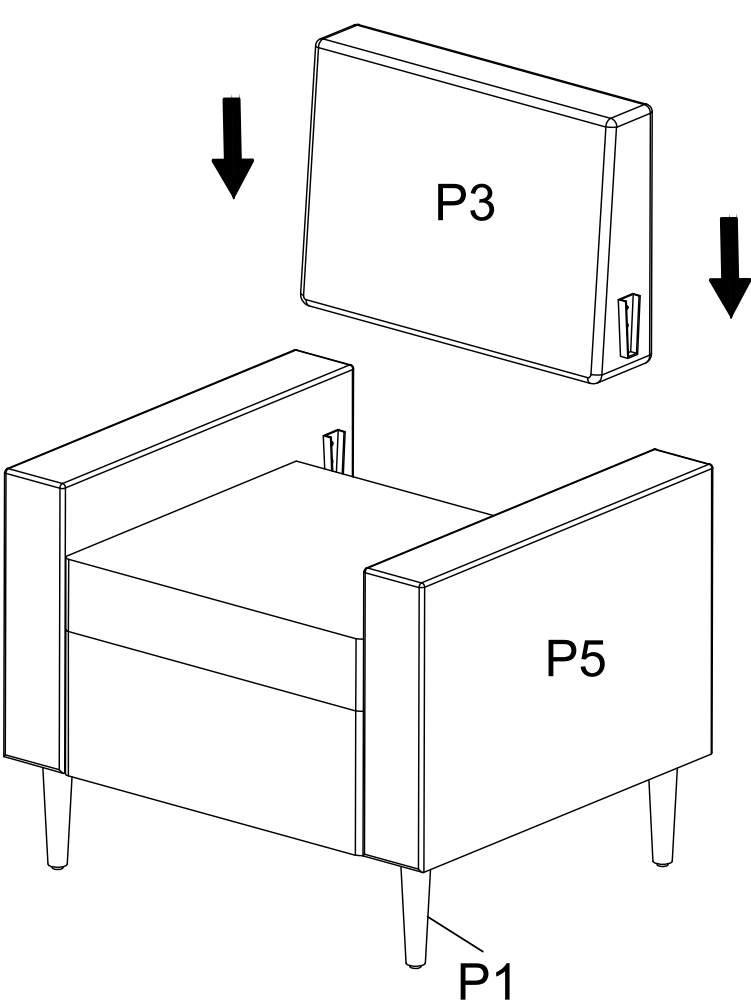

Step 4: Attach the Back Cushion (P4) to Chair Back (P3) as shown below.

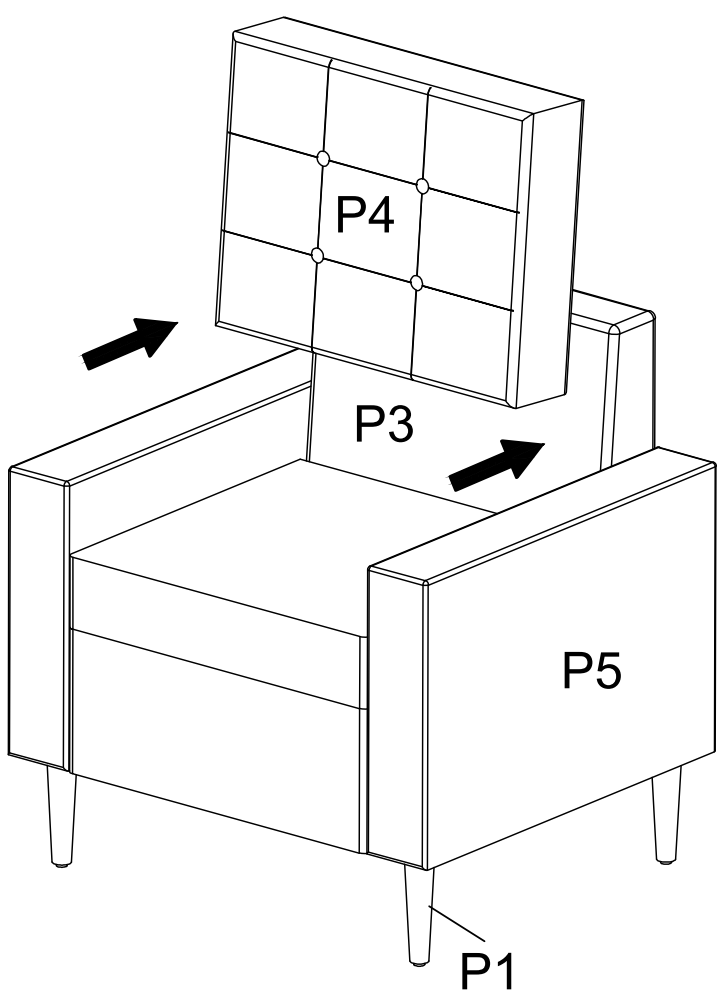

Step 5: Assembly is complete.

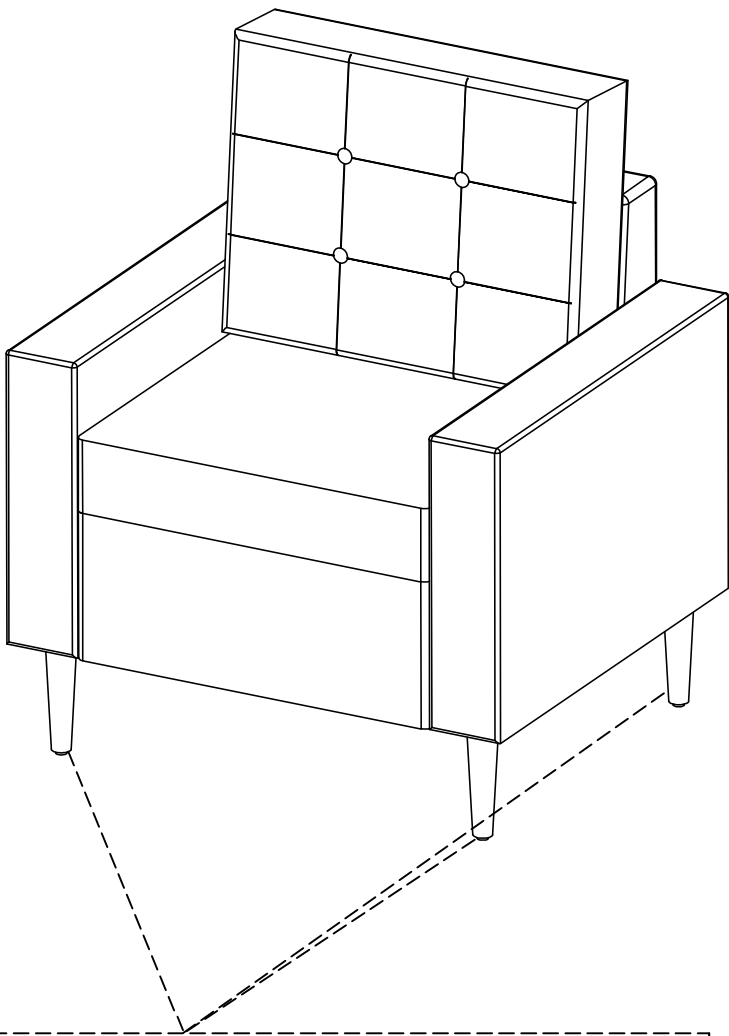

Note: legs can be adjusted with adjustable levelers

ADDITIONAL NOTE ABOUT SAFETY: BOLTS MAY LOOSEN DURING NORMAL EVERYDAY USE. THEY SHOULD BE INSPECTED AT LEAST EVERY 3 MONTHS AND RE-TIGHTENED AS NEEDED TO PREVENT DAMAGE OR INJURY, AND ENSURE STABILITY.

Thank you for your purchase