

**Important safety instructions:**

- Please read carefully all instructions before assembling the accent bench.
- For your safety and ease, assembly by two or more adults is recommended.
- Keep instructions for future use.

**Pre-assembly:**

- Do not discard any content until assembly is completed to avoid accidentally discarding small parts or hardware.
- Remove all parts and hardware from box.

**Parts List**

Item	Description	DRAWING	QTY
P1	Accent Bench		1
P2	Legs A		1
P3	Legs B		1


**Hardware List**

Item	Description	DRAWING	QTY
H1	Bolts $\varphi 5/16" \times 2-3/4"$		6
H2	Lock Washers $\varphi 5/16"$		6
H3	Flat Washers $\varphi 5/16"$		6
H4	Allen Wrench		1
H5	Wood Plug		4


**DISCLAIMER:**

**WHEN PROPERLY ASSEMBLED, THIS ITEM IS SAFE FOR INTENDED USE. SELLER IS NOT LIABLE FOR ANY DAMAGES RESULTING FROM ITEM BEING IMPROPERLY ASSEMBLED AFTER PURCHASE.**


Step 1. Remove all the legs and hardware from small box.

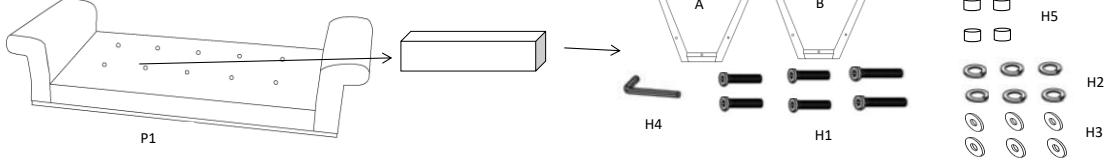


Step 2. Turn the bench (P1) upside down and lay on protective carpet. Attach the legs (P2&P3) to the bench, **loosely** tighten bolt (H1), lock washer (H2), flat washer (H3) with allen wrench (H4) as illustration below.

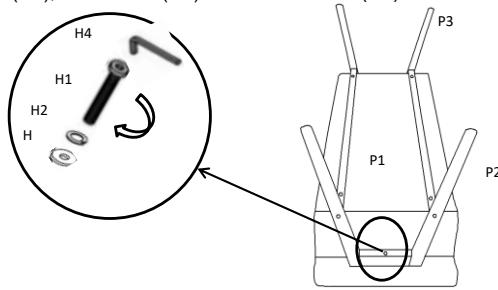


Step 3. Then using bolts (H1), lock washers (H2), flat washers (H3), connect wooden frame, **fully** tighten all bolts (H1) securely with allen wrench (H4) as illustration.

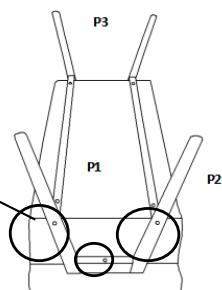

Step 4. Place the wood plug (H5) into the hole as illustration.

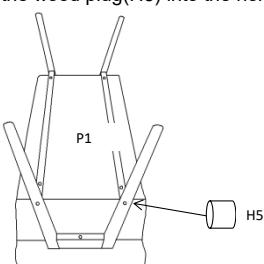

Step 5. Place bench upright on a level surface. Assembly is complete.

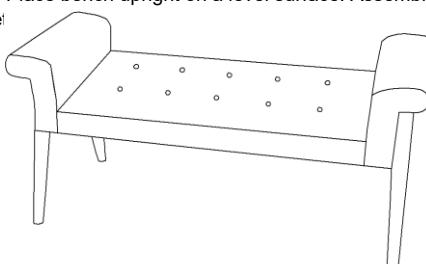

**ADDITIONAL NOTE ABOUT SAFETY: BOLTS MAY LOOSEN DURING NORMAL EVERYDAY USE. THEY SHOULD BE PERIODICALLY INSPECTED AND RE-TIGHTENED TO PREVENT DAMAGE OR INJURY. ALWAYS CHECK TO ENSURE THAT ALL HARDWARE IS KEPT TIGHTENED.**