

ASSEMBLY INSTRUCTIONS

Description: Hailey Armless Accent Chair

Important safety instructions:

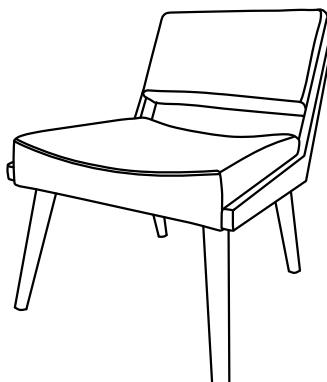
- Please read carefully all instructions before assembly.
- For your safety and ease, assembly by two or more adults is recommended.
- Keep instructions for future use.

Pre-assembly:

- Do not discard any content until assembly is complete to avoid accidentally discarding small parts or hardware.
- Take out all parts and hardware from box.

Parts List

Item	Description	QTY
P1	Chair Top	1
P2	Front Legs	2
P3	Left Back Leg	1
P4	Right Back Leg	1

**Hardware List**

Item	Description	QTY
H1	Bolts Ø5/16" *2-1/4"	8
H2	Lock Washers Ø5/16"	8
H3	Flat Washers Ø5/16"	8
H4	Allen Wrench 5/16"	1

DISCLAIMER:

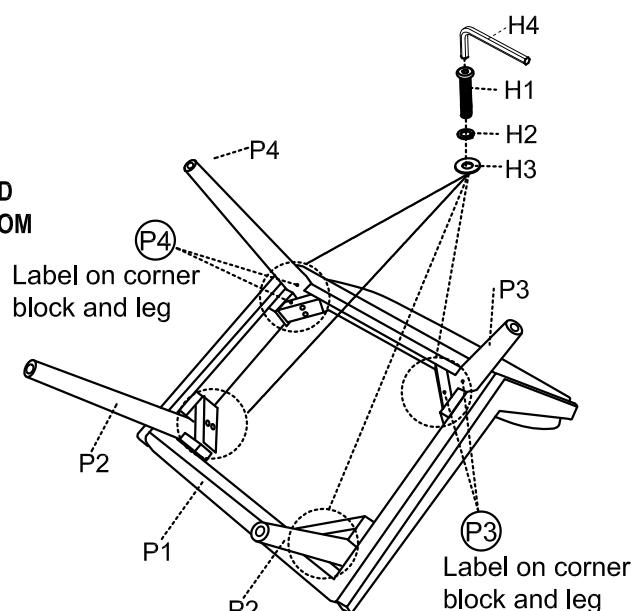
WHEN PROPERLY ASSEMBLED, THIS ITEM IS SAFE FOR INTENDED USE. SELLER IS NOT LIABLE FOR ANY DAMAGES RESULTING FROM ITEM BEING IMPROPERLY ASSEMBLED AFTER PURCHASE.

Assembly Procedures:

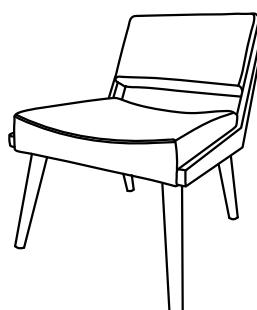
Step 1: Assemble the chair on a flat, soft surface such as a carpet or cloth to prevent scratching the finish.

Attach back legs (P3 & P4) to chair top (P1) following P3 and P4 labels on back legs and corneras, then attach front legs (P2) to chair top (P1) as shown below.

(H1)x8	Bolts Ø5/16" *2-1/4"	
(H2)x8	Lock Washers Ø5/16"	
(H3)x8	Flat Washers Ø5/16"	
(H4)x1	Allen Wrench 5/16"	



Step 2. Securely tighten all bolts when the chair is level. Assembly is complete. **Failure to follow these instructions may cause the bolts to misalign during assembly.**

**ADDITIONAL NOTE ABOUT SAFETY:**

BOLTS MAY LOOSEN DURING NORMAL EVERYDAY USE.

THEY SHOULD BE INSPECTED AT LEAST EVERY 3 MONTHS AND RE-TIGHTENED AS NEEDED TO PREVENT DAMAGE OR INJURY, AND ENSURE STABILITY.

Thank you for your purchase