

Description: Dining Chair

Important safety instructions:

- Please carefully read all instructions before assembling the chair.
- For your safety and ease, assembly by two or more adults is recommended.
- Keep instructions for future use.

Pre-assembly:


- Do not discard any contents until after assembly is complete to avoid accidentally discarding small parts or hardware.
- Remove all parts and hardware from box along with any plastic protective packaging.

Parts List

Item	Description	QTY
A	Chair Back	1
B	Front Legs	2
C	Seat Cushion	1

Hardware List


Item	Description	QTY
a	Bolts Ø5/16"x2"	8
b	Lock Washers 5/16"	8
c	Flat Washers 5/16" (22mm)	8
d	Allen Wrench 5/16"	1

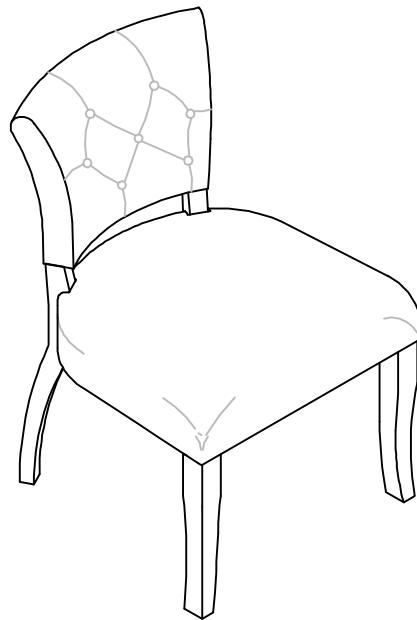


Assembly Procedures:

Step 1, Assemble the chair on a flat, soft surface such as a carpet or cloth to prevent scratching the finish.


- 1) The seat cushion (C) should be placed from bottom of chair back and then pushed to the proper location as shown below.
- 2) Make sure the seat cushion (C) to the chair back (A) aligning the holes and using bolts (a), lock washers (b), flat washers (c). Loosely tighten the bolts with Allen wrench (d).

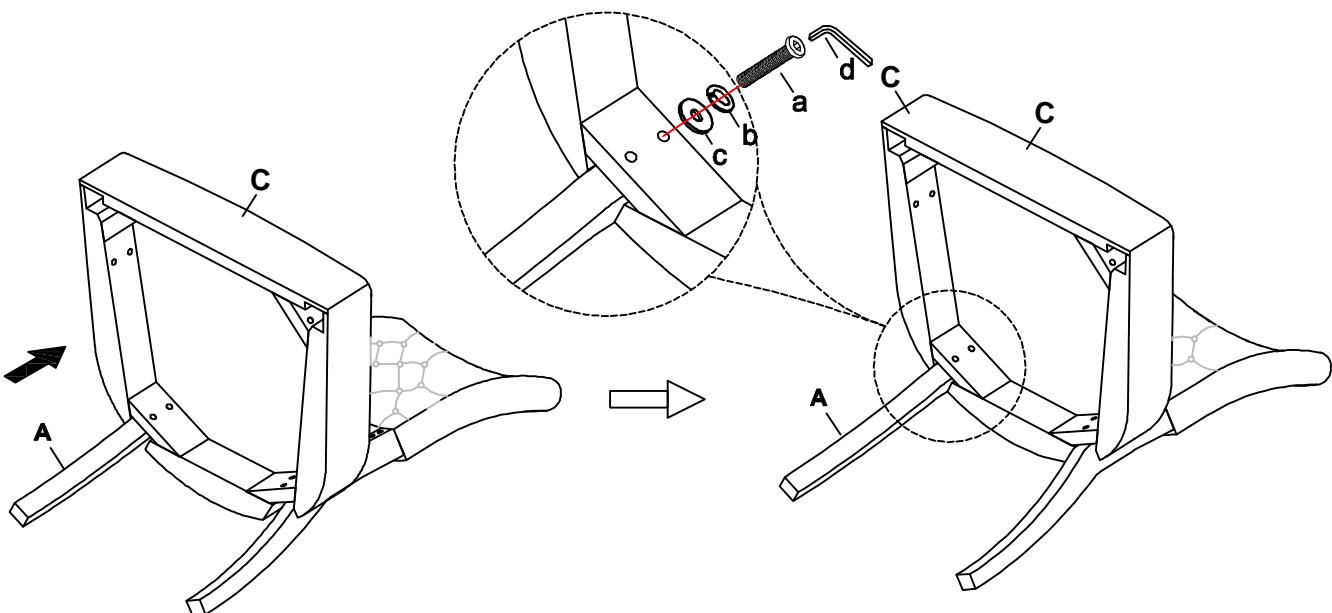

Step 2. Attach the front legs (B) to the seat cushion (C) using bolts (a), lock washers (b), flat washers (c). Loosely tighten the bolts with Allen wrench (d).

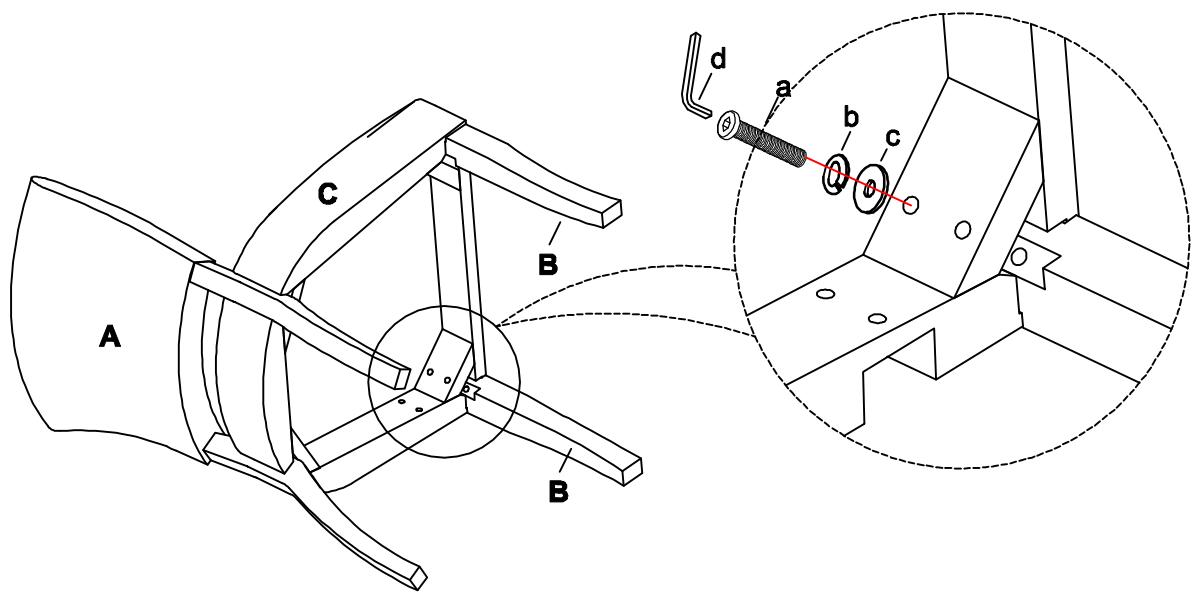

Step 3. Turn assembled the chair to an upright position. Securely tighten all bolts by Allen wrench (d). Assembly is complete. Failure to follow these instructions may cause the bolts to misalign during assembly.

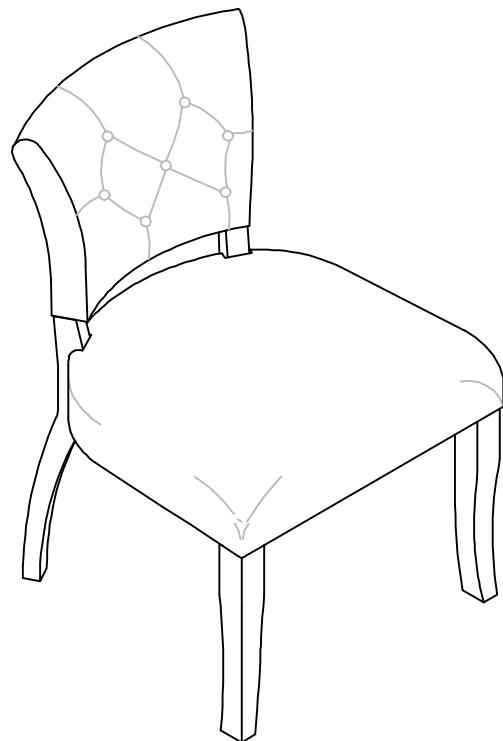

Thank you for your purchase