

ASSEMBLY INSTRUCTIONS

Description: Kelly Rectange Dining Table

Important safety instructions:

- Please carefully read all instructions before assembling.
- For your safety and ease, assembly by two or more adults is recommended.
- Keep instructions for future use.

Pre-assembly:


- Do not discard any contents until after assembly is complete to avoid accidentally discarding small parts or hardware.
- Remove all parts and hardware from box along with any plastic protective packaging.

Parts List

Item	Description	QTY
P1	Table Top	1
P2	Legs	4

Hardware List


Item	Description	QTY
H1	Bolts Ø5/16"×2-1/2"	8
H2	Lock Washers 5/16"	8
H3	Flat washers 5/16"	8
H4	Allen Wrench 5/16"	1

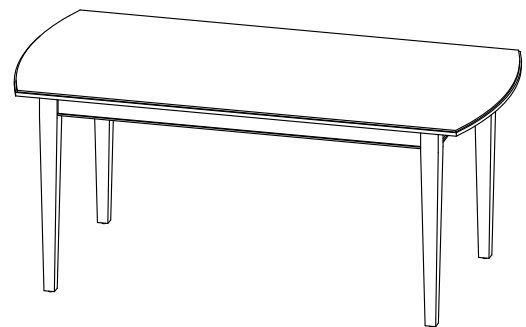

Assembly Procedures:


Step 1. Assemble the table on a flat, soft surface such as a carpet or cloth to prevent scratching the finish. Attach each leg (P2) to the table top (P1) as shown below. Securely tighten all bolts with Allen wrench (H4)

- (H1)x8 Bolts
(H2)x8 Lock Washers
(H3)x8 Flat washers
(H4)x1 Allen Wrench

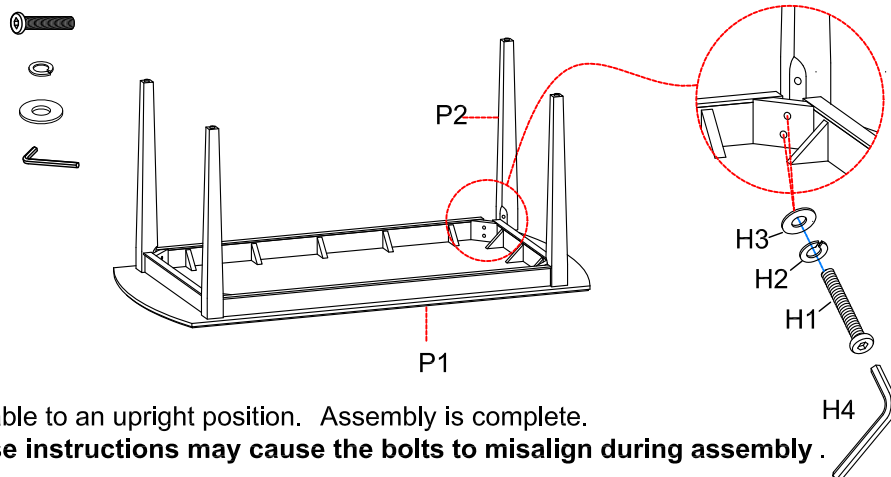

Step 2. Turn the assembled table to an upright position. Assembly is complete.

Failure to follow these instructions may cause the bolts to misalign during assembly .

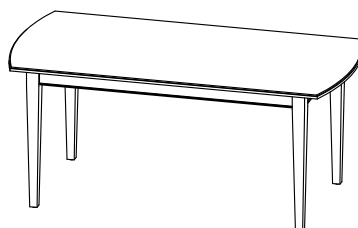

ADDITIONAL NOTE ABOUT SAFETY: BOLTS MAY LOOSEN DURING NORMAL EVERYDAY USE. THEY SHOULD BE PERIODICALLY INSPECTED AND RE-TIGHTENED TO PREVENT DAMAGE OR INJURY. ALWAYS CHECK TO BE SURE THAT ALL HARDWARE IS KEPT TIGHTENED.