

ASSEMBLY INSTRUCTIONS

Description: 30" Pedestal





Important safety instructions:

- Please carefully read all instructions before assembling the pedestal.
- For your safety and ease, assembly by two or more adults is recommended.
- Keep instructions for future use.





Pre-assembly:


- Do not discard any contents until after assembly is complete to avoid accidentally discarding small parts or hardware.
- Remove all parts and hardware from box along with any plastic protective packaging.

Parts List

Item	Description		QTY
SA	Leg 1	 (SA)	1
SB	Leg 2	 (SB)	1
SC	Pedestal Top	 (SC)	1
SD	Bottom Shelf	 (SD)	1


Hardware List

Item	Description		QTY
a	Bolts Ø1/4"x1"		8
b	Lock Washers 1/4"		8
c	Flat Washers 1/4"		8
d	Allen Wrench 1/4"		1

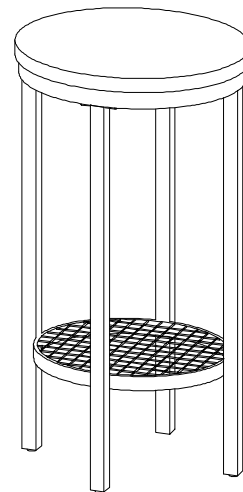


Assembly Procedures:

Step 1. Assemble the pedestal on a flat, soft surface such as a carpet or cloth to prevent scratching the finish. Attach leg 2 (SB) to pedestal top (SC) according to the labels on each leg and using bolts (a), lock washers (b) and flat washers (c). Loosely tighten all bolts by Allen wrench (d).

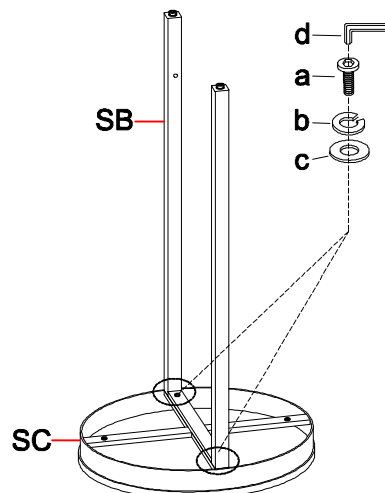


Step 2. Attach leg 1 (SA) to pedestal top (SC) with label "SB" using bolts (a), lock washers (b) and flat washers (c). Loosely tighten all bolts by Allen wrench (d) as shown below.

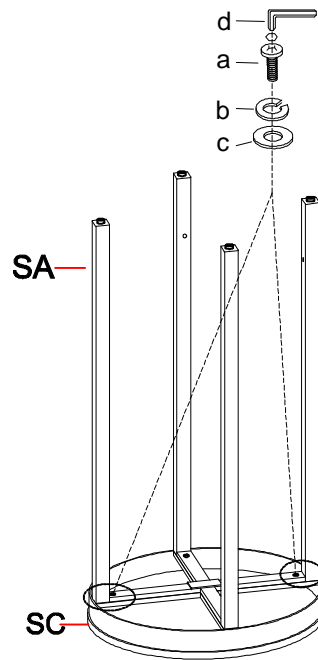

Step 3.

1). Attach bottom shelf (SD) to four legs (SA, SB) using bolts (a), lock washers (b) and flat washers (c) . Loosely tighten all bolts by Allen wrench (d) as shown below.

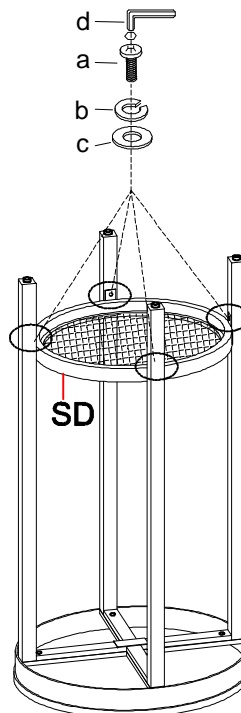

Step 4.

Securely tighten all bolts. Turn the pedestal to an upright position. Assembly is complete.

Thank you for your purchase