

## LANCASTER SIDEBOARD

Assembly instructions:

## PARTS LIST

No.	DESCRIPTION	IMAGE	QTY
P1	BODY		1
P2	STRETCHER FRAME		1
P3	LEFT LEG FRAME		1
P4	RIGHT LEG FRAME		1
P5	SHELF		1




## HARDWARE LIST

No.	DESCRIPTION	IMAGE	QTY
H1	BOLT (Ø6X40 MM)		7
H2	HEX BOLT (Ø8X80 MM)		8
H3	WOODEN DOWELS (Ø8X30 MM)		4
H4	SPRING WASHER (M8X14X1.5MM)		8
H5	FLAT WASHER (M8X18X1.5MM)		8
H6	SPRING WASHER (M6X14X1.5MM)		7
H7	FLAT WASHER (M6X18X1.5MM)		7
H8	SPANNER		1
H9	ALLEN KEY		1
H10	ANTI TIP KIT		1 SET

NOTE: PO # is located underneath/ at the back side of each item. Please be prepared to provide this # should any claim be necessary.

CAUTION: Item is heavy. Assembly should be performed by two people.


DISCLAIMER: When properly assembled, this item is safe for intended use. Seller is not liable for any damages resulting from item being improperly assembled after purchase.

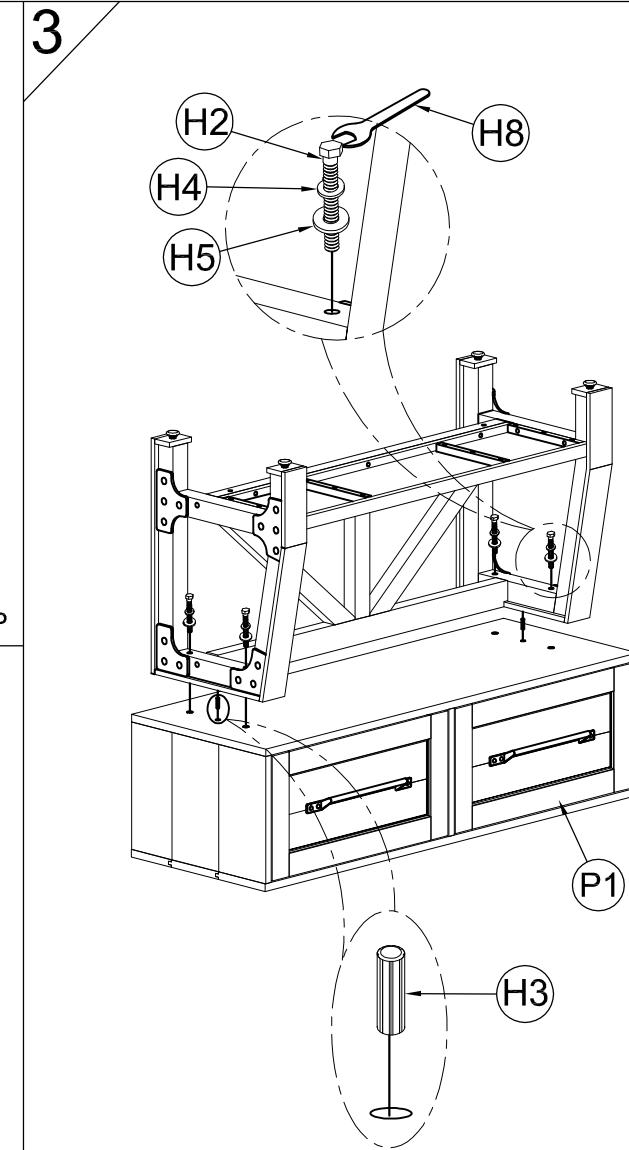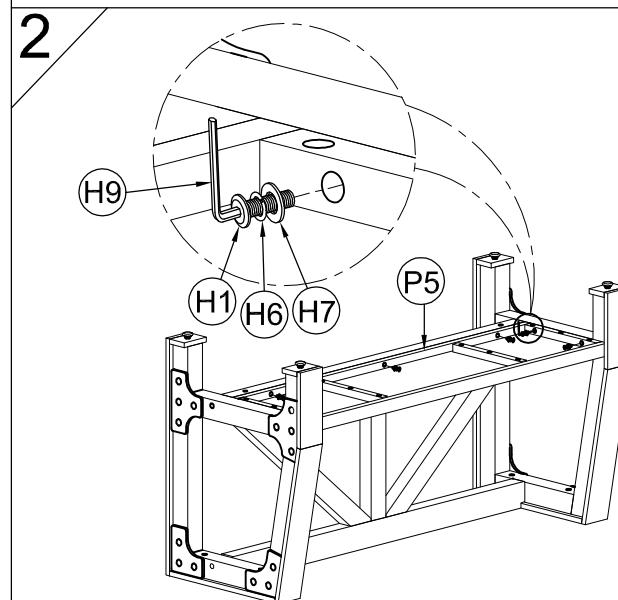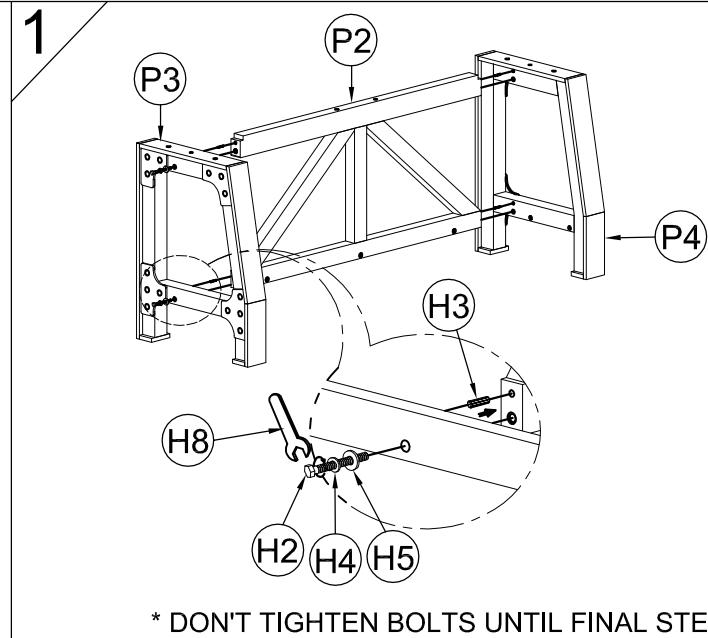


4

Anti Tip Kit has been attached to the product. Please, read guideline thoroughly and then install immediately to prevent product from tipping.

H10

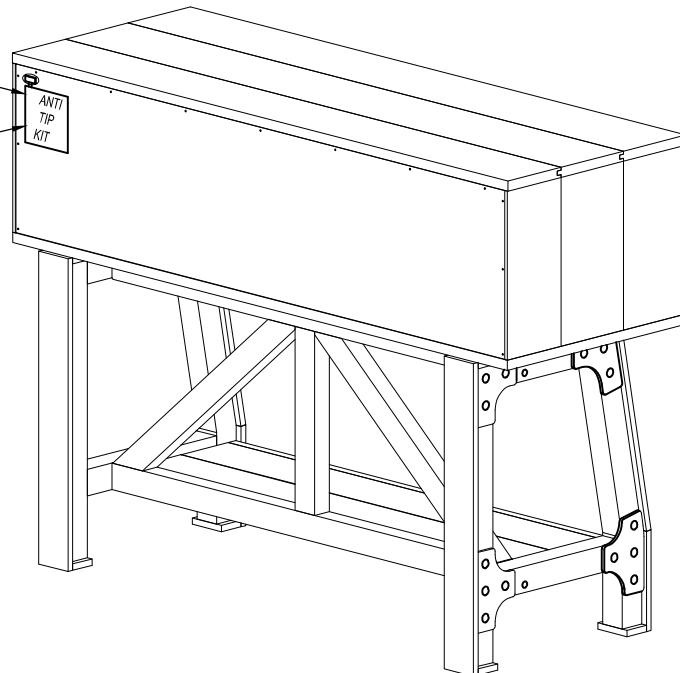

5

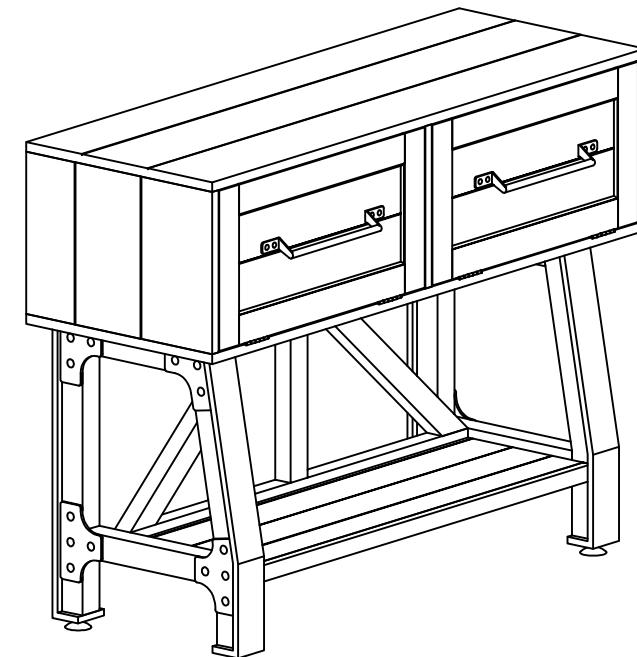

ASSEMBLY COMPLETED

**Warning:**

Serious or fatal injuries can occur from furniture tip-over. To help prevent furniture tip-over:  
Use provided mounting hardware to secure furniture to the wall. This may reduce but not eliminate the risk of furniture tip-over.  
Do not allow children to climb on furniture.  
Keep remote controls, toys, and other items that might attract children off of this product.  
Unless specifically designed to accommodate, do not set televisions or other heavy objects on top of this product.