

ASSEMBLY INSTRUCTIONS

Description: Dining Chair

Important safety instructions:

- Please carefully read all instructions before assembling the chair.
- For your safety and ease, assembly by two or more adults is recommended.
- Keep instructions for future use.

Pre-assembly:


- Do not discard any contents until after assembly is complete to avoid accidentally discarding small parts or hardware.
- Remove all parts and hardware from box along with any plastic protective packaging.

Parts List

Item	Description	QTY
A	Chair Back	1
B	Seat	1
C	Front Legs	2


Hardware List

Item	Description	QTY
a	Long Bolts Ø5/16"×3-1/2"	4
b	Medium Bolts Ø5/16"×2-1/4"	4
c	Short Bolt Ø5/16"×1-3/4"	1
d	Lock Washers 5/16"	9
e	Flat Washers 5/16"	9
f	Allen Wrench 5/16"	1

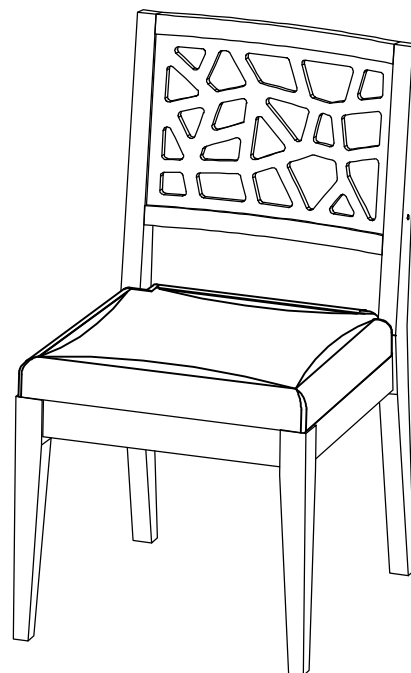


Assembly Procedures:


Step 1, Assemble the chair on a flat, soft surface such as a carpet or cloth to prevent scratching the finish
Attach the seat (B) to Chair back (A) using bolts (c), locker washers (d), flat washers (e) wrench(f). Loosely tighten by Allen wrench (f).

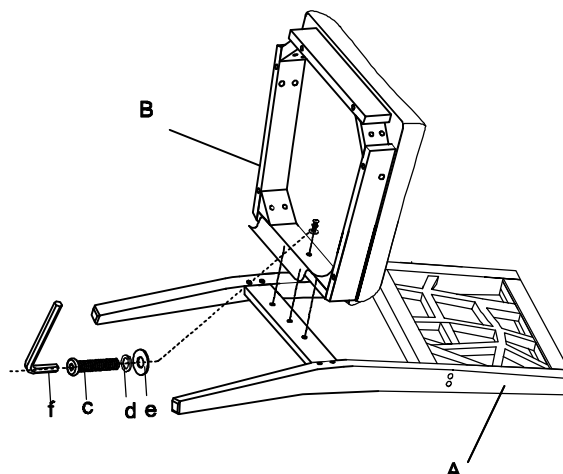

Step 2. Attach the seat (B) to the leg of Chair back(A) using bolts (a), lock washers (d), flat washers (e). Loosely tighten by Allen wrench (f).

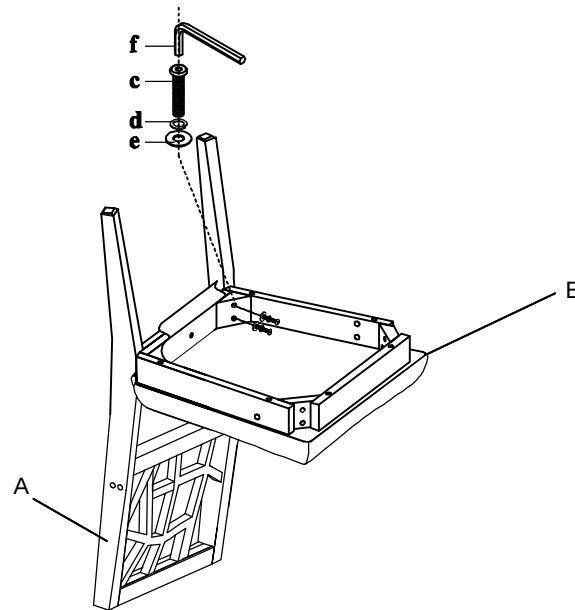

Step 3. Attach the front legs (C) to seat (A) using bolts (b), lock washers (d) and flat washers (e). Loosely tighten by Allen wrench (f).

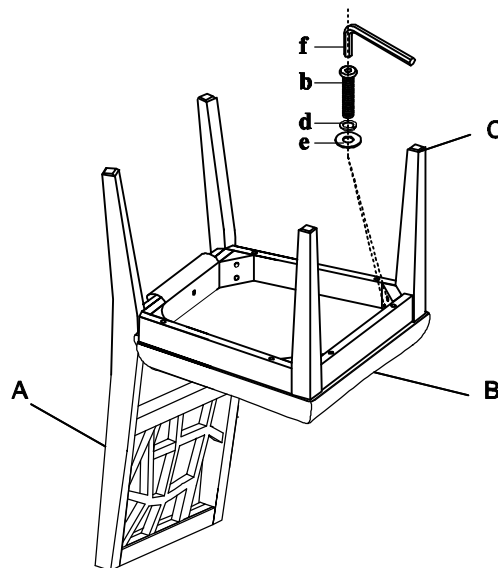

Step 4. Securely tighten all bolts by Allen wrench (f). Assembly is completed.

ADDITIONAL NOTE ABOUT SAFETY: BOLTS MAY LOOSEN DURING NORMAL EVERYDAY USE. THEY SHOULD BE PERIODICALLY INSPECTED AND RE-TIGHTENED TO PREVENT DAMAGE OR INJURY. ALWAYS CHECK TO BE SURE THAT ALL HARDWARE IS KEPT TIGHTENED.

Thank you for your purchase