



## ASSEMBLY INSTRUCTIONS

### Capital Task Lamp (Item# UH153-0095)

#### Important Safety Instructions:

- For safety purpose, this lamp is equipped with a polarized plug (one blade is wider than the other). If the plug does not fit securely into your outlet, do not force it, contact a professional electrician. Never alter the plug in any way.
- These instructions are provided for your safety. It is very important that they are read carefully and completely before assembling fixture.
- This fixture has been rated for up to (1) 40-watt maximum **TYPE A bulb** (not included) or (1) 13-watt **compact fluorescent light bulb** (not included). To avoid the risk of fire, do not exceed the recommended wattage.

#### Pre-assembly:

- Do not discard any contents until after assembly is complete to avoid accidentally discarding small parts or hardware.
- Remove all parts and hardware from box along with any plastic protective packaging.

#### Parts Enclosed:

Item	Description	QTY
A	Lamp base	1
B	Wood stick	1
C	Rocker head	1
D	Lamp body	1
E	Socket	1
F	Lamp Shade	1

#### Warning:

- Wires and cables are all attached (further wiring is not needed from consumer). When unpacking product, be careful to not pull wires as it may result as a bad connection. Do not plug into electrical outlet until lamp is fully assembled.

**Note:**

Turn the power off (unplug from the wall outlet) before replacing the bulb. Make sure the bulb has sufficient time to cool down.

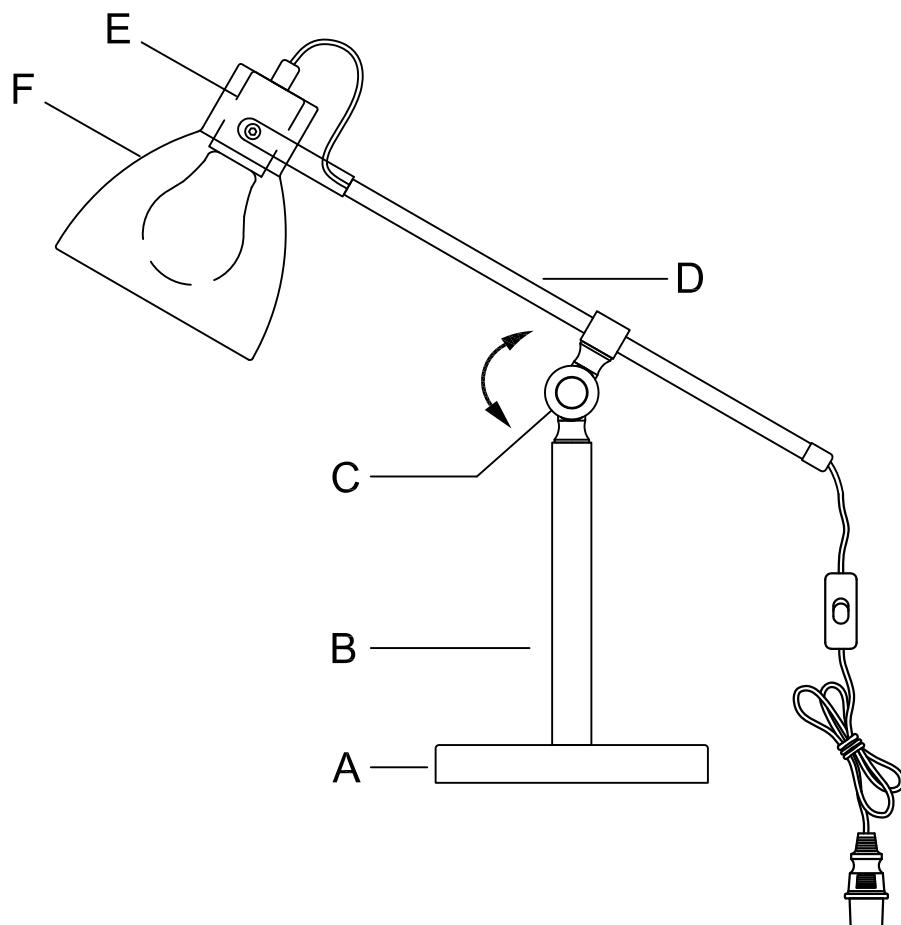
**Assembly Instruction:**

Step 1: Open the package and place all the components on the surface or on the floor.

Step 2: Adjust the lamp body (D) to the desired Angle.

Step 3: Screw the light bulb into the socket (E).

Step 4: Assembly is completed.

**Care Instructions:**

- Wipe with soft dry cloth only
- Always avoid the use of harsh chemicals or abrasive as they may damage to the finish.

**Thank you for your purchase**