

# ASSEMBLY INSTRUCTIONS

## Description: Lounge




 
 
### Important safety instructions:


- Please carefully read all instructions before assembling the Lounge.
- For your safety and ease, assembly by two or more adults is recommended.
- Keep instructions for future use.

### Pre-assembly:






- Do not discard any contents until after assembly is complete to avoid accidentally discarding small parts or hardware.
- Remove all parts and hardware from box along with any plastic protective packaging.
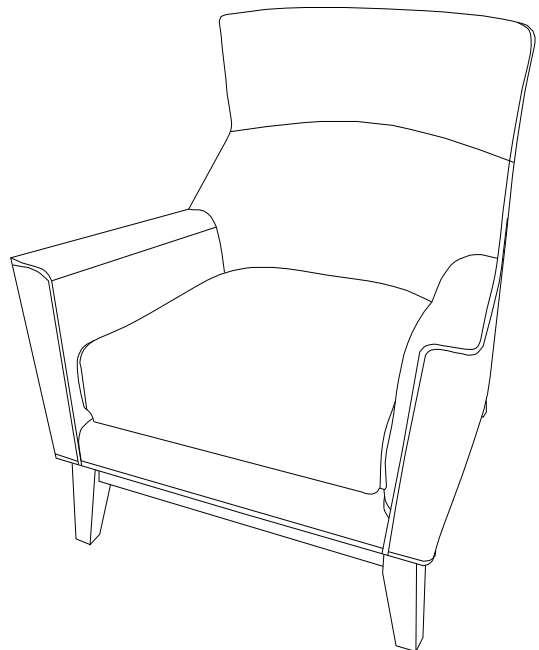
### Parts List

Item	Description		QTY
A	Lounge Top		1
B	Back Left Leg		1
C	Back Right Leg		1
D	Back Top Rail		1
E	Front Legs		2




### Hardware List

Item	Description		QTY
a	Bolts Ø5/16"×2"		8
b	Lock Washers 5/16"		8
c	Flat Washers 5/16"		8
d	Allen Wrench 5/16"		1
e	Wooden Plugs		4


### Assembly Procedures:

**Step 1.** Assemble the lounge on a flat, soft surface such as a carpet or cloth to prevent scratching the finish. Attach the front legs (E) to the lounge top (A) using bolts (a), lock washers (b) and flat washers (c). Loosely tighten all bolts with Allen wrench (d).

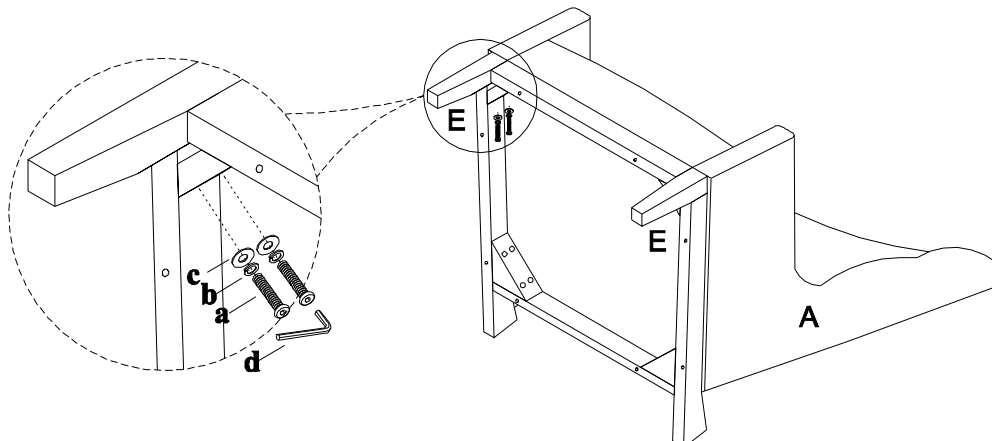


**Step 2.**

- 1) Attach the back left leg (B) and back right leg (C) to the lounge top (A) according to the labels (L, R) on the back left leg (B), back right leg (C) and the bottom frame of lounge top (A) using bolts (a), locker washers (b) and flat washers (c) as shown below.
- 2) Attach the back top rail (D) to the back left leg (B) and back right leg (C) using bolts (a), locker washers (b) and flat washers (c).
- 3) Securely tighten all bolts with Allen wrench (d).

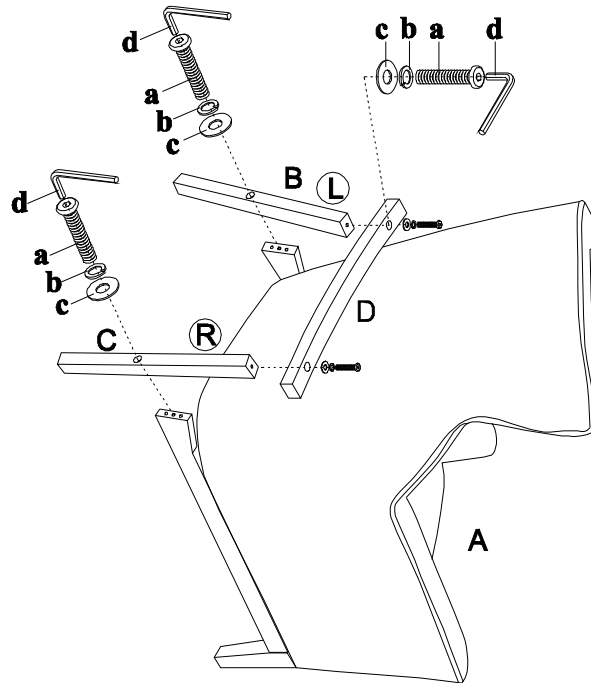

**Step 3.**

- 1) Attach wooden plugs (e) to each each exposed bolt hole, tighten with rubber hammer to knock the wooden plug till its tighten. Note: use a soft cloth between the wooden plug and hammer to prevent damage to wooden plug finish.
- 3) Assembly is complete. Failure to follow these instructions may cause the bolts to misalign during assembly.

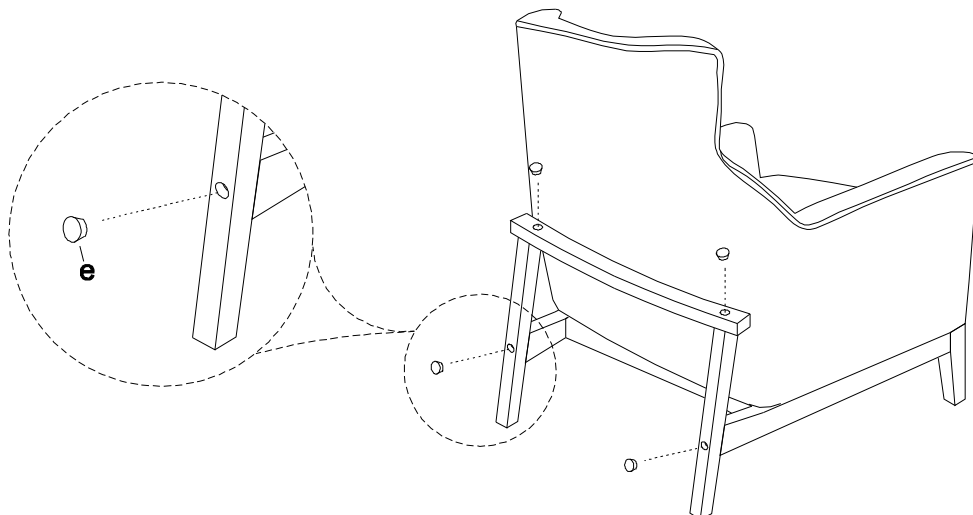

**ADDITIONAL NOTE ABOUT SAFETY: BOLTS MAY LOOSEN DURING NORMAL EVERYDAY USE. THEY SHOULD BE PERIODICALLY INSPECTED AND RE-TIGHTENED TO PREVENT DAMAGE OR INJURY. ALWAYS CHECK TO BE SURE THAT ALL HARDWARE IS KEPT TIGHTENED.**

**Thank you for your purchase**