

# ASSEMBLY INSTRUCTIONS

## Description: Dining Chair

### Important safety instructions:


- Please carefully read all instructions before assembling the chair.
- For your safety and ease, assembly by two or more adults is recommended.
- Keep instructions for future use.

### Pre-assembly:

- Do not discard any contents until after assembly is complete to avoid accidentally discarding small parts or hardware.
- Remove all parts and hardware from box along with any plastic protective packaging.

### Parts List

| Item | Description | QTY |
|------|-------------|-----|
| A    | Chair top   | 1   |
| B    | Front Legs  | 2   |
| C    | Back Legs   | 2   |

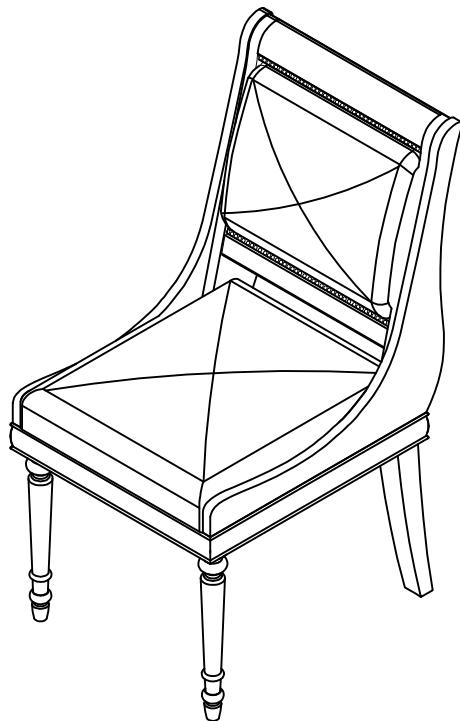


### Hardware List

| Item | Description               | QTY |
|------|---------------------------|-----|
| a    | Bolts Ø5/16"x2-1/2"       | 4   |
| b    | Bolts Ø5/16"x2"           | 4   |
| c    | Lock Washers 5/16"        | 8   |
| d    | Flat Washers 5/16" (19mm) | 8   |
| e    | Allen Wrench 5/16"        | 1   |


### Assembly Procedures:

Step 1. Assemble the chair on a flat, soft surface such as a carpet or cloth to prevent scratching the finish. Attach the back leg (C) to chair top (A) using bolts (b), lock washers (c) and flat washers (d). Securely tighten all bolts by Allen wrench (e), but do not over tighten the bolts.

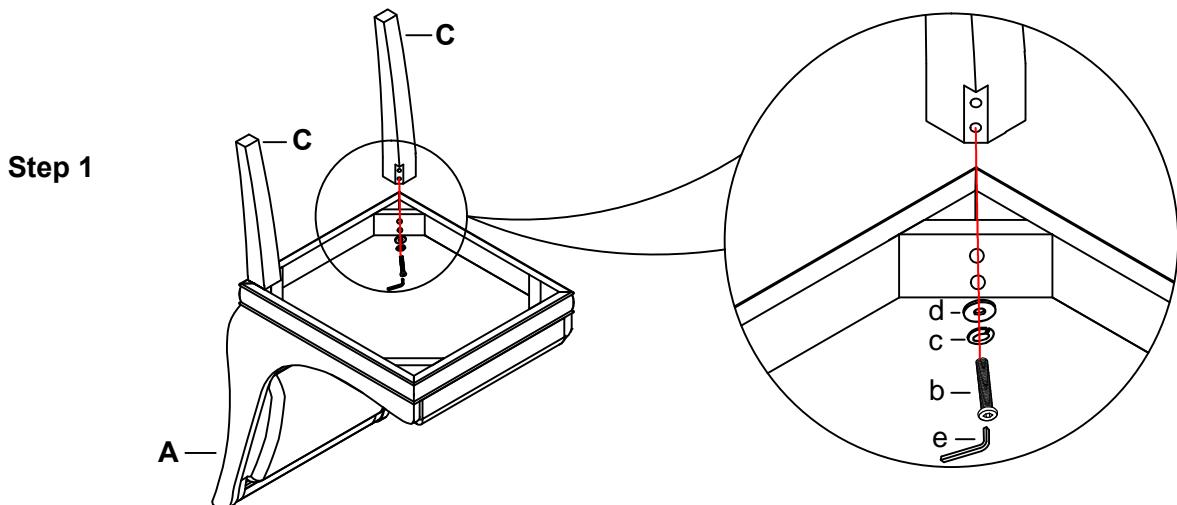


Step 2. Attach the front leg (B) to chair top (A) using bolts (a), lock washers (c) and flat washers (d). Securely tighten all bolts by Allen wrench (e), but do not over tighten the bolts.

Step 2

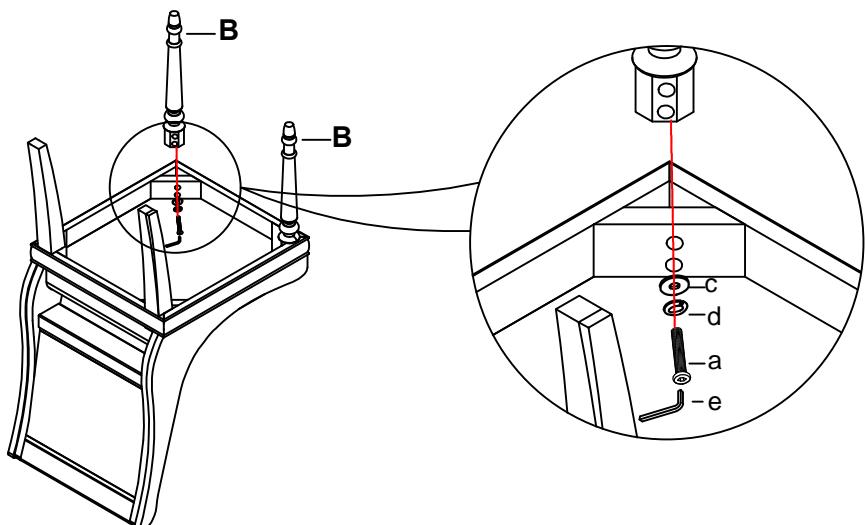

Step 3. Assembly are complete. Failure to follow these instructions may cause the bolts to misalign during assembly.

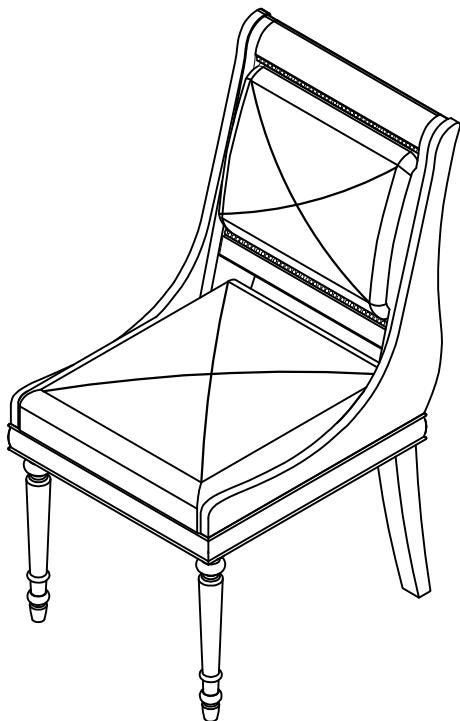

Thank you for your purchase