

Important safety instructions:


- Please carefully read all instructions before assembling the chair.
- For your safety and ease, assembly by two or more adults is recommended.
- Keep instructions for future use.

Pre-assembly:

- Do not discard any contents until after assembly is complete to avoid accidentally discarding small parts or hardware.
- Remove all parts and hardware from box along with any plastic protective packaging.

Parts List

| Item | Description | QTY |
|------|----------------|-----|
| A | Chair Top | 1 |
| B | Front Legs | 2 |
| C | Back Left Leg | 1 |
| D | Back Right Leg | 1 |

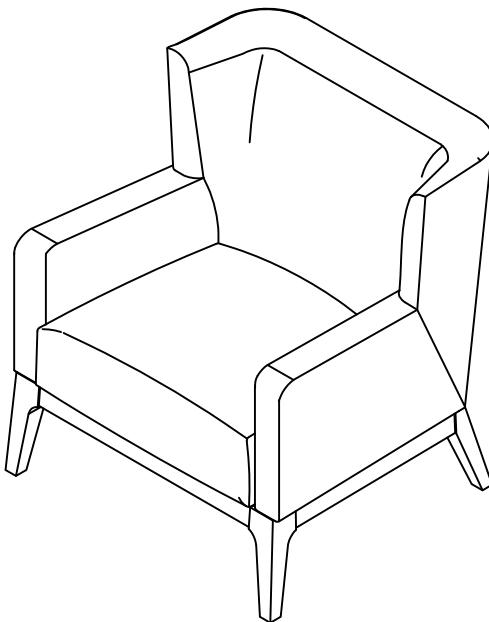**Hardware List**

| Item | Description | QTY |
|------|---------------------------|-----|
| a | Bolts Ø5/16" *2" | 8 |
| b | Lock Washers 5/16" | 8 |
| c | Flat Washers 5/16" (19mm) | 8 |
| d | Allen Wrench 5/16" | 1 |

Assembly Procedures:


Step 1. Assembly the lounge on a flat, soft surface such as a carpet or cloth to prevent scratching the finish.

1) Loosely attach the front legs (B) to the chair top (A)

2) Loosely attach the back legs (C, D) to the chair top (A) following the label "L" & "R" on the corner block and the back left/right legs accordingly.

3) Turn the assembled chair to an upright position. Make sure the chair is level and securely tighten all bolts with Allen wrench (e). Assembly is complete. Failure to follow these instructions may cause the bolts to misalign during assembly.

| | | |
|-------|--------------|--|
| (a)x8 | Bolts | |
| (b)x8 | Lock Washers | |
| (c)x8 | Flat Washers | |
| (d)x1 | Allen Wrench | |

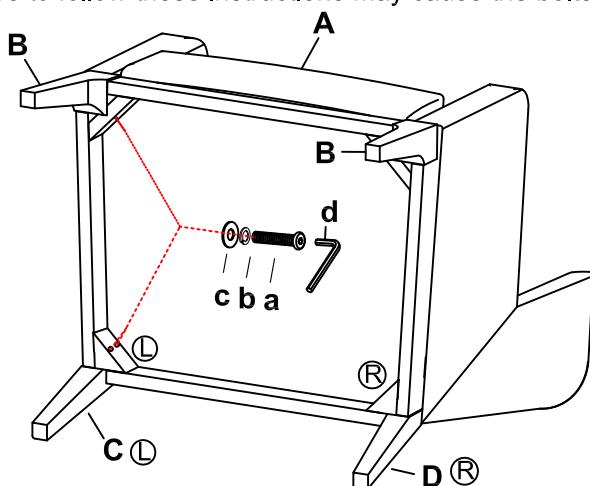

ADDITIONAL NOTE ABOUT SAFETY: BOLTS MAY LOOSEN DURING NORMAL EVERYDAY USE. THEY SHOULD BE PERIODICALLY INSPECTED AND RE-TIGHTENED TO PREVENT DAMAGE OR INJURY. ALWAYS CHECK TO BE SURE THAT ALL HARDWARE IS KEPT TIGHTENED.

Thank you for your purchase