

MADISONPARK®

ASSEMBLY INSTRUCTIONS

Description: Jacques Accent Chair





Important safety instructions:

- Please read carefully all instructions before assembly.
- For your safety and ease, assembly by two or more adults is recommended.
- Keep instructions for future use.






Pre-assembly:

- Do not discard any content until assembly is complete to avoid accidentally discarding small parts or hardware.
- Take out all parts and hardware from box.

Parts List

Item	Description		QTY
P1	Front left leg		1
P2	Front right leg		1
P3	Back legs		2
P4	Chair		1

Hardware List


Item	Description		QTY
H1	Bolts ø5/16*1-3/16"		6
H2	Lock Washersø5/16"		6
H3	Flat Washers ø5/16"		6
H4	Allen Wrench ø3/16"		1
H5	Plastic washer		2

DISCLAIMER:


WHEN PROPERLY ASSEMBLED, THIS ITEM IS SAFE FOR INTENDED USE. SELLER IS NOT LIABLE FOR ANY DAMAGES RESULTING FROM ITEM BEING IMPROPERLY ASSEMBLED AFTER PURCHASE.

Assembly Procedures:


Step 1. Remove the seat cushion and take out the legs and hardware under the seat.

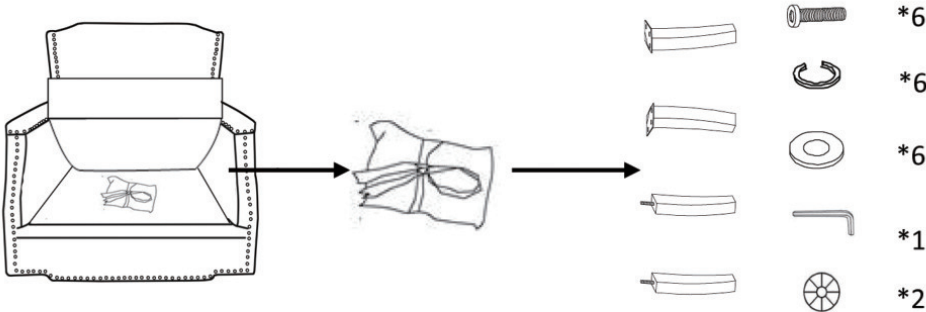


Step 2. Turn the chair upside down and lay on protective carpet. Screw in the back legs (P3) using Plastic Washer (H5) for each. Screw tight to the right angle.

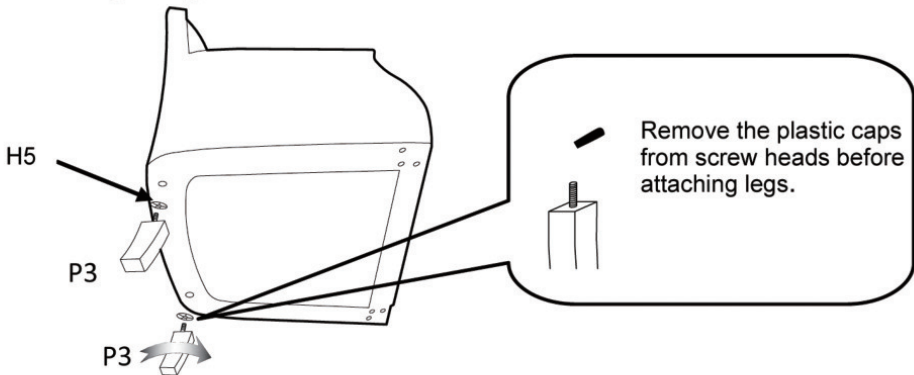

Step 3. Using bolts (H1), lock washers (H2), flat washers (H3), connect front left leg (P1) and front right leg (P2) to chair (P4). Tighten bolts (H1) with Allen Wrench (H4).

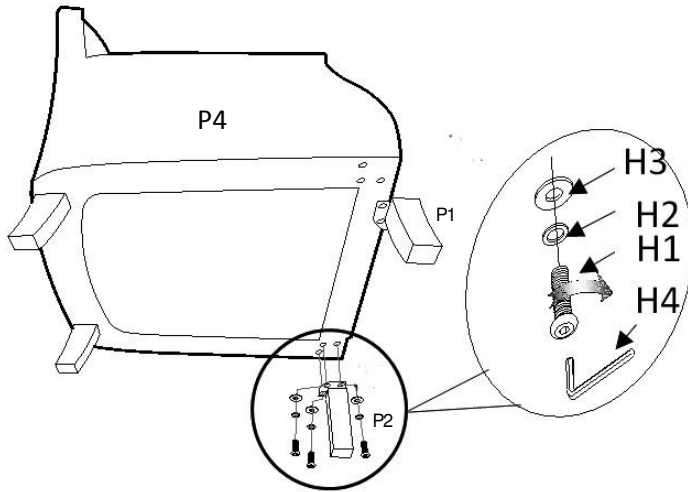

Step 4. Place chair upright on a level surface. Assembly is complete.

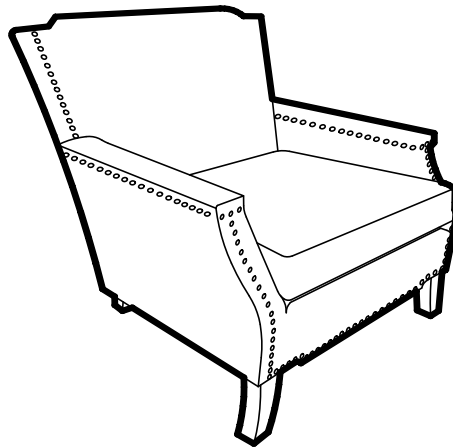

ADDITIONAL NOTE ABOUT SAFETY: BOLTS MAY LOOSEN DURING NORMAL EVERYDAY USE. THEY SHOULD BE PERIODICALLY INSPECTED AND RE-TIGHTENED TO PREVENT DAMAGE OR INJURY. ALWAYS CHECK TO ENSURE THAT ALL HARDWARE IS KEPT TIGHTENED .

Thank you for your purchase