


ASSEMBLY INSTRUCTION


Accent chair

Parts#	Parts Name	Drawing	Qty
A	Front Feet		2
B	Back Feet		2
C	Chair		1
D	Bolt		8
E	Spring washer		8
F	Flat washer		8
H	Allen Wrench		1

Step 1. remove the non-woven cover at bottom of the chair and take out the legs.

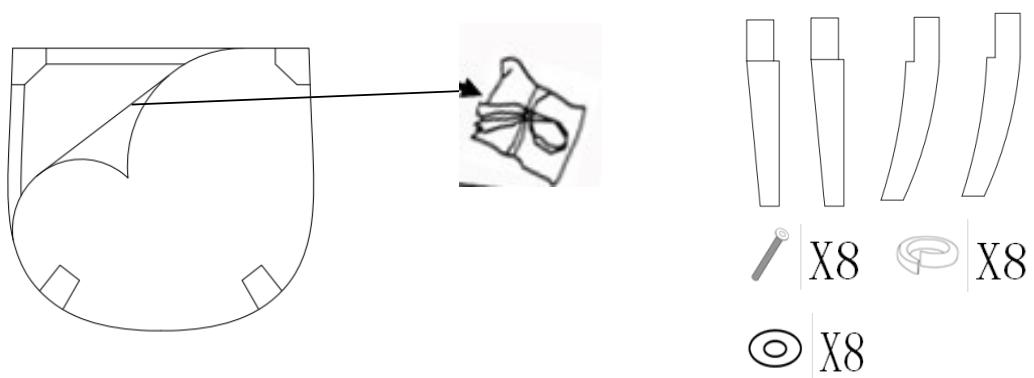

Step 2: Insert the front legs (A) and back legs (B) to seat frame , lock legs by using spring washer (E), flat washer(F), bolt(D), Then tighten the bolts with allen wrench (H).

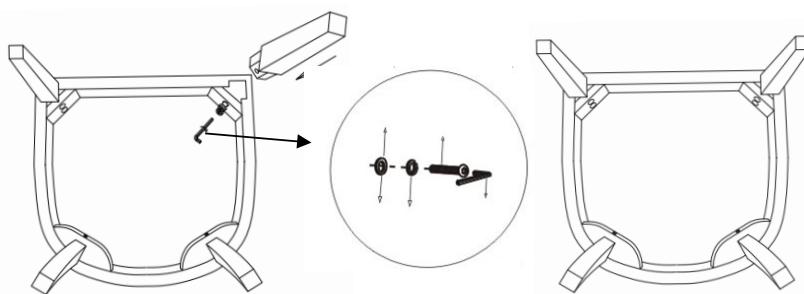

Step 3: Turn the chair over and place it upright on a level surface.

