

Description: Emerson Accent Chair

Important safety instructions:


- Please carefully read all instructions before assembling the chair.
- For your safety and ease, assembly by two or more adults is recommended.
- Keep instructions for future use.

Pre-assembly:

- Do not discard any contents until after assembly is complete to avoid accidentally discarding small parts or hardware.
- Remove all parts and hardware from box along with any plastic protective packaging.

Parts List

Item	Description	QTY
P1	Chair Top	1
P2	Chair Back	1
P3	Front Legs	2

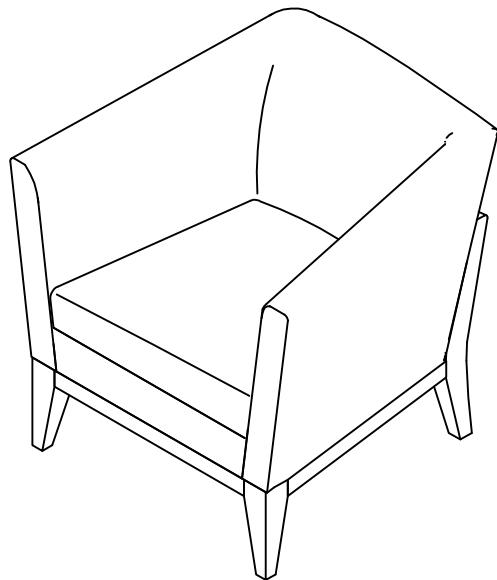
**Hardware List**

Item	Description	QTY
H1	Bolts Ø5/16"x3-1/4"L	4
H2	Bolts Ø5/16"x2-1/4"L	4
H3	Bolts Ø5/16"x1-3/4"L	1
H4	Lock Washers Ø5/16"	9
H5	Flat Washers Ø5/16"	9
H6	Allen Wrench Ø5/16"	1

Assembly Procedures:


Step 1. Assembly the chair on a flat, soft surface such as a carpet or cloth to prevent scratching the finish. Attach chair top (P1) to chair back (P2) using bolts (H1,H3), lock washers (H4) and flat washers (H5) as shown below.

(H1)x4	Bolts Ø5/16"x3-1/4"L	⊖
(H3)x1	Bolts Ø5/16"x1-3/4"L	⊖
(H4)x5	Lock Washers Ø5/16"	⊖
(H5)x5	Flat Washers Ø5/16"	⊖
(H6)x1	Allen Wrench Ø5/16"	⊖

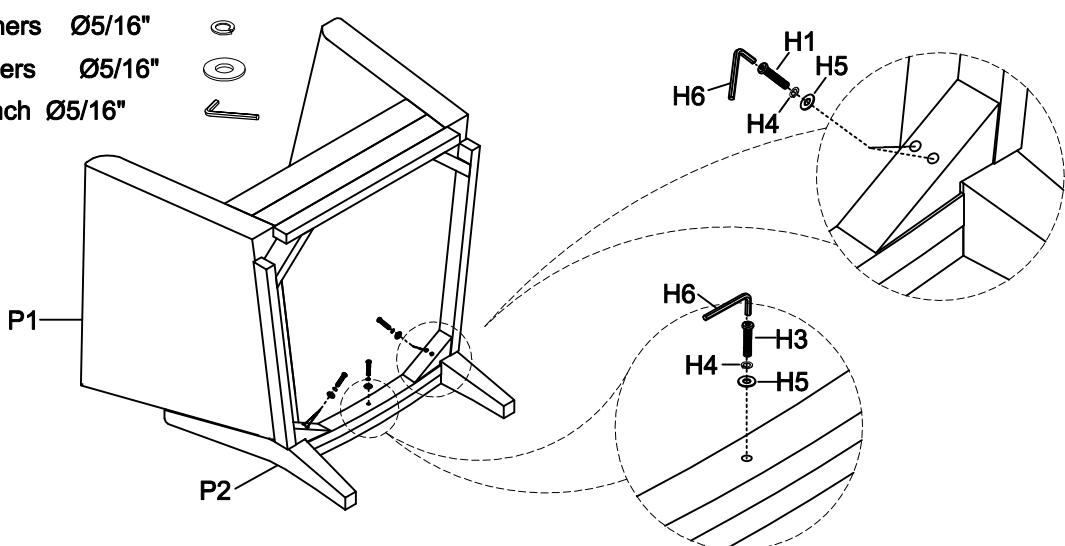


Step 2. Loosely attach the front legs (P3) to the chair top (P1) using bolts (H2), lock washers (H4) and flat washers (H5) as shown below.

(H2)x4 Bolts Ø5/16" x2-1/4" L 
(H4)x4 Lock Washers Ø5/16" 
(H5)x4 Flat Washers Ø5/16" 

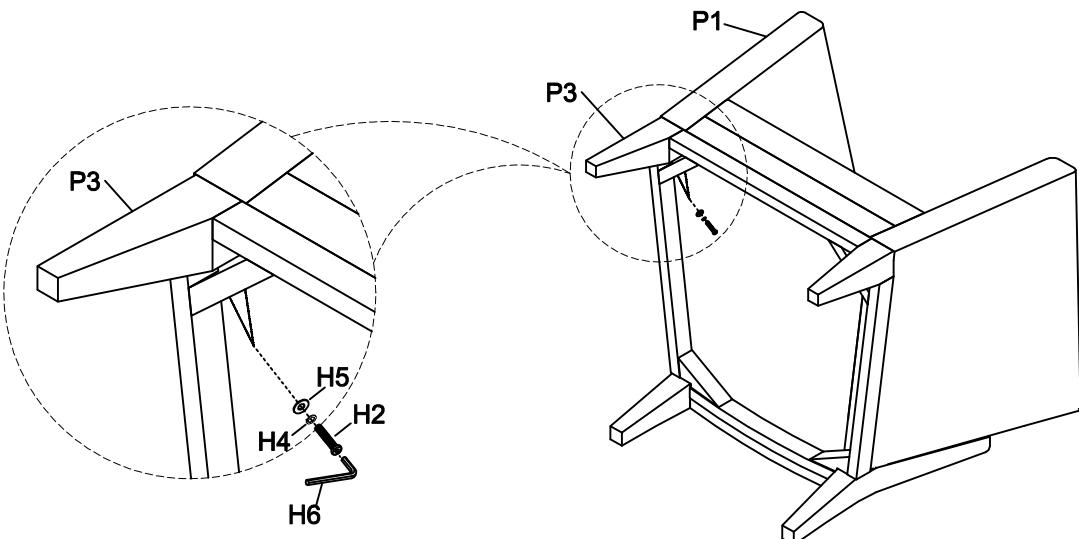

Step 3. Turn the assembled chair to an upright position. Make sure the chair is level and securely tighten all bolts with Allen wrench (H6). Assembly is complete. **Failure to follow these instructions may cause the bolts to misalign during assembly.**

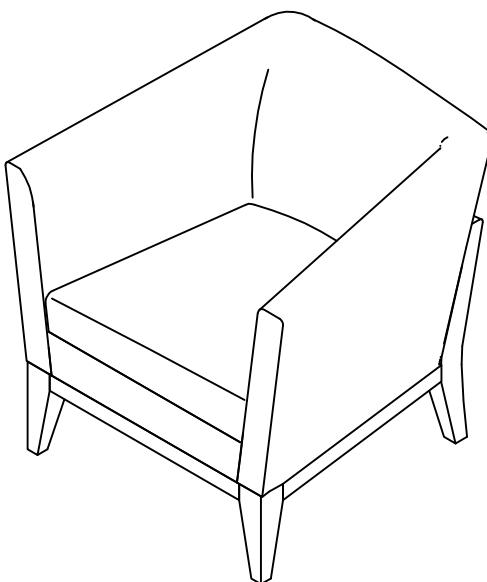

ADDITIONAL NOTE ABOUT SAFETY: BOLTS MAY LOOSEN DURING NORMAL EVERYDAY USE. THEY SHOULD BE PERIODICALLY INSPECTED AND RE-TIGHTENED TO PREVENT DAMAGE OR INJURY. ALWAYS CHECK TO BE SURE THAT ALL HARDWARE IS KEPT TIGHTENED.

Thank you for your purchase