

 


ASSEMBLY INSTRUCTIONS**Description:** Lexi Dining Chair**Important safety instructions:**

- Please carefully read all instructions before assembling.
- For your safety and ease, assembly by two or more adults is recommended.
- Keep instructions for future use.






Pre-assembly:


- Do not discard any contents until after assembly is complete to avoid accidentally discarding small parts or hardware.
- Remove all parts and hardware from box along with any plastic protective packaging.

Parts List

Item	Description		QTY
P1	Chair Back		1
P2	Seat Cushion		1
P3	Front Legs		2

Hardware List

Item	Description		QTY
H1	Short Bolt Ø5/16"*1-3/4"L		5
H2	Long Bolt Ø5/16"*2-1/2"L		4
H3	Lock Washer 5/16"		9
H4	Flat washer 5/16"		9
H5	Allen Wrench 5/16"		1

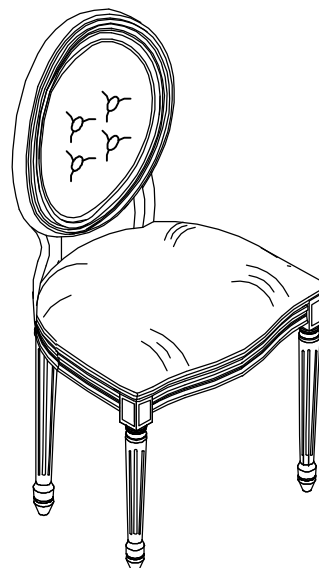

Assembly Procedures:


Step 1. Assemble the chair on a flat, soft surface such as a carpet or cloth to prevent scratching the finish. Attach seat cushion (P2) to chair back (P1) as shown below image 1.

(H1)x5 Short Bolts Ø5/16"x1-3/4"L

(H3)x5 Lock Washers 5/16"

(H4)x5 Flat washers 5/16"

(H5)x1 Allen Wrench 5/16"

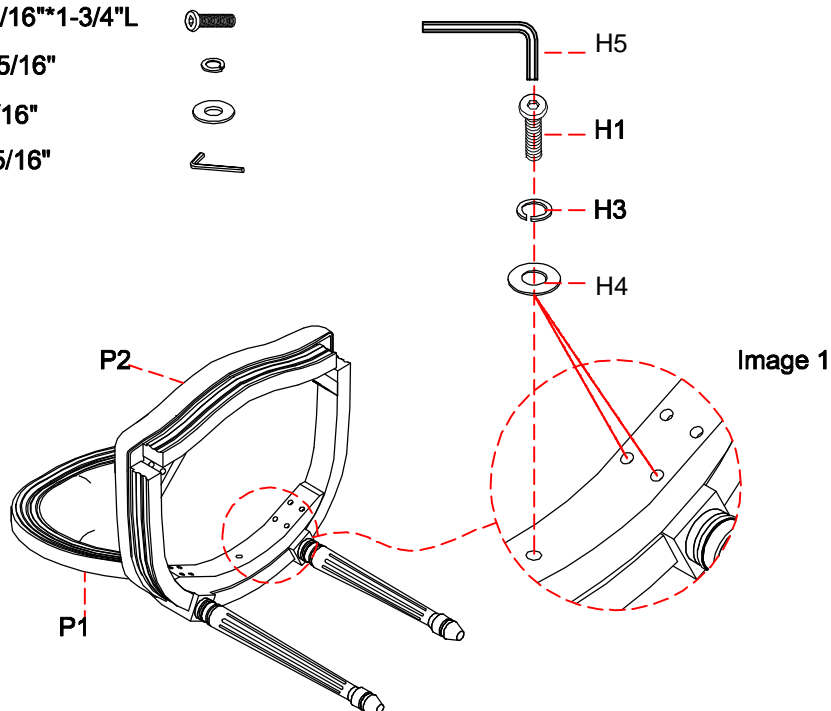

Step 2.

1) Attach the front legs(P3) to the seat cushion (P2) as shown below image 2.

2) Turn the assembled chair to an upright position. Make sure the assembled chair is level. Securely tighten the bolts.


3) Assembly is complete. **Failure to follow these instructions may cause the bolts to misalign during assembly.**

(H2)x4 Long Bolt Ø5/16"x2-1/2"L

(H3)x4 Lock Washers 5/16"

(H4)x4 Flat washers 5/16"

(H5)x1 Allen Wrench 5/16"

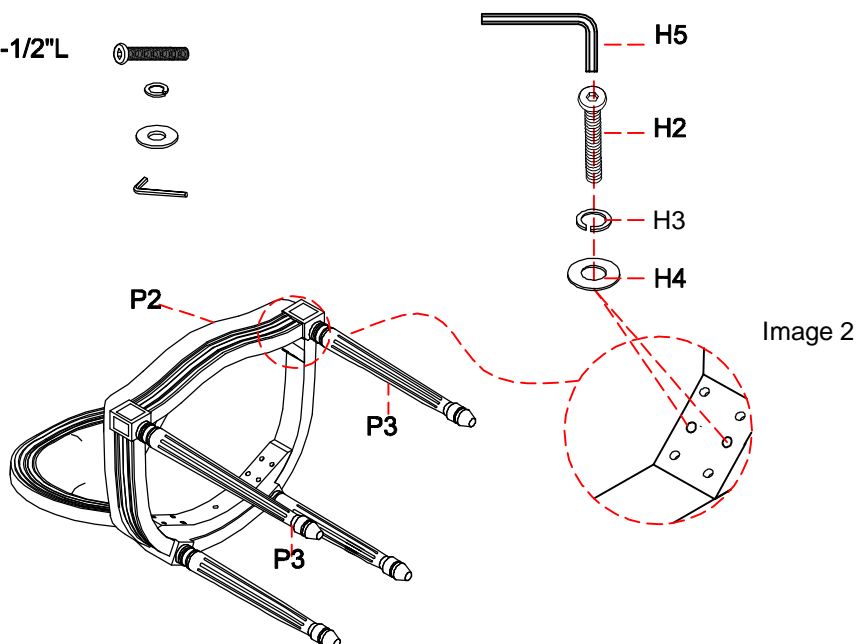

ADDITIONAL NOTE ABOUT SAFETY: BOLTS MAY LOOSEN DURING NORMAL EVERYDAY USE. THEY SHOULD BE PERIODICALLY INSPECTED AND RE-TIGHTENED TO PREVENT DAMAGE OR INJURY. ALWAYS CHECK TO BE SURE THAT ALL HARDWARE IS KEPT TIGHTENED.

Thank you for your purchase