

MADISONPARK

ASSEMBLY INSTRUCTIONS

Parker Dining Chair




Important safety instructions:

- Please read carefully all instructions before assembling.
- For your safety and ease, assembly by two or more adults is recommended.
- Keep instructions for future use.






Pre-assembly:


- Do not discard any contents until after assembly is complete to avoid accidentally discarding small parts or hardware.
- Remove all parts and hardware from box along with any protective packaging.

Parts List

Item	Description		QTY
P1	Chair Body		1
P2	Front Leg		2
P3	Back Leg		2


Hardware List

Item	Description		QTY
H1	Short Bolt Ø5/16"×1-3/4"L		4
H2	Long Bolt Ø5/16"×2-1/4"L		4
H3	Lock Washer 5/16"		8
H4	Flat Washer 5/16"		8
H5	Allen Wrench 5/16"		1

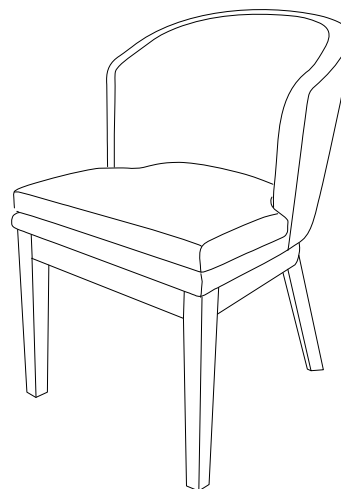


Assembly Procedures:

Step 1. Assemble the chair on a flat, soft surface such as a carpet or cloth to prevent scratching the finish. Attach the front legs (P2) and back legs (P3) to the chair body (P1) as shown below image 1.

- (H1)x4 Short Bolt Ø5/16"×1-3/4"L 
- (H2)x4 Long Bolt Ø5/16"×2-1/4"L 
- (H3)x8 Lock Washer Ø5/16 
- (H4)x8 Flat Washer Ø5/16 
- (H5)x1 Allen Wrench Ø5/16 

Step 2. Turn the assembled chair to an upright position. Make sure the chair is levelled and aligned properly, assembly is complete. **Failure to follow these instructions may cause the bolts to misalign during assembly.**

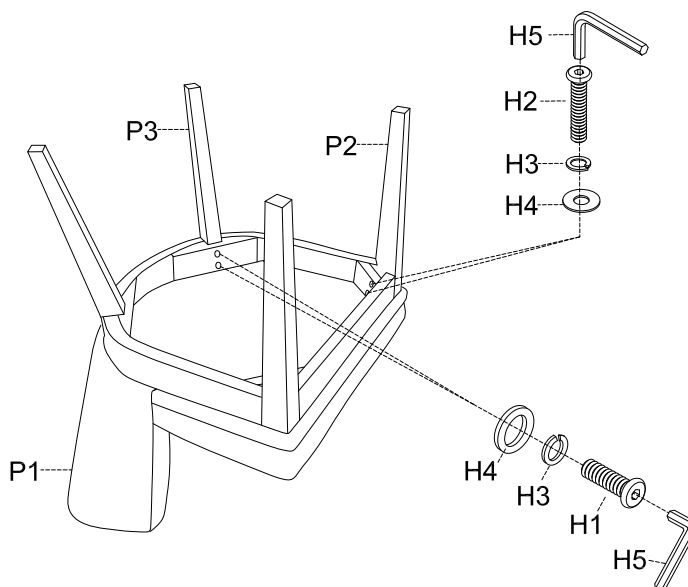

ADDITIONAL NOTE ABOUT SAFETY: BOLTS MAY LOOSEN DURING NORMAL EVERYDAY USE. THEY SHOULD BE PERIODICALLY INSPECTED AND RE-TIGHTENED TO PREVENT DAMAGE OR INJURY. ALWAYS CHECK TO ENSURE THAT ALL HARDWARE IS KEPT TIGHTENED.

Thank you for your purchase