

MADISONPARK®

ASSEMBLY INSTRUCTIONS

Description: Carson Dining Chair

Important safety instructions:

- Please carefully read all instructions before assembling.
- For your safety and ease, assembly by two or more adults is recommended.
- Keep instructions for future use.

Pre-assembly:

- Do not discard any contents until after assembly is complete to avoid accidentally discarding small parts or hardware.
- Remove all parts and hardware from box along with any plastic protective packaging.

Parts List

Item	Description		QTY
P1	Chair Top		1
P2	Left Front Leg	 (P2)	1
P3	Right Front Leg	 (P3)	1
P4	Back Legs		2


Hardware List

Item	Description		QTY
H1	Bolts	Ø5/16"*2"L 	8
H2	Lock Washers	5/16" 	8
H3	Flat Washers	5/16" 	8
H4	Allen Wrench	5/16" 	1

Assembly Procedures:

- Step 1. Assemble the chair on a flat, soft surface such as a carpet or cloth to prevent scratching the finish.
- 1) Attach left front leg (P2) and right front leg (P3) and back legs (P4) to chair top (P1) following the labels "P2", "P3" on front legs as shown below.
 - 2) Make sure the chair is level and securely tighten all bolts with Allen wrench (H4).
 - 3) Assembly is complete. **Failure to follow these instructions may cause the bolts to misalign during assembly.**

- (H1)x8 Bolts Ø5/16"*2" L 
- (H2)x8 Lock Washers 
- (H3)x8 Flat Washers 
- (H4)x1 Allen Wrench 

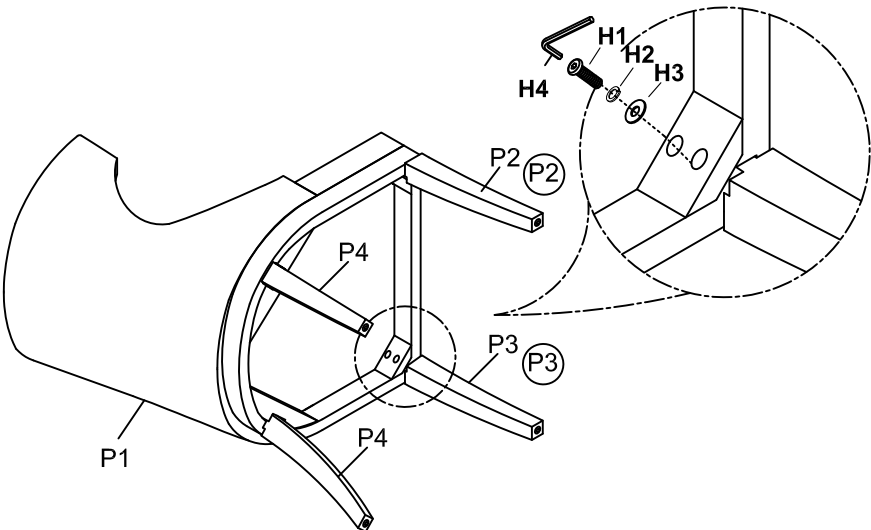

ADDITIONAL NOTE ABOUT SAFETY: BOLTS MAY LOOSEN DURING NORMAL EVERYDAY USE. THEY SHOULD BE PERIODICALLY INSPECTED AND RE-TIGHTENED TO PREVENT DAMAGE OR INJURY. ALWAYS CHECK TO BE SURE THAT ALL HARDWARE IS KEPT TIGHTENED.

Thank you for your purchase