

Paris Accent End Table

Important safety instructions:

- Please read carefully all instructions before assembling.
- For your safety and ease, assembly by two or more adults is recommended.
- Keep instructions for future use.

Pre-assembly:


- Do not discard any content until assembly completed to avoid accidentally discarding small parts or hardware.
- Take out all parts and hardwares from box.

Parts List

Item	Description	QTY
P1	Table Top	1
P2	Leg Frame 1	1
P3	Leg Frame 2	1

Hardware List

Item	Description	QTY
H1	Bolt Ø5/16"x3"L	1
H2	Lock Washer 5/16"	1
H3	Flat Washer 5/16"	1
H4	Allen Wrench 5/16"	1

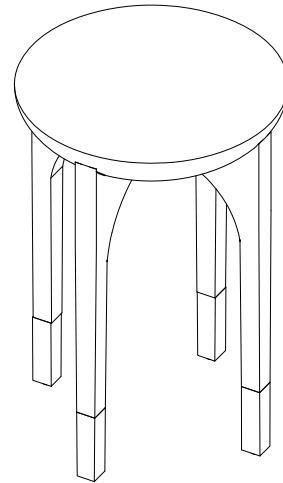

Assembly Procedures:

Step 1. Assemble the table on a flat, soft surface such as a carpet or cloth to prevent scratching the finish. Attach the leg frames (P2 & P3) to the bottom of table top (P1) as shown below image 1.

- (H1)x1 Bolt Ø5/16"x3"L
 (H2)x1 Lock Washer 5/16"
 (H3)x1 Flat Washer 5/16"
 (H4)x1 Allen Wrench 5/16"



 


Image 1

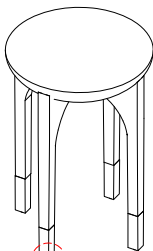

Note: The feet can be adjusted with adjustable levelers.

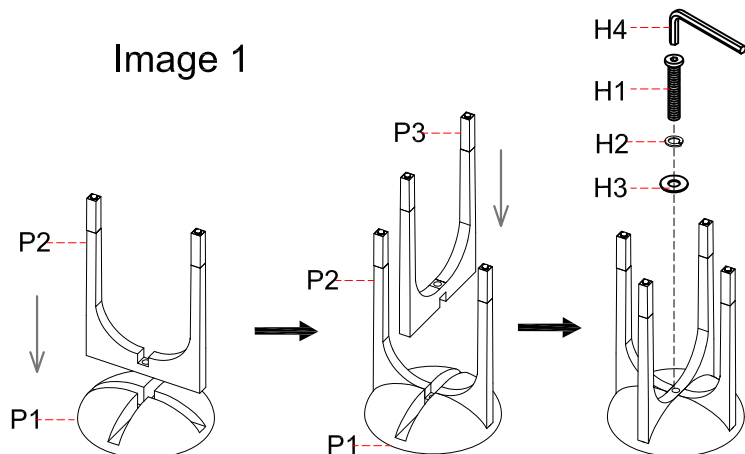

Step 2. Securely tighten the bolt with Allen wrench(H4), make sure the table is leveled and aligned properly. Turn the assembled table to an upright position. Assembly is complete. **Failure to follow these instructions may cause the bolts to misalign during assembly.**

ADDITIONAL NOTE ABOUT SAFETY: BOLTS MAY LOOSEN DURING NORMAL EVERYDAY USE. THEY SHOULD BE PERIODICALLY INSPECTED AND RE-TIGHTENED TO PREVENT DAMAGE OR INJURY. ALWAYS CHECK TO ENSURE THAT ALL HARDWARE IS KEPT TIGHTENED.

Thank you for your purchase