

Important safety instructions:


- Please carefully read all instructions before assembling the chest.
- For your safety and ease, assembly by two or more adults is recommended.
- Keep instructions for future use.

Pre-assembly:

- Do not discard any contents until after assembly is complete to avoid accidentally discarding small parts or hardware.
- Remove all parts and hardware from box along with any plastic protective packaging.

Parts List

Item	Description	QTY
1.	Chest	
2.	Feet	

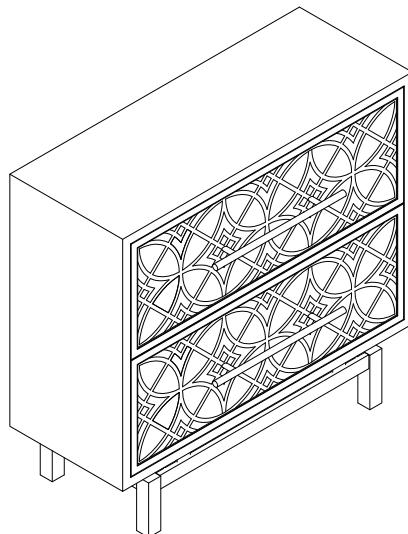
**Hardware List**

Item	Description	QTY
a	Bolts Ø1/4"x3/4"	
b	Lock Washers 1/4"	
c	Flat Washers 1/4"	
d	Allen Wrench 1/4"	

Assembly Procedures:


Step 1. Assemble the chest on a flat, soft surface such as a carpet or cloth to prevent scratching the finish. Attach each foot (2) to the bottom of chest (1) as shown below. Securely tighten all bolts with Allen wrench (d).

(a)x4	Bolts	
(b)x4	Lock Washers	
(c)x4	Flat Washers	
(d)x1	Allen Wrench	

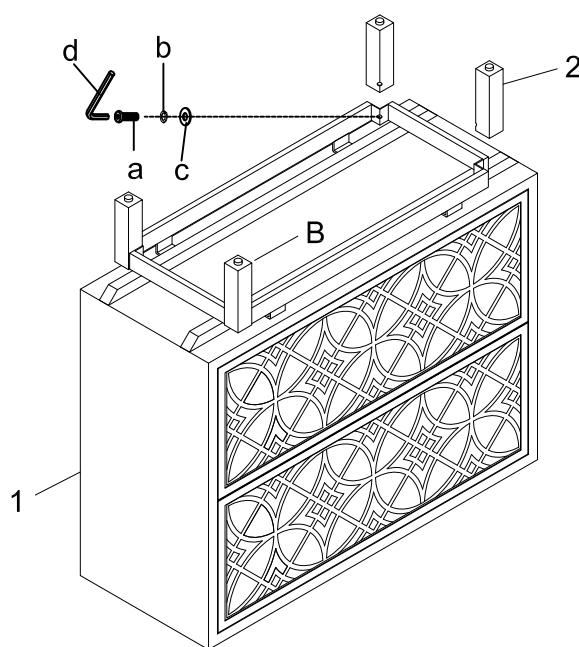

Step 2.

- 1) Turn the assembled chest to an upright position.
- 2) Remove the handles from the back of drawer front panel by unscrewing the bolts with screw driver (not provided).
- 3) Reattach the handles to the front of drawer front panel using bolts as shown below. Securely tighten all bolts with screw driver (not provided).
- 4) Leveler adjustment: Leveler are pre-installed on the legs and adjust as needed to make sure the chest is level.
- 5) Assembly is complete. Failure to follow these instructions may cause the bolts to misalign during assembly.

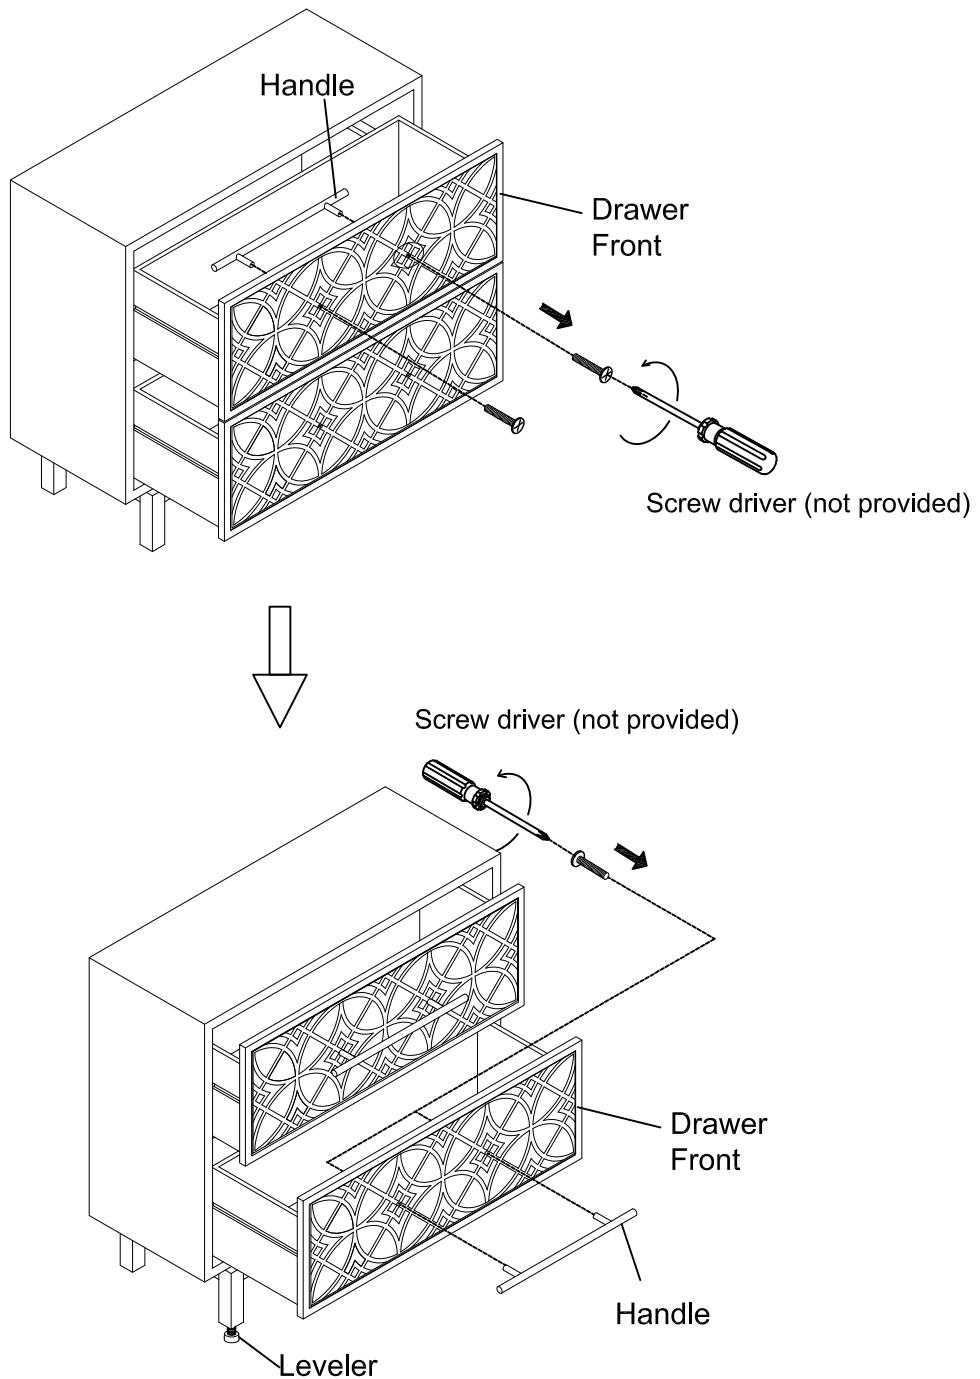

ADDITIONAL NOTE ABOUT SAFETY: BOLTS MAY LOOSEN DURING NORMAL EVERYDAY USE. THEY SHOULD BE PERIODICALLY INSPECTED AND RE-TIGHTENED TO PREVENT DAMAGE OR INJURY. ALWAYS CHECK TO BE SURE THAT ALL HARDWARE IS KEPT TIGHTENED.

Thank you for your purchase