

Important safety instructions:

- Please carefully read all instructions before assembling the chest.
- For your safety and ease, assembly by two or more adults is recommended.
- Keep instructions for future use.

Pre-assembly:


- Do not discard any contents until after assembly is complete to avoid accidentally discarding small parts or hardware.
- Remove all parts and hardware from box along with any plastic protective packaging.

Parts List

Item	Description		QTY
1.	Chest		1
2.	Feet		4

Hardware List


Item	Description		QTY
a	Bolts Ø1/4"x3/4"		4
b	Lock Washers 1/4"		4
c	Flat Washers 1/4"		4
d	Allen Wrench 1/4"		1

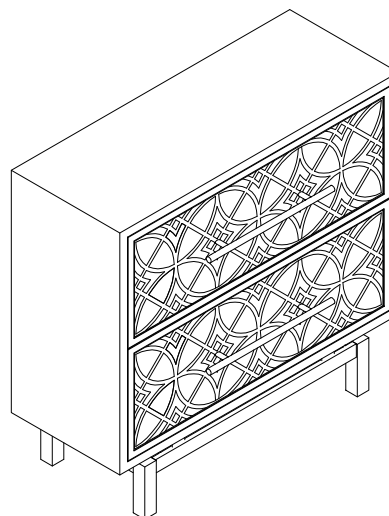

Assembly Procedures:


Step 1. Assemble the chest on a flat, soft surface such as a carpet or cloth to prevent scratching the finish. Attach each foot (2) to the bottom of chest (1) as shown below. Securely tighten all bolts with Allen wrench (d).

- (a)x4 Bolts 
- (b)x4 Lock Washers 
- (c)x4 Flat Washers 
- (d)x1 Allen Wrench 

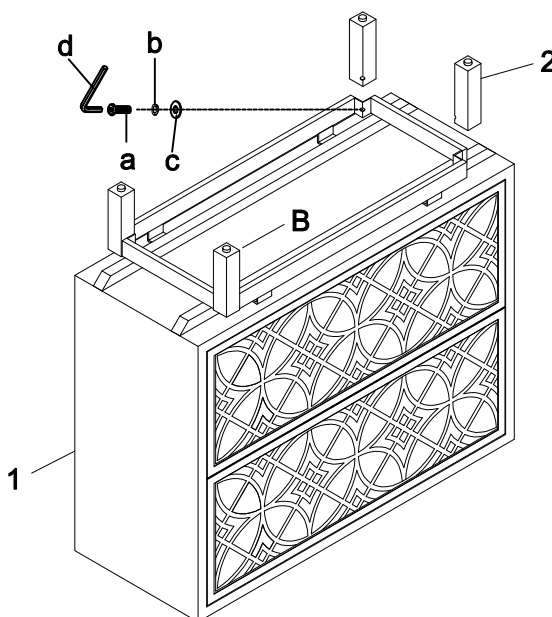

Step 2.

- 1) Turn the assembled chest to an upright position.
- 2) Remove the handles from the back of drawer front panel by unscrewing the bolts with screw driver (not provided).
- 3) Reattach the handles to the front of drawer front panel using bolts as shown below. Securely tighten all bolts with Allen wrench (d).
- 4) Leveler adjustment: Levelers are pre-installed on the legs and adjust as needed to make sure the chest is level.
- 5) Assembly is complete. Failure to follow these instructions may cause the bolts to misalign during assembly.

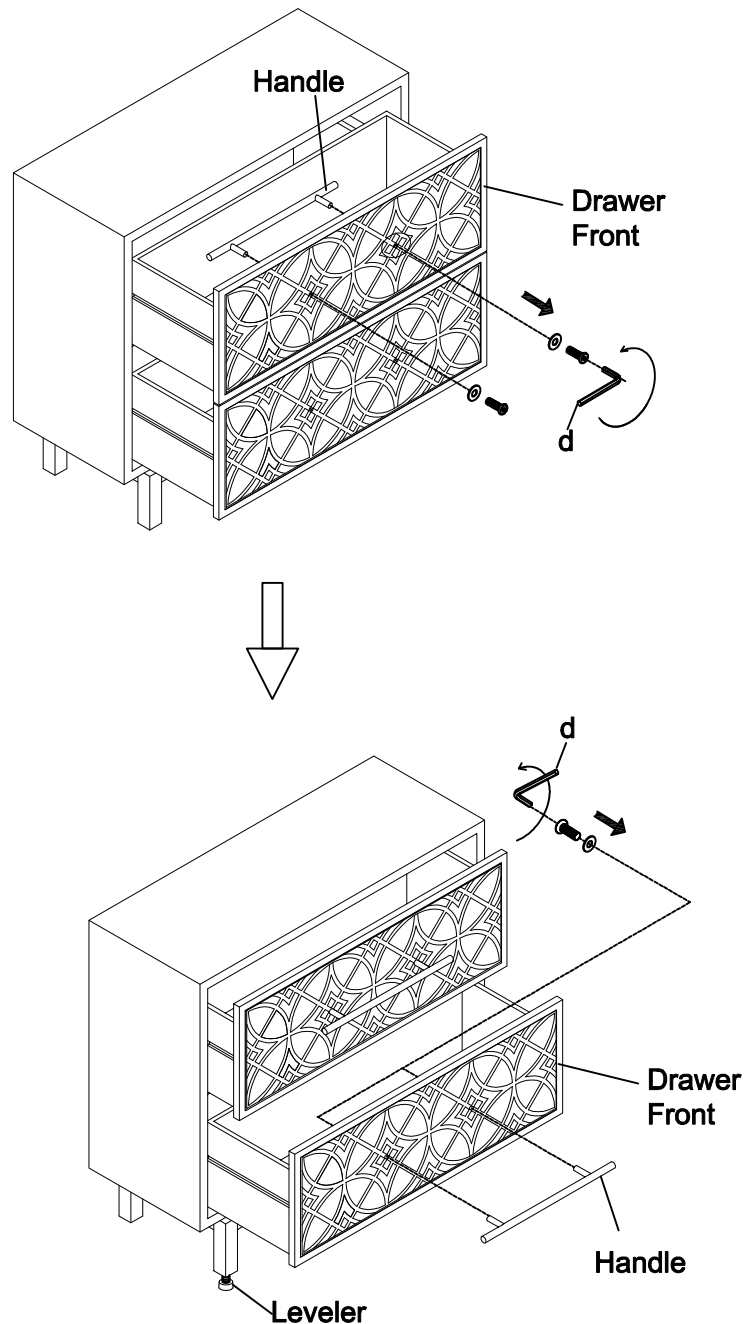

ADDITIONAL NOTE ABOUT SAFETY: BOLTS MAY LOOSEN DURING NORMAL EVERYDAY USE. THEY SHOULD BE PERIODICALLY INSPECTED AND RE-TIGHTENED TO PREVENT DAMAGE OR INJURY. ALWAYS CHECK TO BE SURE THAT ALL HARDWARE IS KEPT TIGHTENED.

Thank you for your purchase