

Important safety instructions:

- Please carefully read all instructions before assembling the chest.
- For your safety and ease, assembly by two or more adults is recommended.
- Keep instructions for future use.

Pre-assembly:


- Do not discard any contents until after assembly is complete to avoid accidentally discarding small parts or hardware.
- Remove all parts and hardware from box along with any plastic protective packaging.

Parts List

Item	Description	QTY
P1	Chest	1
P2	Feet	4



Hardware List

Item	Description	QTY
H1	Bolts Ø1/4"x1-1/2"	8
H2	Lock Washers 1/4"	8
H3	Flat Washers 1/4"	8
H4	Allen Wrench 1/4"	1

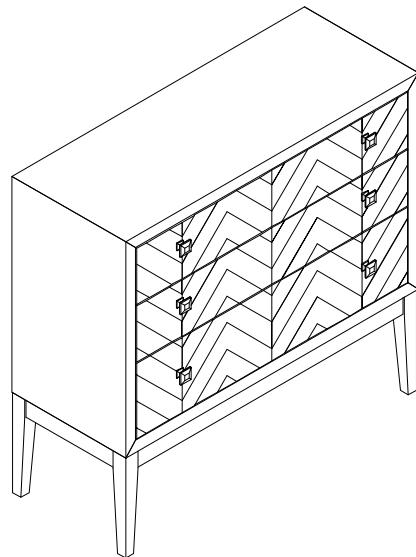**Assembly Procedures:**


Step 1. Assemble the chest on a flat, soft surface such as a carpet or cloth to prevent scratching the finish. Attach feet (P2) to the bottom of chest (P1) as shown below. Securely tighten all bolts with Allen wrench (H4).

(H1)x8	Bolts	Ø
(H2)x8	Lock Washers	◎
(H3)x8	Flat Washers	○
(H4)x1	Allen Wrench	ℓ

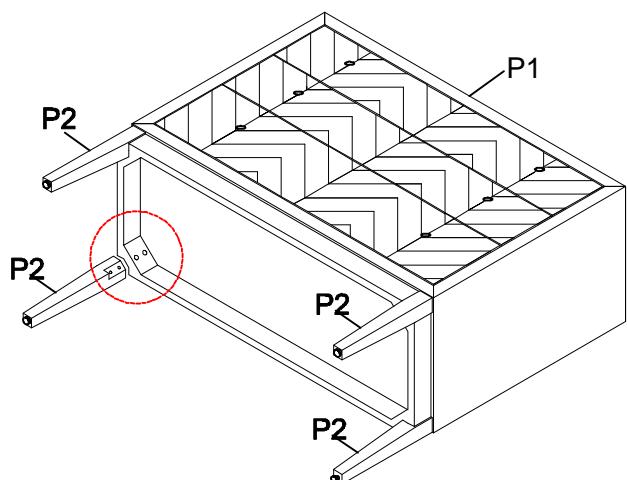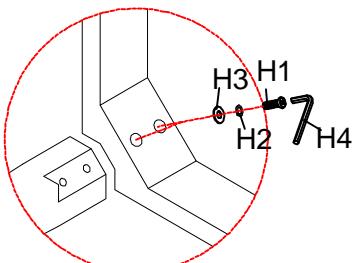

Step 2.

- 1) Turn the assembled chest to an upright position.
- 2) Remove the knobs from the back of drawer front panel by unscrewing the bolts with screw driver (not provided).
- 3) Reattach the knobs to the front of drawer front panel using bolts as shown below.
- 4) Leveler adjustment: Leveler are installed on the legs and adjust as needed to make sure the chest is level.
- 5) Assembly is complete. **Failure to follow these instructions may cause the bolts to misalign during assembly.**

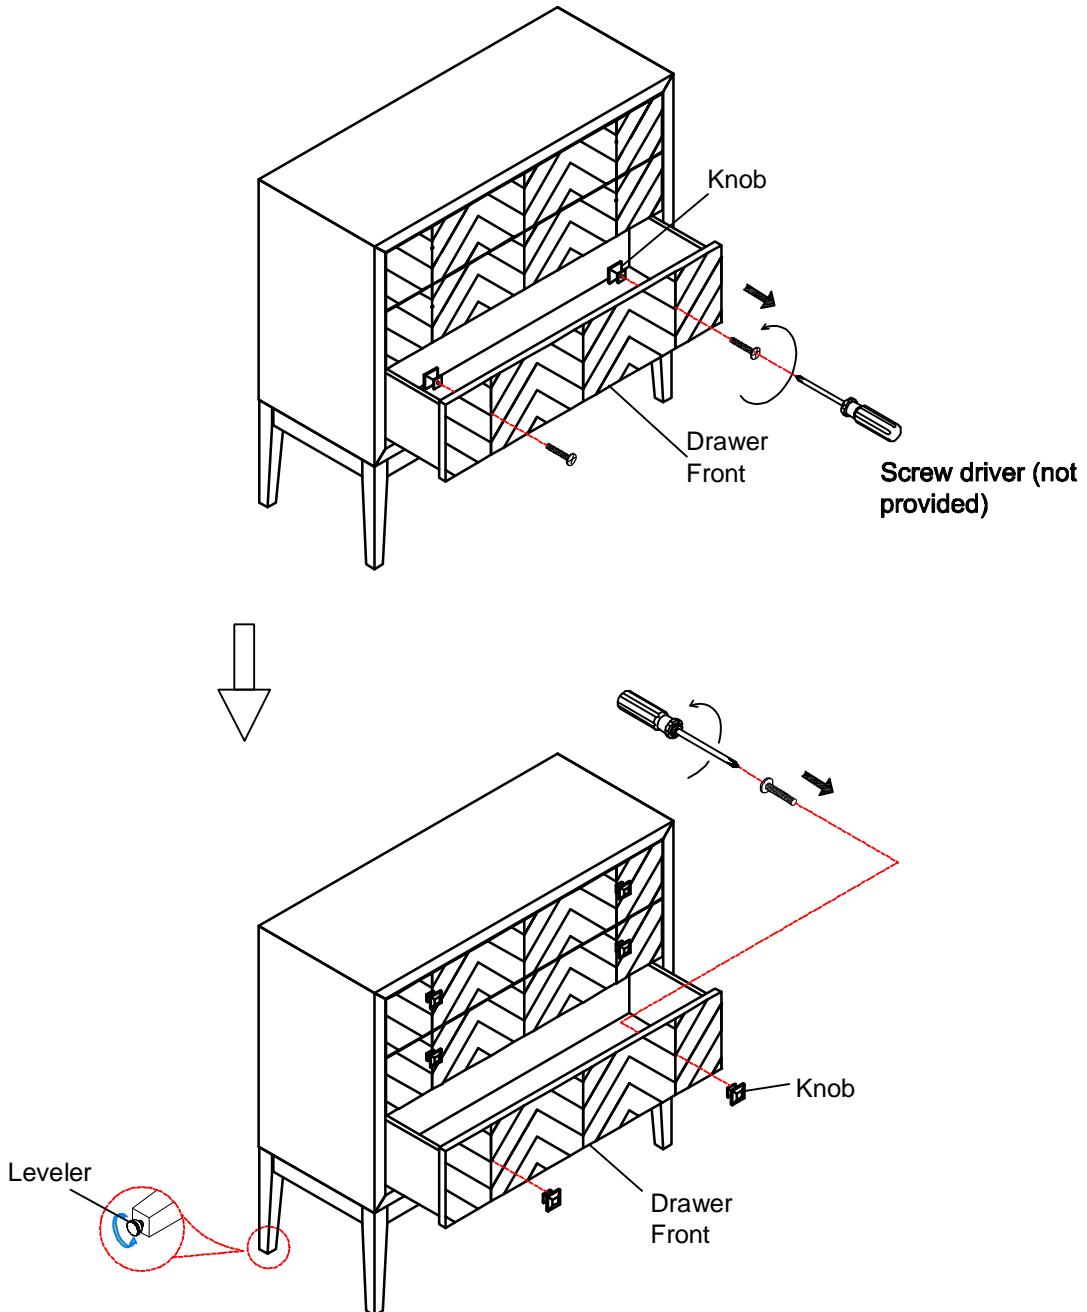

ADDITIONAL NOTE ABOUT SAFETY: BOLTS MAY LOOSEN DURING NORMAL EVERYDAY USE. THEY SHOULD BE PERIODICALLY INSPECTED AND RE-TIGHTENED TO PREVENT DAMAGE OR INJURY. ALWAYS CHECK TO BE SURE THAT ALL HARDWARE IS KEPT TIGHTENED.

Thank you for your purchase