

ASSEMBLY INSTRUCTIONS

Description: Camelle Accent Chair

Important safety instructions:


- Please carefully read all instructions before assembling the chair.
- For your safety and ease, assembly by two or more adults is recommended.
- Keep instructions for future use.

Pre-assembly:

- Do not discard any contents until after assembly is complete to avoid accidentally discarding small parts or hardware.
- Remove all parts and hardware from box along with any plastic protective packaging.

Parts List

Item	Description	QTY
P1	Chair top	1
P2	Front Legs	2
P3	Right Back leg	1
P4	Left Back leg	1

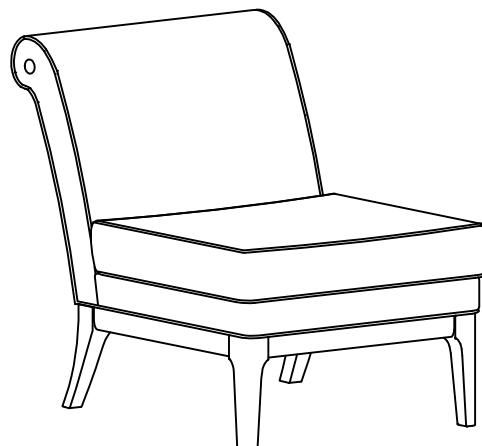

Hardware List

Item	Description	QTY
H1	Long Bolts Ø1/4" *2-1/4"	8
H2	Lock Washers 1/4"	8
H3	Flat Washers 1/4"	8
H4	Allen Wrench 1/4"	1

Assembly Procedures:

Step 1. Assemble the chair on a flat, soft surface such as a carpet or cloth to prevent scratching the finish.

(1) Attach front leg (P2) to bottom of chair top (P1) and back right/left legs (P3, P4) to bottom of chair top (P1) according to the label "Left" & "Right" on the right back leg (P3), left back leg (P4) and the bottom corner block of chair top (P1), using bolts (H1), lock washer(H2) and flat washer(H3) as shown below. **Note: do not tighten them fully during assembly.**

(2) Turn the assembled chair to an upright position. Make sure the chair is level and then securely tighten all bolts completely with Allen wrench (H4). Assembly is complete.

(H1)x8 Long Bolts Ø1/4"




(H2)x8 Lock Washers 1/4"



(H3)x8 Flat Washers 1/4"



(H4)x1 Allen Wrench 1/4"

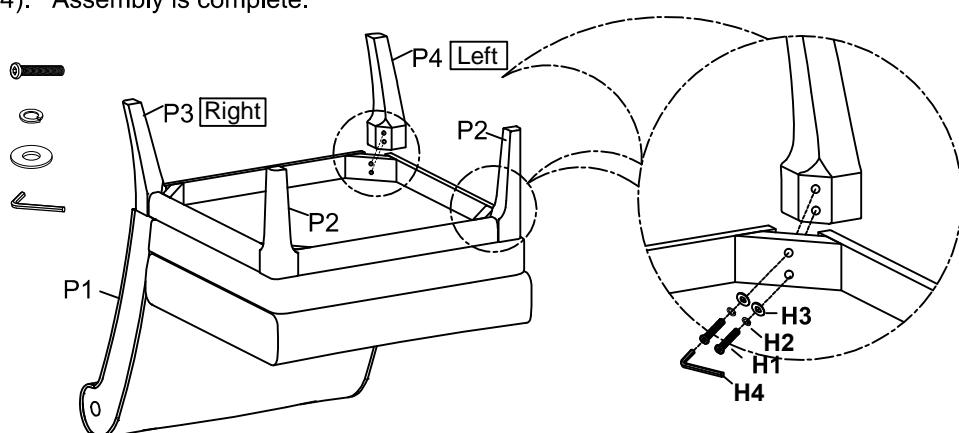

Caution: Failure to follow these instructions may cause the bolts to misalign during assembly.

ADDITIONAL NOTE ABOUT SAFETY: BOLTS MAY LOOSEN DURING NORMAL EVERYDAY USE. THEY SHOULD BE PERIODICALLY INSPECTED AND RE-TIGHTENED TO PREVENT DAMAGE OR INJURY. ALWAYS CHECK TO BE SURE THAT ALL HARDWARE IS KEPT TIGHTENED.

Thank you for your purchase