

Important safety instructions:

- Please **read** carefully all instructions before assembling the dining chair .
- For your safety and ease, assembly by two or more adults is recommended.
- Keep instructions for future use.

Pre-assembly:

- **Do not discard any content until assembly completed to avoid accidentally discarding small parts or hardware.**
- **Take out all parts and hardwares from box.**


Parts List

Item	Description	QTY
P1	FRONT LEGS	2
P2	BACK LEGS	2
P3	CHAIR	1


Hardware List

Item	Description	QTY
H1	Bolts $\varphi 5/16 \times 2-3/8"$	8
H2	Lock Washers $\varphi 5/16"$	8
H3	Flat Washers $\varphi 5/16"$	8
H4	Allen Wrench $\varphi 1/4"$	1


Step 1. Take out the legs fixed on the back.

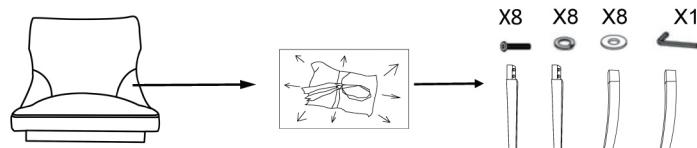

Step 2. Using bolts (H1), lock washers (H2), flat washers (H3), connect legs(P1,P2) to chair (P3). Tighten bolts (H1) with Allen Wrench (H4).

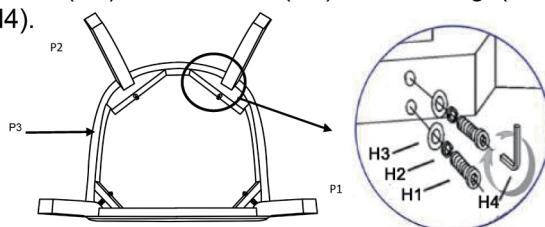

Step 3. Level the chair upright on a level surface .Assemble is complete.

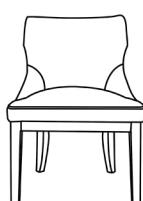

ADDITIONAL NOTE ABOUT SAFETY: BOLTS MAY LOOSEN DURING NORMAL EVERYDAY USE. THEY SHOULD BE PERIODICALLY INSPECTED AND RE-TIGHTENED TO PREVENT DAMAGE OR INJURY. ALWAYS CHECK TO **ENSURE THAT ALL HARDWARE IS KEPT TIGHTENED.**

Thank you for your purchase