



ASSEMBLY INSTRUCTIONS

Description: Decker Accent Chair

Important safety instructions:

- Please read carefully all instructions before assembling.
- For your safety and ease, assembly by two or more adults is recommended.
- Keep instructions for future use.

Pre-assembly:

- Do not discard any content until assembly is completed to avoid accidentally discarding small parts or hardware.
- Remove all parts and hardware from box along with any protective packaging.

Parts List

Item	Description	DRAWING	QTY
P1	Front Legs		2
P2	Right Back Leg		1
P3	Left Back Leg		1
P4	Chair		1
P5	Seat Cushion		1

Hardware List


Item	Description	DRAWING	QTY
H1	Plastic Washers		2
H2	Flat Washers $\varphi 5/16"$		6
H3	Lock Washers $\varphi 5/16"$		6
H4	Bolts $\varphi 5/16" \times 1"$		6
H5	Allen Wrench $\varphi 5/16"$		1

DISCLAIMER:


WHEN PROPERLY ASSEMBLED, THIS ITEM IS SAFE FOR INTENDED USE. SELLER IS NOT LIABLE FOR ANY DAMAGES RESULTING FROM ITEM BEING IMPROPERLY ASSEMBLED AFTER PURCHASE.

Assembly Procedures:


Step 1. Take out the legs and hardware underneath the seat cushion.

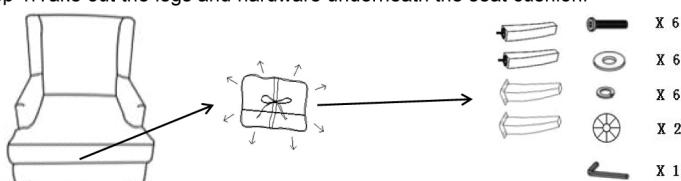

Step 2. Place plastic washer (H1) on front leg (P1) and attach to chair base (P4) by screwing clockwise into corresponding holes. Attach right back leg (P2) and left back leg (P3) with bolt (H4), lock washer (H3), flat washer (H2) to seat frame (P4). Tighten the bolts (H4) with allen wrench (H5).

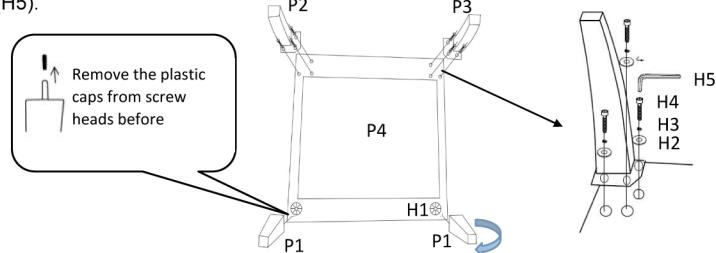

Step 3. Place the chair upright on a level surface. Put seat cushion (P5) on the chair. Assembly is complete.

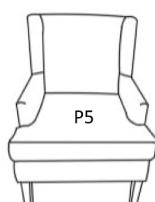

ADDITIONAL NOTE ABOUT SAFETY:

BOLTS MAY LOOSEN DURING NORMAL EVERYDAY USE.

THEY SHOULD BE INSPECTED AT LEAST EVERY 3 MONTHS AND RE-TIGHTENED AS NEEDED TO PREVENT DAMAGE OR INJURY, AND ENSURE STABILITY.

Thank you for your purchase