




Assembly Instruction--Accent Chair


PARTS #	PARTS NAME	DRAWING	QTY
P1	FRONT LEGS		2
P2	RIGHT BACK LEGS		1
P3	LEFT BACK LEGS		1
P4	CHAIR		1

Hardware#	PARTS NAME	DRAWING	QTY
H1	Bolts $\phi 5/16 \times 1"$		12
H2	Lock Washers $\phi 5/16"$		12
H3	Flat Washers $\phi 5/16"$		12
H4	Allen Wrench $\phi 1/4"$		1


1. Turn the chair(P4) upside down and lay on protective carpet ,Open the zipper pocjet on the bottom, and take out the legs and hardwares .

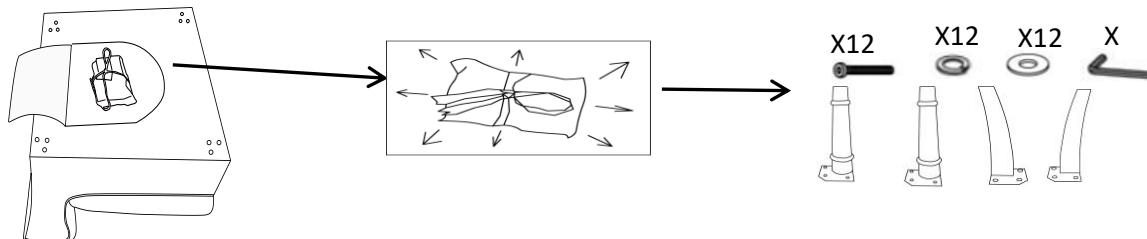

2. Attached the legs(P1,P2,P3) to the seat frame by using flat washers (H3), lock washers(H2) and bolts (H1). Securely tighten all bolts with allen wrench (H4). Close the zipper pocket.

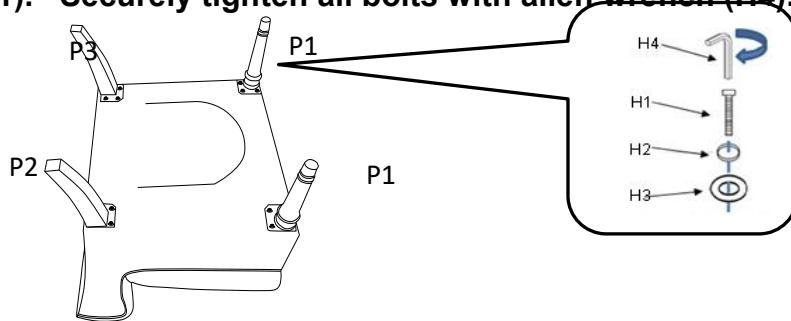

3. Place the chair upright on a level surface. Assemble is complete.

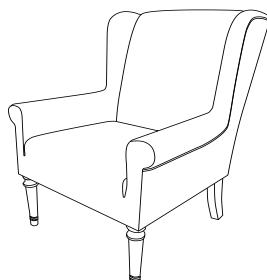

ADDITIONAL NOTE ABOUT SAFETY:BOLTS MAY LOOSEN NORMAL EVERYDAY USE.THEY SHOULD BE PERIODICALLY INSPECTED AND RE-TIGHTENED TO PREVENT DAMAGE INJURY.ALWAYS CHECK TO BE SURE THAT ALL HARDWARE IS KEPT TIGHTENED.