



ASSEMBLY INSTRUCTIONS

Description: Felicia Accent Chair

Important safety instructions:

- Please carefully read all instructions before assembling.
- For your safety and ease, assembly by two or more adults is recommended.
- Keep instructions for future use.

Pre-assembly:


- Do not discard any contents until after assembly is complete to avoid accidentally discarding small parts or hardware.
- Remove all parts and hardware from box along with any plastic protective packaging.

Parts List

Item	Description	QTY
P1	Chair Top	1
P2	Front Legs	2
P3	Back Right Leg	1
P4	Back Left Leg	1

Hardware List

Item	Description	QTY
H1	Short Bolts Ø5/16"**2"	4
H2	Long Bolts Ø5/16"**2-1/4"	4
H3	Lock Washers 5/16"	8
H4	Flat Washers 5/16"	8
H5	Allen Wrench 5/16"	1

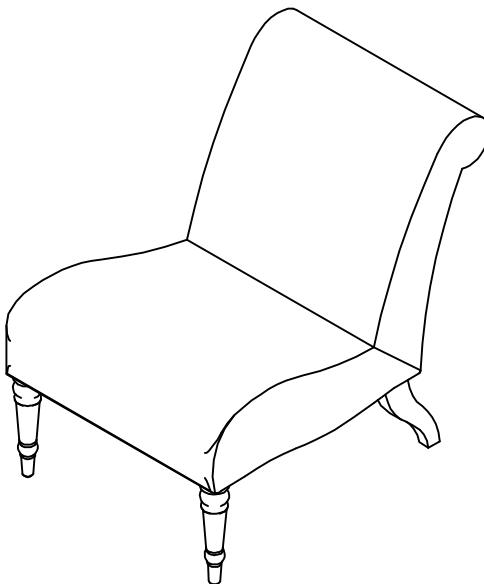


Assembly Procedures:

Step 1. Assembly the chair on a flat, soft surface such as a carpet or cloth to prevent scratching the finish.

1) Open the fabric cover at the bottom of the chair top (P1).

2) Loosely attach the front legs (P2) to the chair top (P1) using long bolt (H2), lock washer (H3), flat washer (H4) and loosely attach the back legs (P3 & P4) to the chair top (P1) using short bolt (H1), lock washer (H3), flat washer (H4) as shown below.

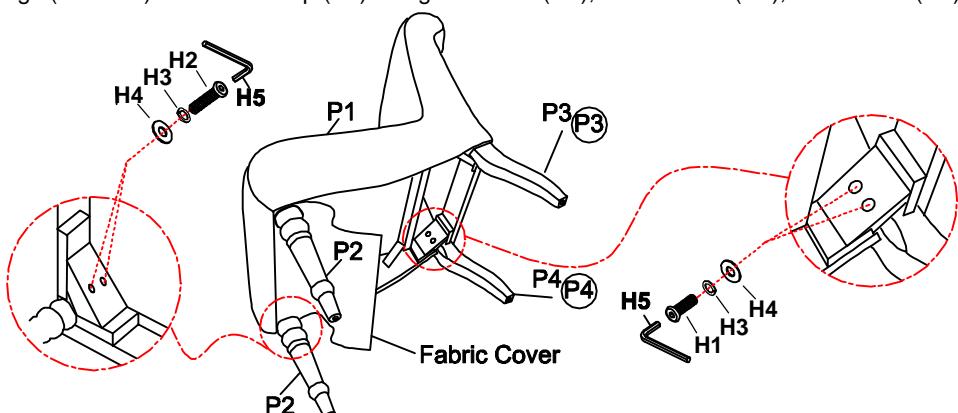

3) Turn the assembled chair to an upright position. Make sure the chair is level and securely tighten all bolts with Allen wrench (H5). Close the fabric cover at the bottom of chair top (P1).

4) Assembly is complete. **Failure to follow these instructions may cause the bolts to misalign during assembly.**

ADDITIONAL NOTE ABOUT SAFETY: BOLTS MAY LOOSEN DURING NORMAL EVERYDAY USE. THEY SHOULD BE PERIODICALLY INSPECTED AND RE-TIGHTENED TO PREVENT DAMAGE OR INJURY. ALWAYS CHECK TO BE SURE THAT ALL HARDWARE IS KEPT TIGHTENED.

Thank you for your purchase