

ASSEMBLY INSTRUCTIONS

Description: Angelina Accent Chair

Important safety instructions:


- Please carefully read all instructions before assembling.
- For your safety and ease, assembly by two or more adults is recommended.
- Keep instructions for future use.

Pre-assembly:

- Do not discard any contents until after assembly is complete to avoid accidentally discarding small parts or hardware.
- Remove all parts and hardware from box along with any plastic protective packaging.

Parts List

Item	Description	QTY
P1	Back Cushion	1
P2	Seat Cushion	1
P3	Left Arm Frame	1
P4	Right Arm Frame	1
P5	Front Rail	1

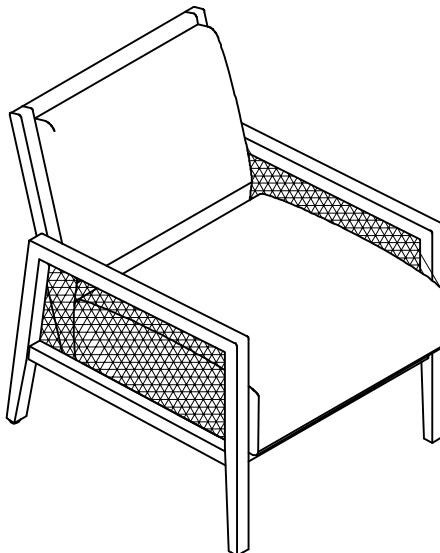

Hardware List


Item	Description	QTY
H1	Bolts Ø5/16" * 1-1/4" L	6
H2	Lock Washers Ø5/16"	6
H3	Flat Washers Ø5/16" * 12mm	6
H4	Allen Wrench 5/16"	1
H5	Screws #8*1-1/2"	5
H6	Wooden Plugs	6
H7	Screw Driver	Not included

Assembly Procedures:

Step 1. Assemble the chair on a flat, soft surface such as a carpet or cloth to prevent scratching the finish.

Attach left arm frame (P3) to the back cushion (P1) and front rail (P5) using bolts (H1), lock washers (H2) and flat washers (H3) as shown below.

(H1)x3	Bolts	
(H2)x3	Lock Washers	
(H3)x3	Flat Washers	
(H4)x1	Allen Wrench	

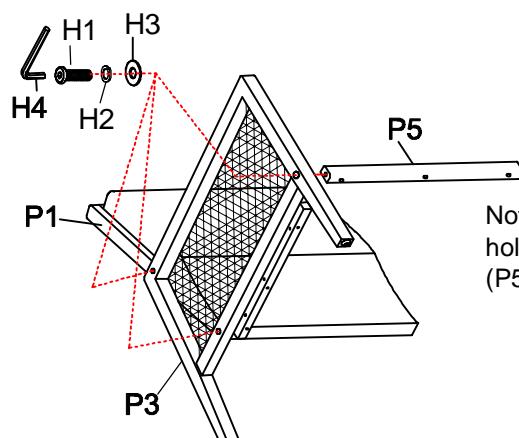


Note: make sure the holes on the front rail (P5) face the floor.

Step 2. Attach right arm frame (P4) to the back cushion (P1) and front rail (P5) using bolts (H1), lock washers (H2) and flat washers (H3) as shown below.

(H1)x3 **Bolts** 


(H2)x3 **Lock Washers** 

(H3)x3 **Flat Washers** 

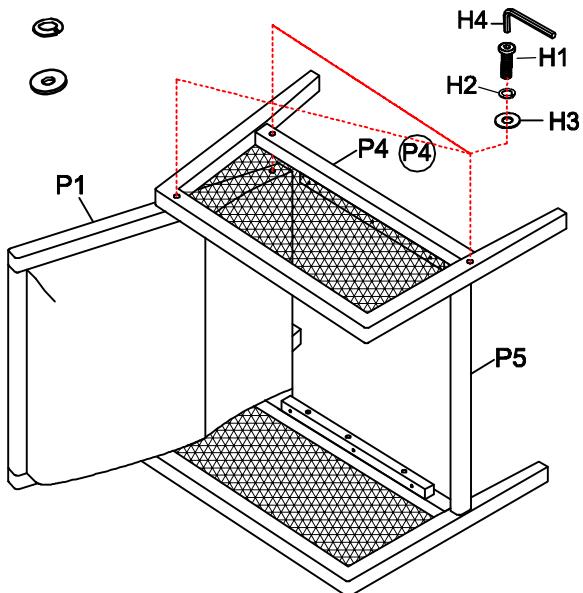

Step 3. Tighten all screws (H5) through the left arm frame (P3), right arm frame (P4) and front rail (P5) to the seat cushion (P2) with screw driver (not provided).


(H5)x5 **Screws** 

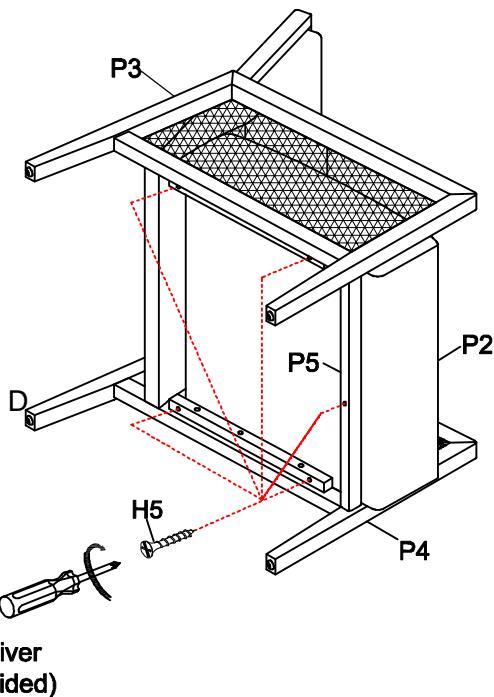

Step 4.

- 1) Turn the assembled chair to an upright position and make sure the chair is level and securely tighten all the bolts with Allen wrench (H4).
- 2) Attach wooden plugs (H6) to each exposed bolt hole, tighten with rubber hammer to knock the wooden plug till its tighten. Note: use a soft cloth between the wooden plug and hammer to prevent damage to wooden plug finish.
- 3) Assembly is complete.

(H6)x6 **Wooden Plugs** 

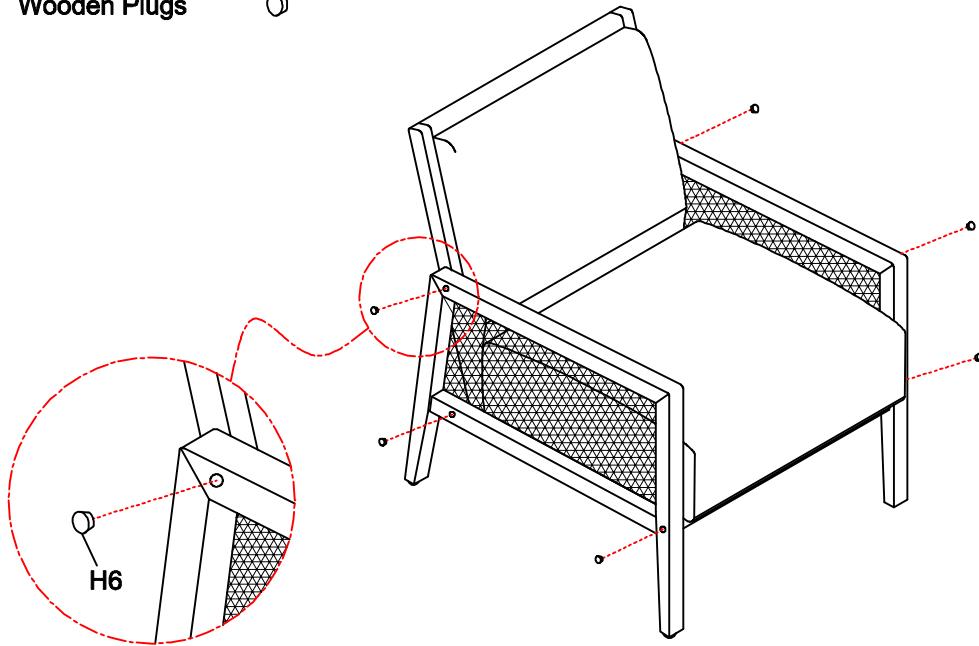

Caution: Failure to follow these instructions may cause the bolts to misalign during assembly.

ADDITIONAL NOTE ABOUT SAFETY: BOLTS MAY LOOSEN DURING NORMAL EVERYDAY USE. THEY SHOULD BE PERIODICALLY INSPECTED AND RE-TIGHTENED TO PREVENT DAMAGE OR INJURY. ALWAYS CHECK TO BE SURE THAT ALL HARDWARE IS KEPT TIGHTENED.

Thank you for your purchase