



Assembly Instruction--Accent Chair

PARTS #	PARTS NAME	DRAWING	QTY
P1	FRONT LEGS		2
P2	BACK LEGS		2
P3	PLASTIC WASHER		4
P4	CHAIR		1


1. Turn the chair upside down and lay on protective carpet. Take out the legs and hardware from the zipper pocket at the bottom side.

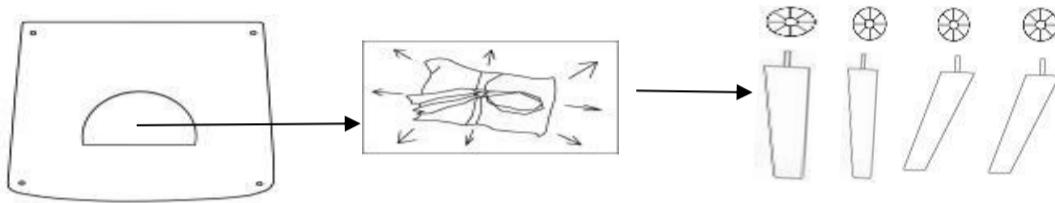

2. Place chair (P4) onto a protective cloth. Place washers (P3) on legs (P1, P2) and attach to Chair (P4) bottom side by screwing clockwise into corresponding holes.

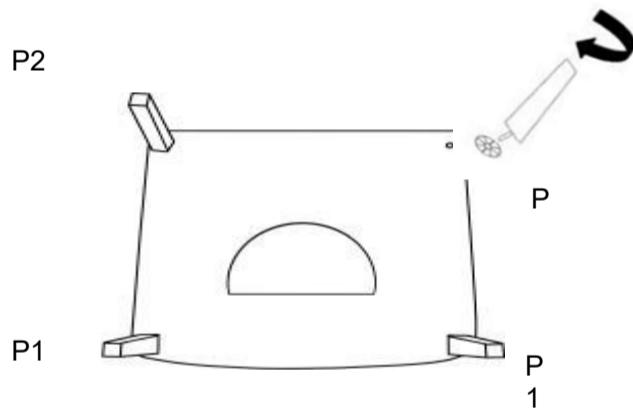

3. Place the chair upright on a level surface. Assemble is complete.

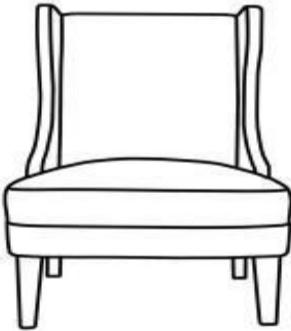

ADDITIONAL NOTE ABOUT SAFETY: BOLTS MAY LOOSEN NORMAL EVERYDAY USE. THEY SHOULD BE PERIODICALLY INSPECTED AND RE-TIGHTENED TO PREVENT DAMAGE INJURY. ALWAYS CHECK TO BEURE THAT ALL HARDWARE IS KEPT TIGHTENED.