



ASSEMBLY INSTRUCTIONS

Description: Winston Accent Chair

Important safety instructions:

- Please read carefully all instructions before assembly.
- For your safety and ease, assembly by two or more adults is recommended.
- Keep instructions for future use.

Pre-assembly:

- Do not discard any content until assembly is complete to avoid accidentally discarding small parts or hardware.
- Take out all parts and hardware from box.

Parts List


Item	Description		QTY
P1	Front legs		2
P2	Back legs		2
P3	Chair top		1
P4	Chair Back		1

Hardware List

Item	Description		QTY
H1	Bolts 5/16"x 25mm		12
H2	Lock Washers 5/16"		12
H3	Flat Washers 5/16"		12
H4	Allen Wrench		1
H5	Plastic Head Bolt		1

Assembly Procedures:

Step 1: Assemble the chair on a flat, soft surface such as a carpet or cloth to prevent scratching the finish. Remove the legs and hardware package from the chair .

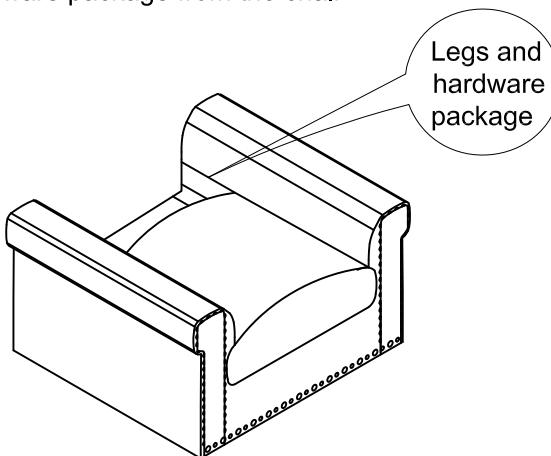


Step 2: Attach front leg (P1) and back legs (P2) to chair top (P3) using Lock washers (H2), Flat washers (H3) and Bolt (H1) as shown below.

(H1)x12 Bolts 5/16"x 25mm 


(H2)x12 Lock Washers 5/16" 

(H3)x12 Flat Washers 5/16" 


(H4)x1 Allen Wrench 

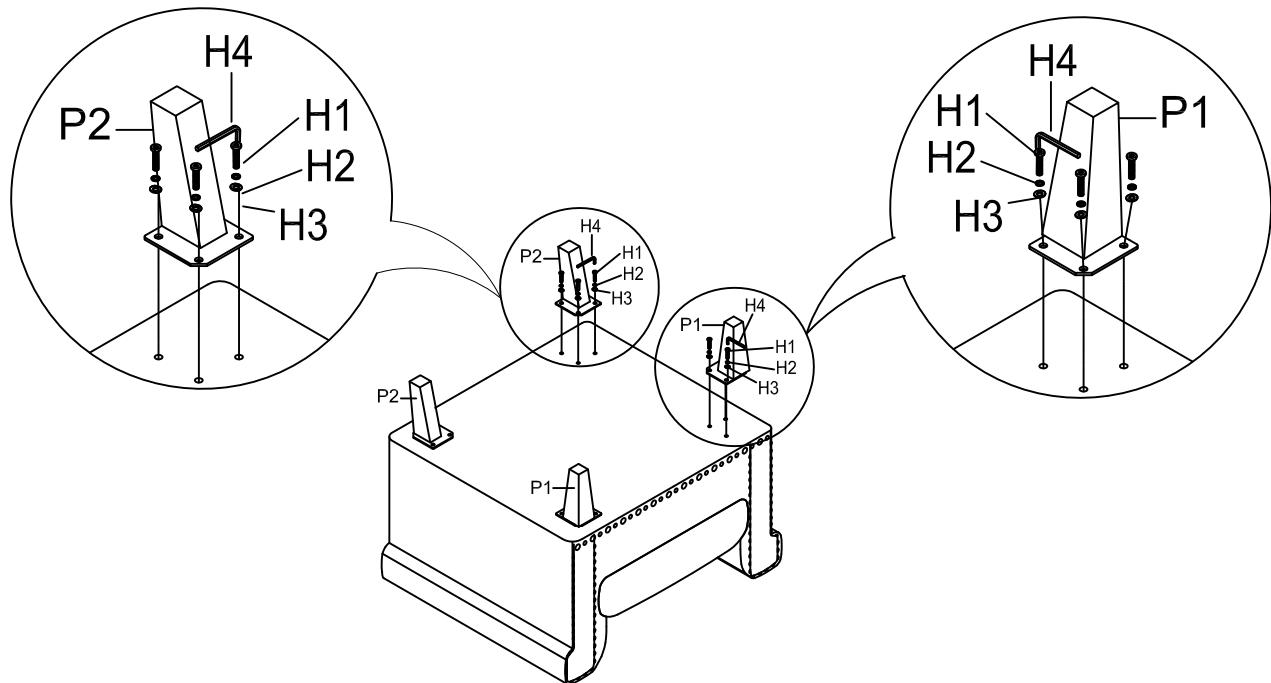


Step 3: Attach the Chair Back (P4) to the Chair Top (P3) aligning the locking clip with the KD bracket on the side of chair back.

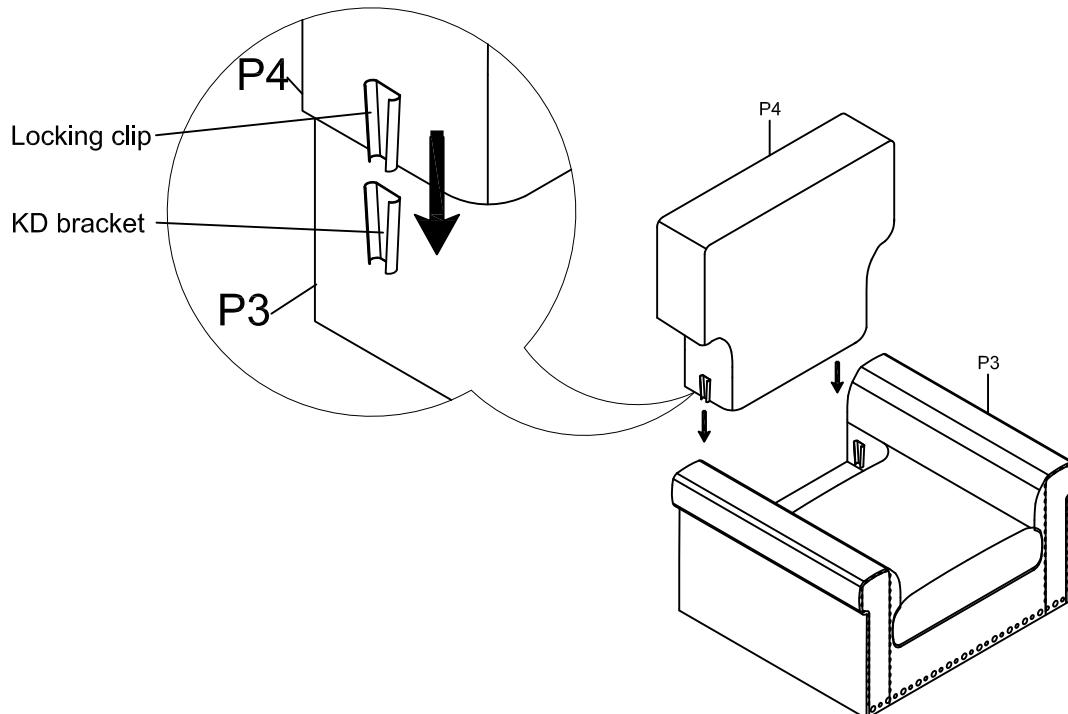

Step 4: Unzip the non-woven fabric under the Chair Top (P4) and assemble the Chair Back to chair top frame using Plastic Head Bolt (H5). Then zip the non-woven fabric.

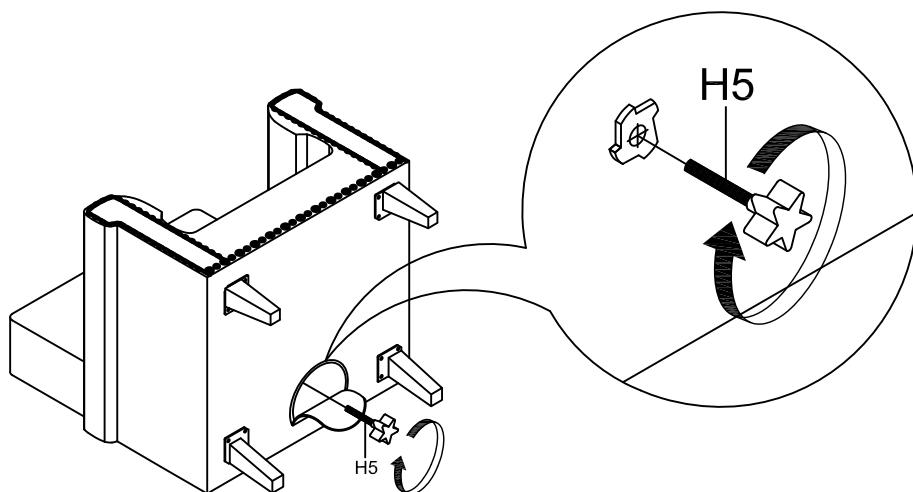

Step 5: Turn the assembled chair to an upright position. Assembly is complete.

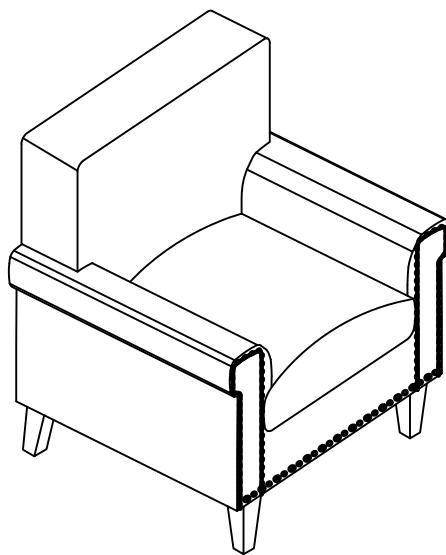

ADDITIONAL NOTE ABOUT SAFETY: BOLTS MAY LOOSEN DURING NORMAL EVERYDAY USE. THEY SHOULD BE PERIODICALLY INSPECTED AND RE-TIGHTENED TO PREVENT DAMAGE OR INJURY. ALWAYS CHECK TO ENSURE THAT ALL HARDWARE IS KEPT TIGHTENED.

Thank you for your purchase