



ASSEMBLY INSTRUCTIONS

Tinsley Accent Bench

Important safety instructions:

- Please read carefully all instructions before assembling.
- For your safety and ease, assembly by two or more adults is recommended.
- Keep instructions for future use.

Pre-assembly:

- Do not discard any content until assembly is completed to avoid accidentally discarding small parts or hardware.
- Remove all parts and hardware from box along with any protective packaging.


Parts List

Item	Description	DRAWING	QTY
P1	Bench Top		1
P2	Legs		2
P3	Support Bar		2


Hardware List

Item	Description	DRAWING	QTY
H1	ALLEN WRENCH 1/4"		1
H2	ALLEN WRENCH 5/16"		1
H3	Bolts 1/4"**3/5		8
H4	Bolts φ5/16"**1"		12
H5	Lock Washers φ5/16"		12
H6	flat washer φ5/16"		12


Step 1. Assemble the bench on a flat, soft surface such as carpet or cloth to prevent scratching. Insert support bar (P3) to the legs(P2), Using allen wrench(H1)to tighten bolts (H3) as illustration below.

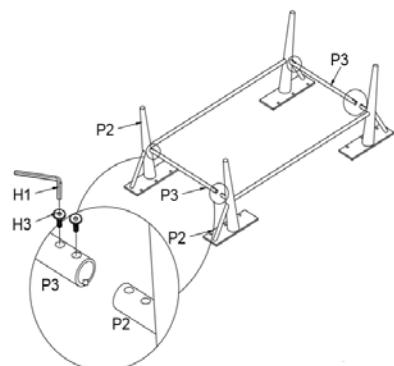

Step 2. Using bolts (H4), lock washers (H5), flat washers (H6), attach legs (P2) to bench top (P1). Tighten bolts (H4) with allen wrench (H2) as illustration below.

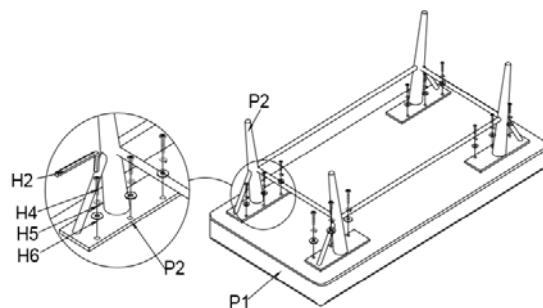

Step 3. Place the bench upright on a level surface. Adjust levelers (as drawing) as necessary.

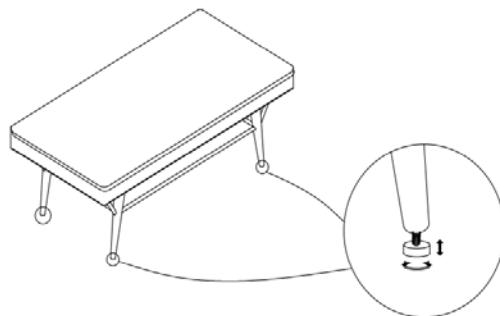

ADDITIONAL NOTE ABOUT SAFETY: BOLTS MAY LOSEN DURING NORMAL EVERYDAY USE. THEY SHOULD BE PERIODICALLY INSPECTED AND RE-TIGHTENED TO PREVENT DAMAGE OR INJURY. ALWAYS CHECK TO ENSURE THAT ALL HARDWARE IS KEPT TIGHTENED.