

ASSEMBLY INSTRUCTIONS

Description: CATALINA PLATFORM BED

Important safety instructions:

- Please read carefully all instructions before assembly.
- For your safety and ease, assembly by two or more adults is recommended.
- Keep instructions for future use.

Pre-assembly:

- Do not discard any content until assembly is complete to avoid accidentally discarding small parts or hardware.
- Take out all parts and hardware from box.

Parts List

Item	Description	QTY
P1	Headboard	1
P2	Legs	4
P3	Footboard	1
P4	Side Boards	2
P5	Side Boards	2
P6	Side Middle Legs	2
P7	Middle Horizontal Bar	1
P8	Middle Lengthways Bars	2
P9	Middle Leg	1
P10	Middle Legs	2

Parts List

Item	Description	QTY
P11	Slats	28
P12	Double Head Buckle	14
P13	Strength Bar	4
P14	Single Head Buckle	28

Hardware List

Item	Description	QTY
H1	Bolt M6x40	16
H2	Bolt M8x20	8
H3	Bolt M6x20	16
H4	Bolt M6x60	3
H5	Flat Washer M6	24
H6	Flat Washer M8	8

Item	Description	QTY
H7	Nut M6	6
H8	Bracket (L)	2
H9	Bracket (R)	2
H10	Wrench	1
H11	Allen Wrench M4	1
H12	Allen Wrench M5	1


DISCLAIMER:

WHEN PROPERLY ASSEMBLED, THIS ITEM IS SAFE FOR INTENDED USE. SELLER IS NOT LIABLE FOR ANY DAMAGES RESULTING FROM ITEM BEING IMPROPERLY ASSEMBLED AFTER PURCHASE.


Assembly Procedures:

Assemble the unit on a flat, soft surface such as a carpet or cloth to prevent scratching the finish. Unpack the unit and confirm that all the hardware and required parts.

Step 1. Attached legs (P2) to headboard (P1) and footboard (P3) .

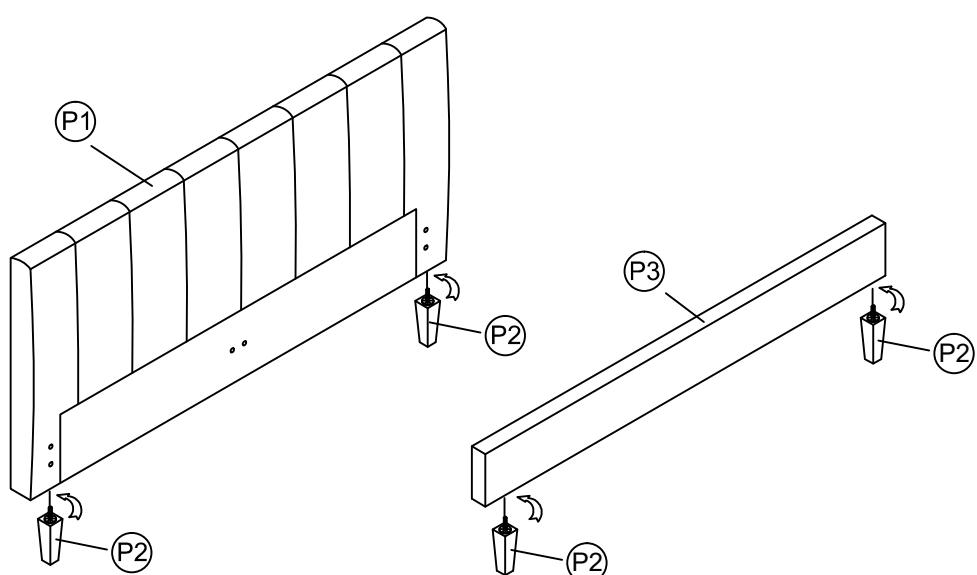


Step 2. Fix strength bars (P13) on sideboards (P4&P5) by using bolts (H1),flat washer (H5) and allen wrench (H11).

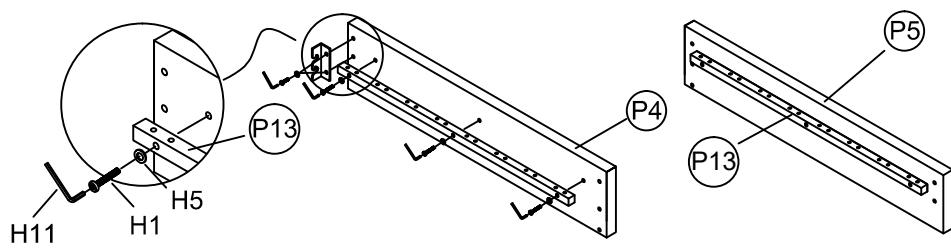


H1 x 12
H5 x 12
H11 x 1

Step 3. Loosely attach brackets (H8, H9) to both ends of sideboards (P4&P5) by using bolts (H2), flat washer (H6) and allen wrench (H12).

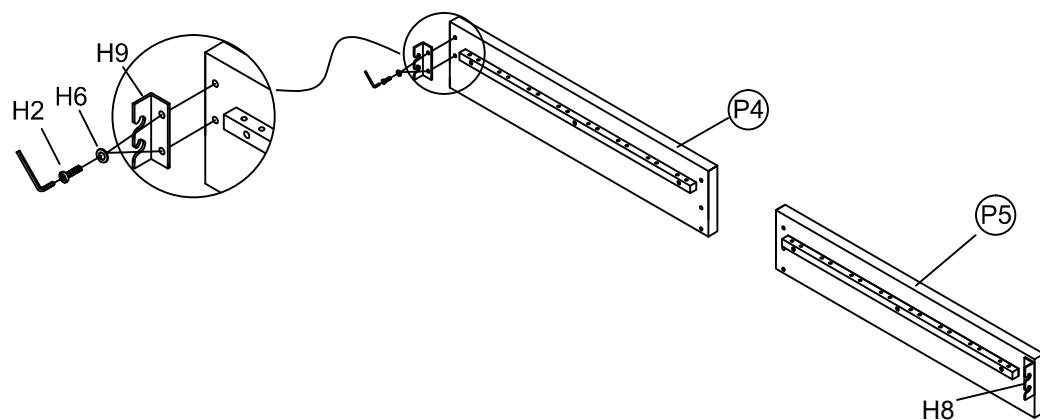


H2 x 8
H6 x 8
H12 x 1
H8 x 2
H9 x 2

Step 4. Connect sideboards (P4) and (P5) by using middle legs (P6), bolts (H3) ,flat washer (H5), tighten bolts by allen wrench (H11).

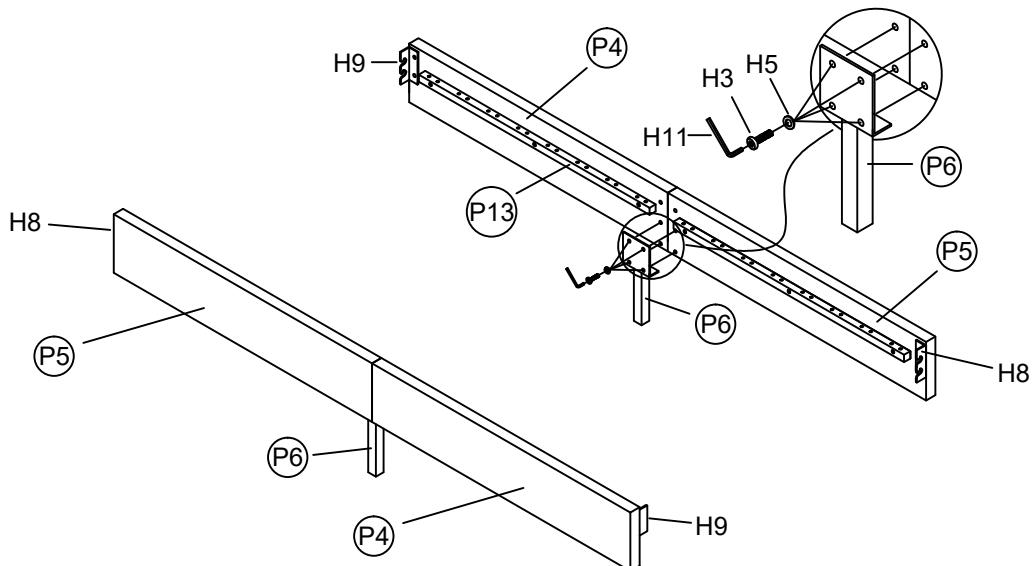


H3 x 8
H5 x 8
H11 x 1

Step 5. Loosen the pre-installed screws on headboard and footboard by using allen wrench (H12), hang brackets on the loosened screws then tighten all the screws on brackets by allen wrench (H12).

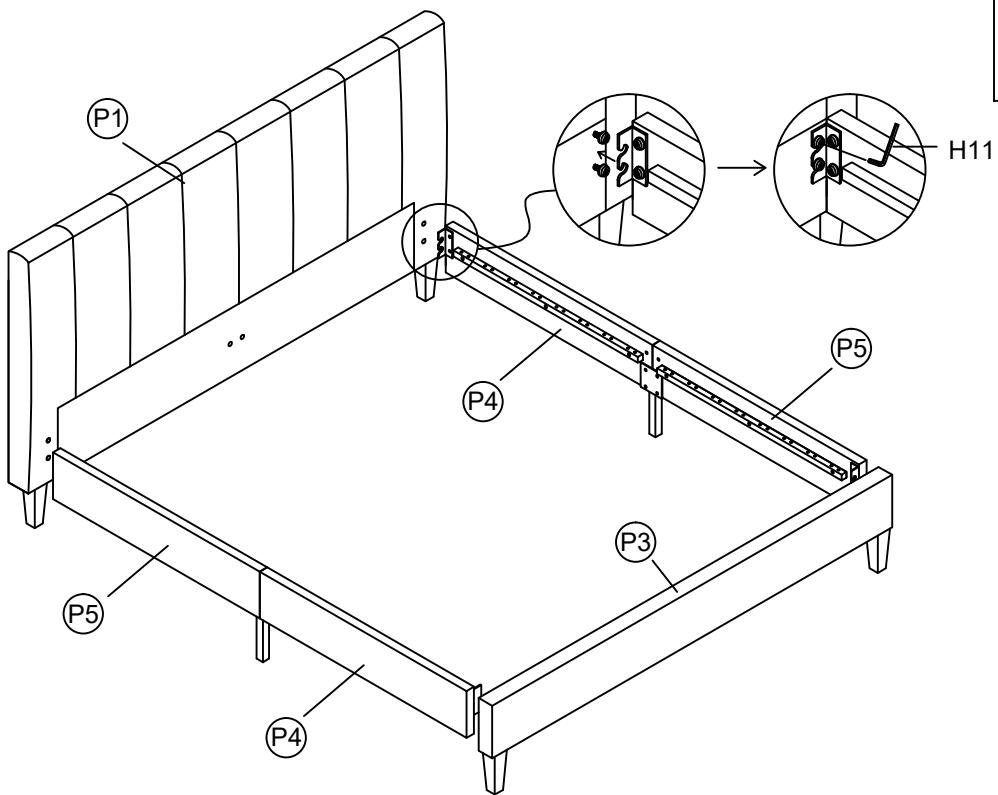


Step 6. Fix middle leg (P9) to middle horizontal bar (P7) by using bolts (H4).

Fix both ends of middle horizontal bar (P7) to sideboards by using bolts (H3), flat washer (H5), tighten bolts (H3 ,H4) by allen wrench (H11).

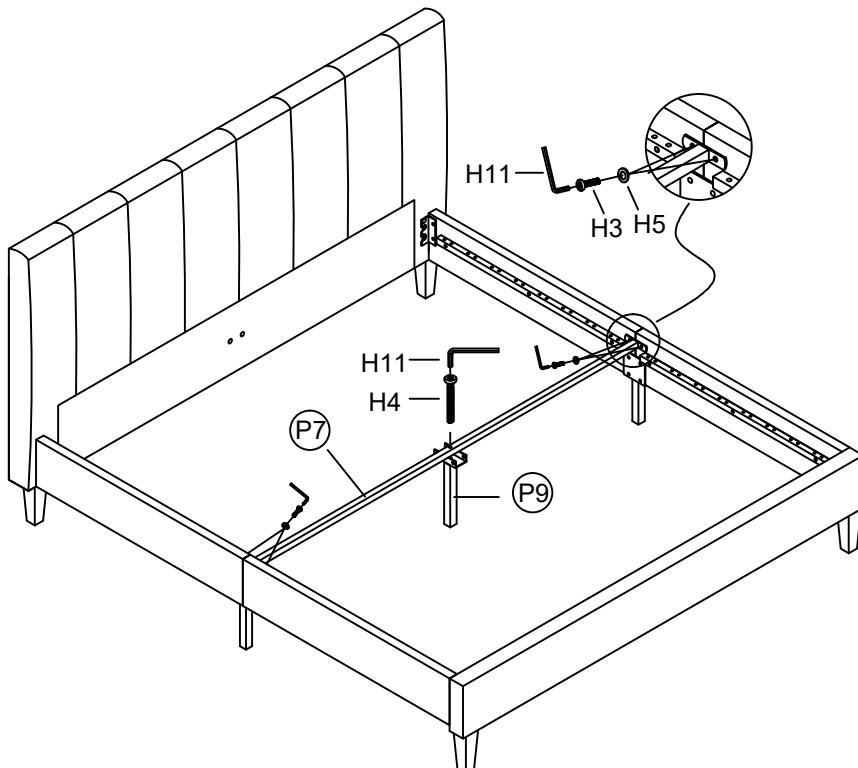

Step 7. 1). Fix middle legs(P10) to middle lengthways bars(P8) by using bolts(H1), nuts(H7) and wrench(H10).
 2). Attach middle lengthways bars(P8) to headboard and footboard by using bolts (H3) and allen wrench (H11).
 3). Connect middle lengthways bars(P8) to middle leg(P9) by using bolts(H4),nuts(H7) and wrench(H10).

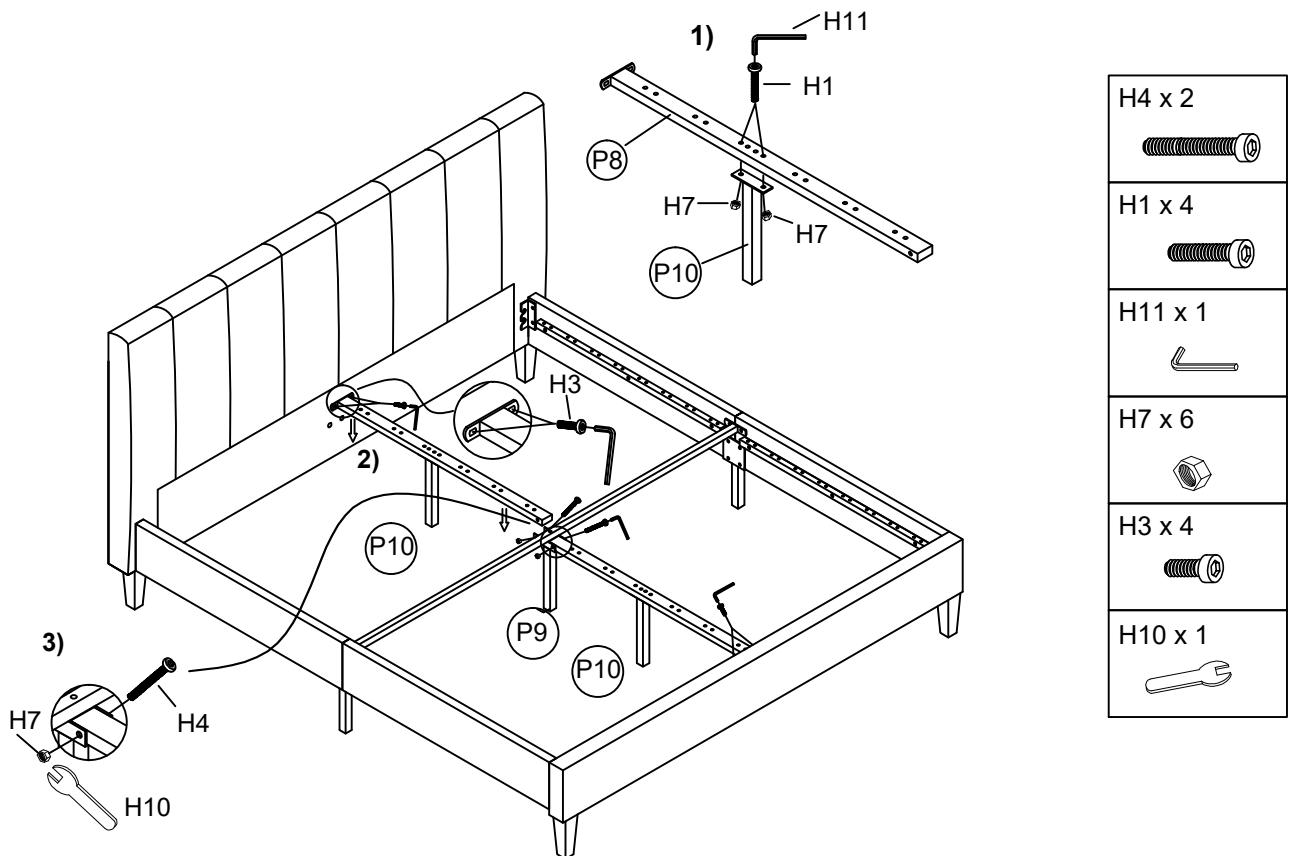

Step 8. Connect 2 slats(P11) with double head buckles(P12), insert 2 ends of slats into single head buckles (P14), insert dowel on single head buckles(P14) to pre-drilling holes on strength bar on sideboards, insert dowel on double head buckles(P12) to pre-drilling holes on middle lengthways bars(P8).
 Assembly completed.

