

ASSEMBLY INSTRUCTIONS

Description: Lounge Chair

Important safety instructions:

- Please carefully read all instructions before assembling the chair.
- For your safety and ease, assembly by two or more adults is recommended.
- Keep instructions for future use.

Pre-assembly:

- Do not discard any contents until after assembly is complete to avoid accidentally discarding small parts or hardware.
- Remove all parts and hardware from box along with any plastic protective packaging.

Parts List


Item	Description		QTY
A	Back Metal Frame		1
B	Seat Metal Frame		1
C	Left Side Metal Frame		1
D	Right Side Metal Frame		1
E	Back Cushion		1
F	Seat Cushion		1
G	Upholstery Arm Rest		2

Hardware List


Item	Description		QTY
a	$\frac{1}{2}$ " length Bolts	$\varnothing 1/4"$	8
b	1" length Bolts	$\varnothing 1/4"$	2
c	$1\frac{1}{2}$ " length Bolts	$\varnothing 1/4"$	6
d	$2\frac{1}{8}$ " length Bolts	$\varnothing 1/4"$	2
e	Lock Washers	$\varnothing 1/4"$	2
f	Flat Washers	$\varnothing 1/4"$	2
g	Screws	2"	6
h	Allen Wrench	4mm	1

Assembly Procedures:

Step 1. Assemble the lounge chair on a flat, soft surface such as a carpet or cloth to prevent scratching the finish. Attach the seat Metal frame(B) to the back metal frame (A) using 1" length bolts (b). Loosely tighten by Allen wrench (h), but do not over tighten.

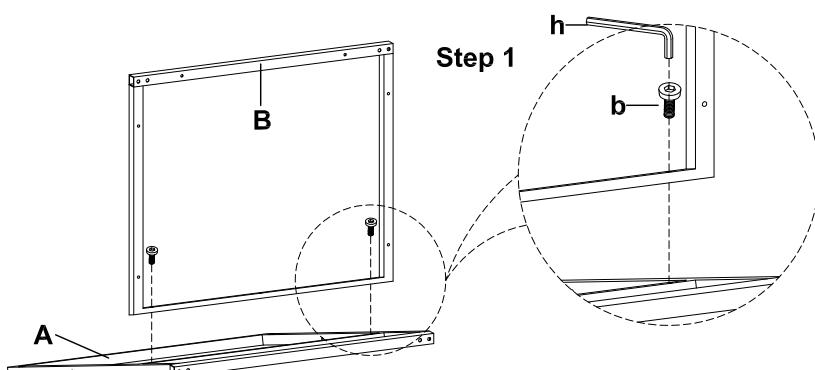


Step 2. Place left side metal frame (C) and right side metal frame (D) to seat metal frame (B) and the back metal frame (A) aligning the insert bar on side metal frames (C & D) to the holes on the seat metal frame (B), do not tighten at this time.

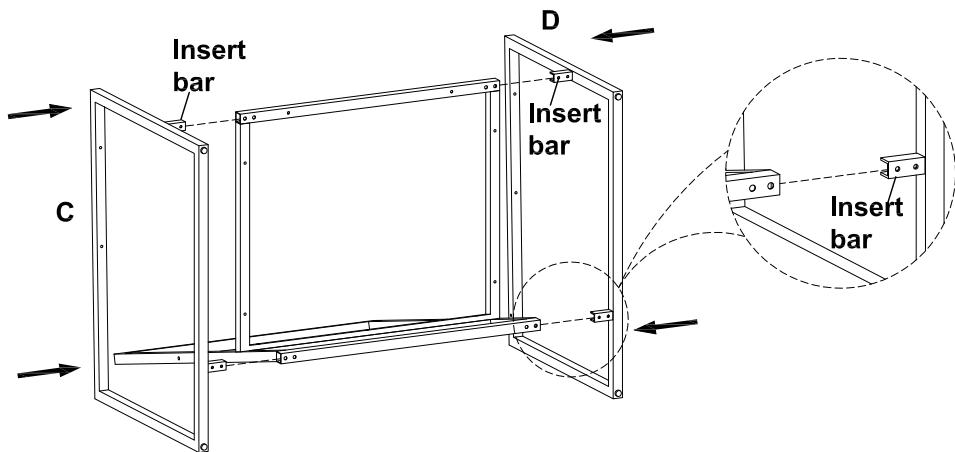


Step 3.


- 1) Attach left side metal frame (C) and right side metal frame (D) to seat metal frame (B) using $\frac{1}{2}$ " bolts (a).
- 2) Attach left side metal frame (C) and right side metal frame (D) to the back metal frame (c) using $1\frac{1}{2}$ " bolts (c).
- 3) Securely tighten all bolts by Allen wrench (h), but do not over tighten.

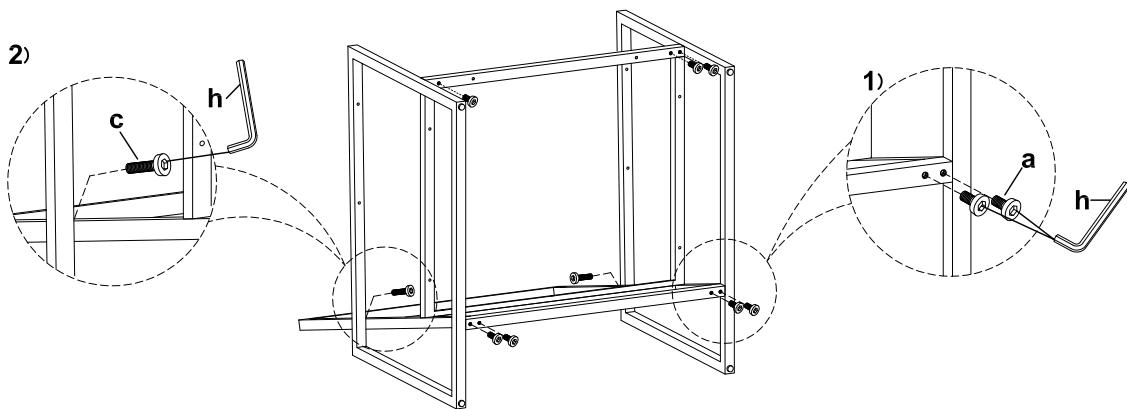

Step 4. Open bottom covering and attach the seat cushion (F) to the back cushion (E) using $2\frac{1}{8}$ " bolt (d), lock washers (e) and flat washers (f) as shown below. Securely tighten all bolts by Allen wrench (h), but do not over tighten.

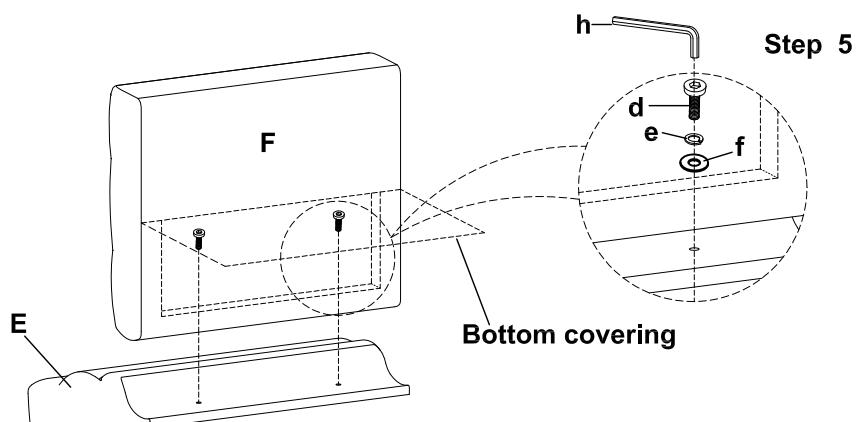


Step 5. Hold the assembled seat cushion and back cushion by two or more adults is recommended. Insert the lock pins on the back of back cushion (E) into the hole on the back metal frame (A).

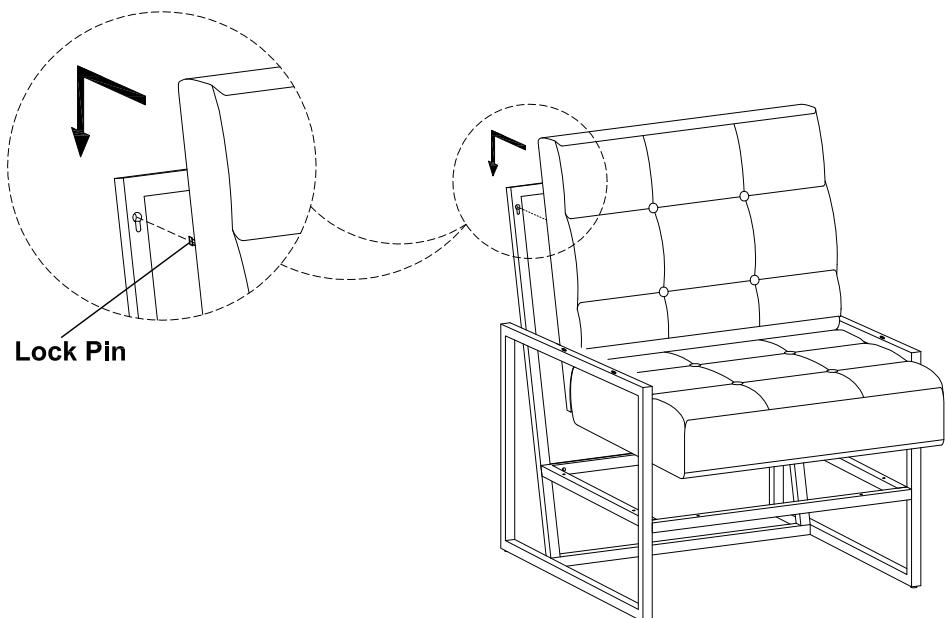

Step 6.

- 1) Securely tighten all bolts by Allen wrench (h), but do not over tighten. Lay the chair back on the floor, then attach the seat metal frame (B) to seat cushion (F) using screw (g).
- 2) Attach the upholstery arm rest (G) to the left/right side metal frame (C/D) using $1\frac{1}{2}$ " length bolt (c). Securely tighten by Allen wrench (h), but do not over tighten.

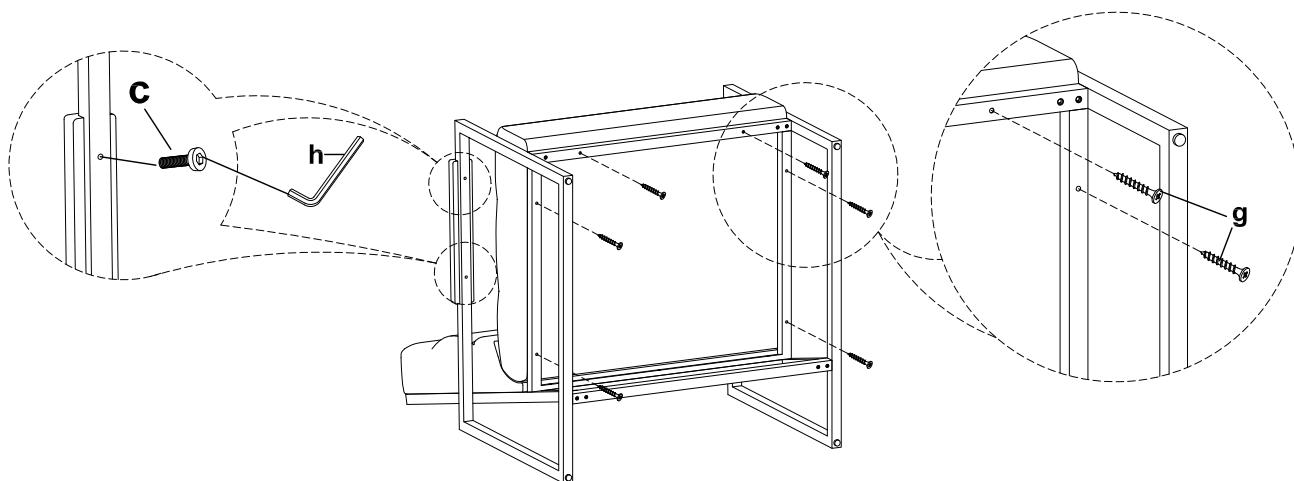

ADDITIONAL NOTE ABOUT SAFETY: BOLTS MAY LOOSEN DURING NORMAL EVERYDAY USE. THEY SHOULD BE PERIODICALLY INSPECTED AND RE-TIGHTENED TO PREVENT DAMAGE OR INJURY. ALWAYS CHECK TO BE SURE THAT ALL HARDWARE IS KEPT TIGHTENED.