

# ASSEMBLY INSTRUCTIONS

## Description: Corner sofa






### Important safety instructions:

- Please carefully read all instructions before assembling the sofa.
- For your safety and ease, assembly by two or more adults is recommended.
- Keep instructions for future use.












### Pre-assembly:


- Do not discard any contents until after assembly is complete to avoid accidentally discarding small parts or hardware.
- Remove all parts and hardware from box along with any plastic protective packaging.

### Parts List

Item	Description		QTY
P1	Seat		1
P2	Back Leg Frame		2
P3	Back Top Rail 1		1
P4	Back Top Rail 2		1
P5	Front Feet		1

### Hardware List

Item	Description		QTY
H1	Short Bolts Ø1/4" *3/4"		5
H2	Lock Washers 1/4"		5
H3	Flat washers 1/4"		5
H4	Small Allen Wrench 1/4"		1
H5	Long Bolts Ø5/16" *1-1/2"		5
H6	Lock Washers 5/16"		5
H7	Flat washers 5/16"		5
H8	Big Allen Wrench 5/16"		1
H9	Long Screw #8*1-3/4"		8
H10	"U" Metal Block		1
H11	Short Screw #8 *5/8"		1

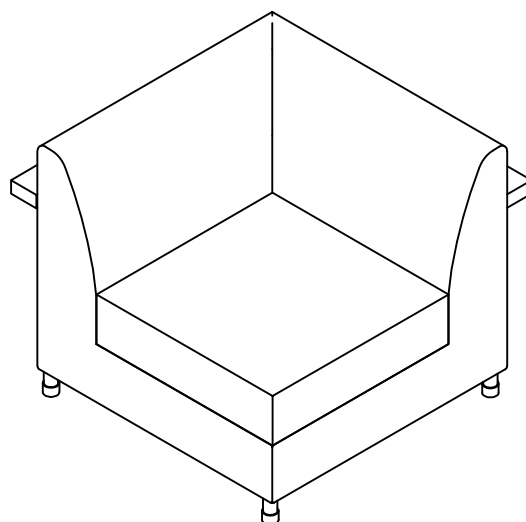


Note: These hardware are for setting up a unit, please see the "Assembly instructions for Setting up a unit"

### Assembly Procedures:


**Step 1.** Assemble the sofa on a flat, soft surface such as a carpet or cloth to prevent scratching the finish. Securely tighten the back top rail 1 (P3) to back top rail 2 (P4) using long screws (H9) with screw driver(not provided).

(H9)x2 Long Screw #8\*1-3/4" 

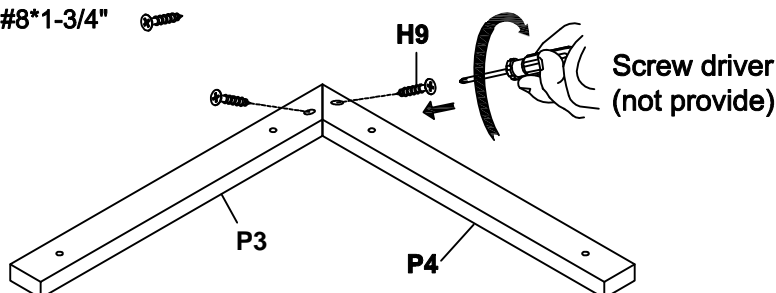

**Step 2.** Loosely attach each back leg frame (P2) to the back top rail 1 (P3) and back top rail 2 (P4) as shown below.


- (H1)x4 Short Bolts  $\varnothing 1/4"$  \*3/4" 
- (H2)x4 Lock Washers 1/4" 
- (H3)x4 Flat washers 1/4" 
- (H4)x1 Small Allen Wrench 1/4" 

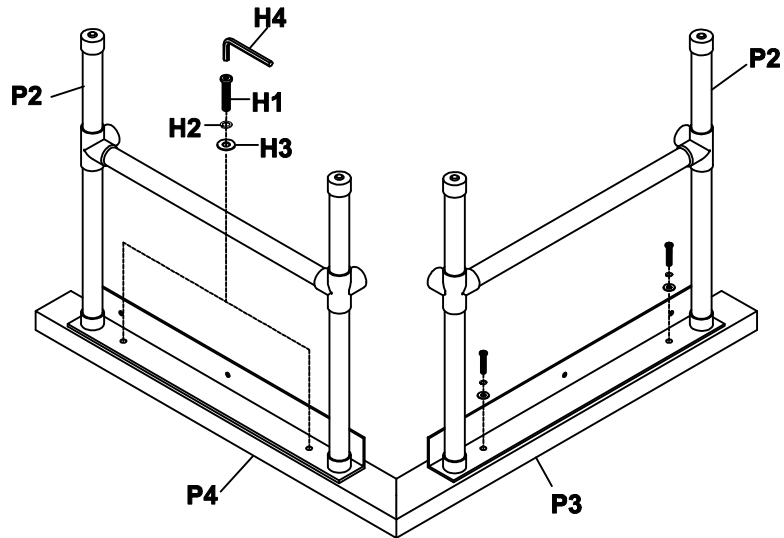

**Step 3.**

- 1) Loosely attach the back leg frames (P2) to the seat (P1) as shown below.
- 2) Attach front legs (P5) to the bottom of seat (P1) as shown below.


- (H5)x5 Long Bolts  $\varnothing 5/16"$  \*1-1/2" 
- (H6)x5 Lock Washers 5/16" 
- (H7)x5 Flat washers 5/16" 
- (H8)x1 Big Allen Wrench 5/16" 

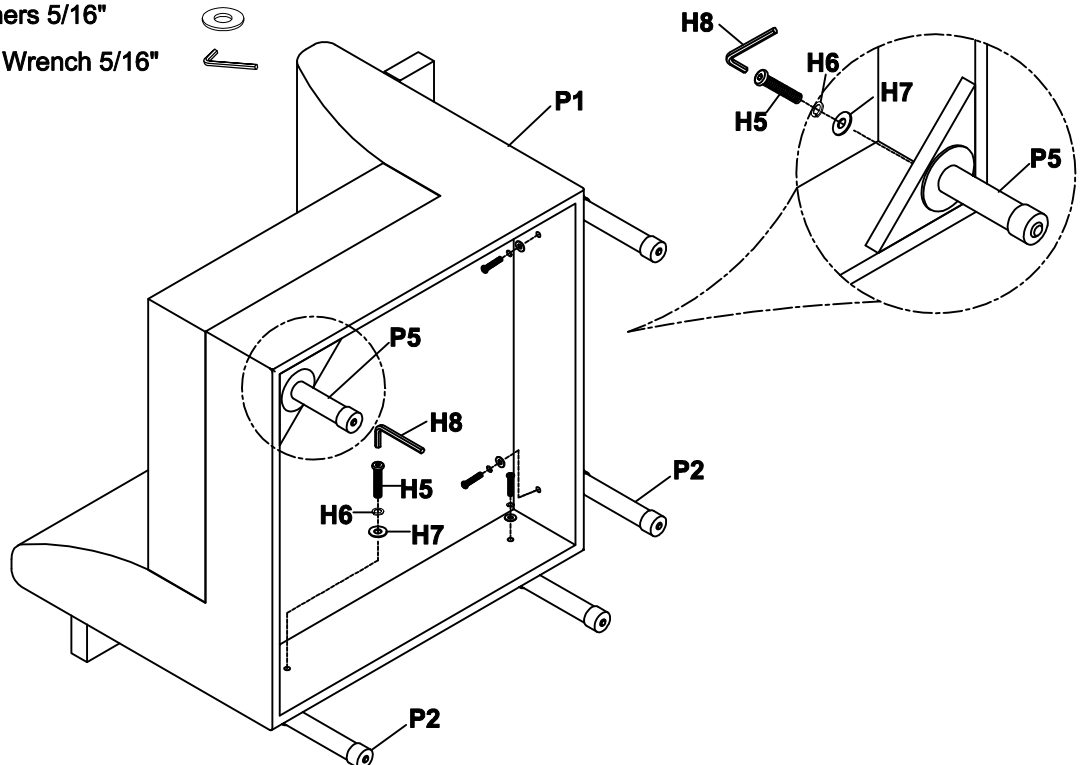

**Step 4.**

- 1) Turn the assembled sofa to an upright position. Make sure the sofa is level and make sure each back leg frames (P2) center on the back of seat (P1), then securely tighten all bolts with Allen wrench (H8).
- 2) Attach the metal bracket on the back leg frames (P2) to the back of seat (P1) using the long screws (H9) with screw driver (not provided).
- 3) To level sofa. After completing all other steps, stand the sofa upright on all four legs. If there is a gap between a leg and the floor. Please adjust the adjustable leveler up or down under each leg. Assembly is complete.
- 4) **Failure to follow these instructions may cause the bolts to misalign during assembly.**

(H9)x6 Long Screw #8\*1-3/4" 

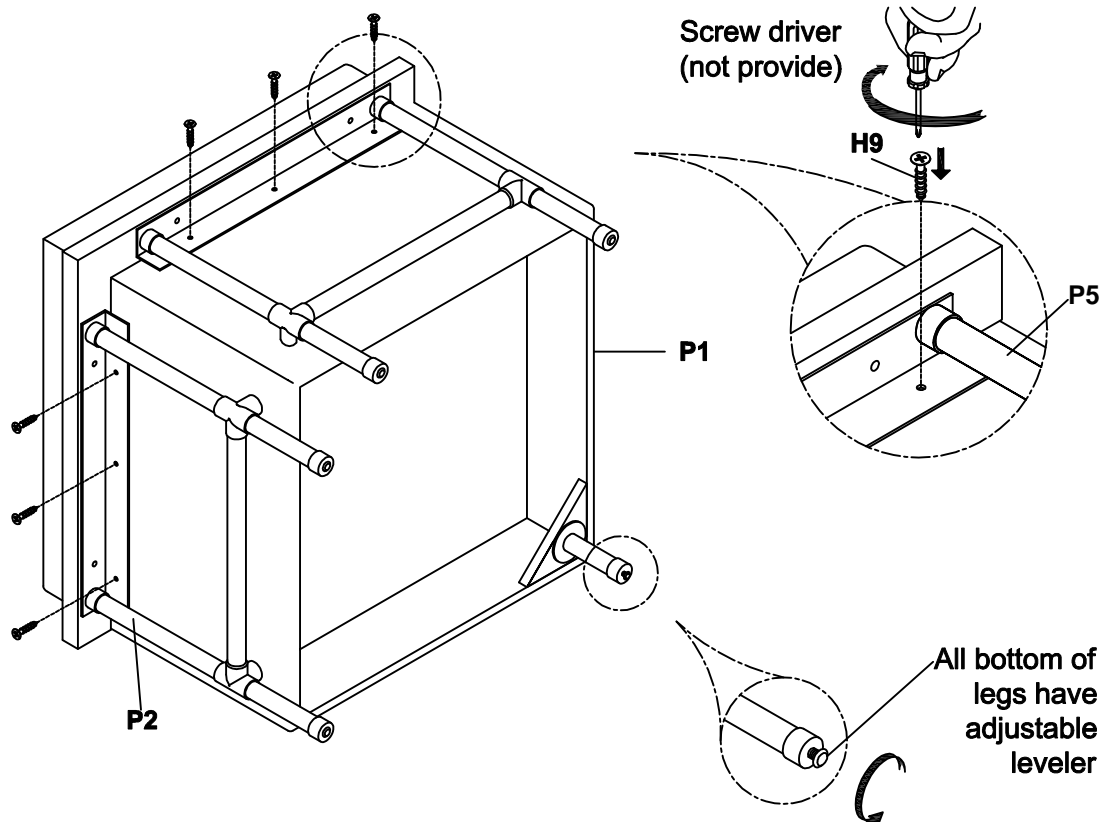

ADDITIONAL NOTE ABOUT SAFETY: BOLTS MAY LOOSEN DURING NORMAL EVERYDAY USE. THEY SHOULD BE PERIODICALLY INSPECTED AND RE-TIGHTENED TO PREVENT DAMAGE OR INJURY. ALWAYS CHECK TO BE SURE THAT ALL HARDWARE IS KEPT TIGHTENED.

Thank you for your purchase

# Assembly instructions for Setting up a unit

1) Place the assembled armless lounge, assembled one arm lounge and assembled corner sofa at your desired position. Then attach locks to the bottom of sofa using bolt line up with the bolt hole, then using screw to attach it. As shown below.

## 2) Option unit 1

Turn the assembled sofas and lounges to a upright position by three or more adults is recommended, then lock the locks on bottom of lounge and corner sofas.

(H1)x2 Bolts Ø1/4" \*3/4"



(H2)x2 Lock Washers 1/4"




(H3)x2 Flat washers 1/4"




(H10)x2 "U" Metal Block




(H11)x2 Screw #8 \*5/8"

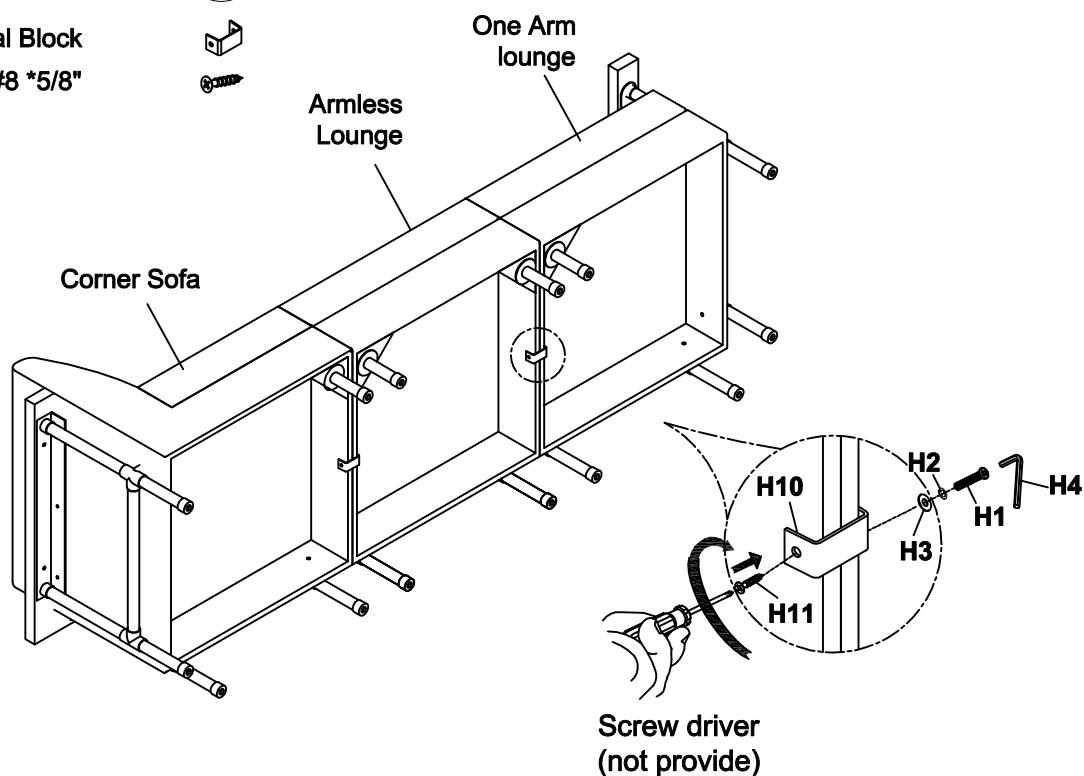



Option 1

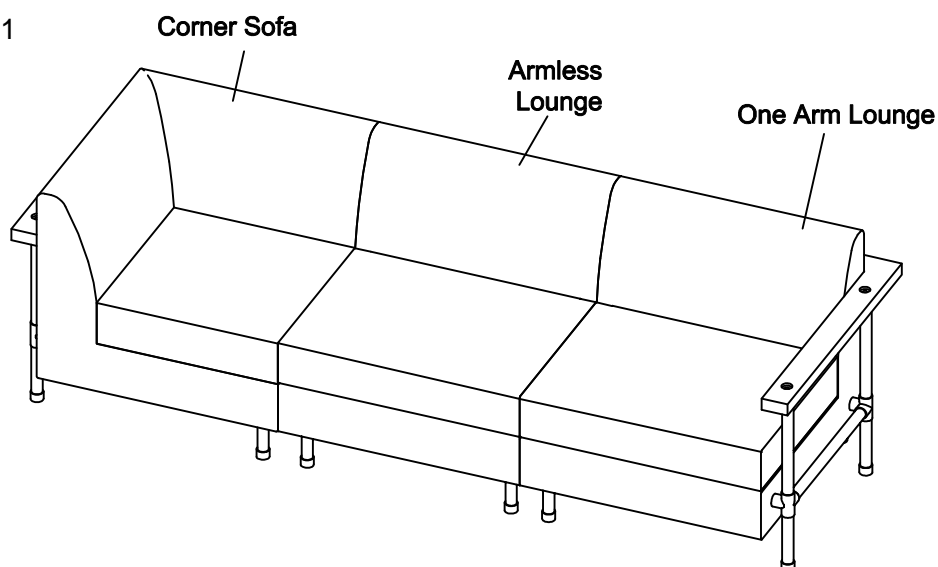

**Option 2**

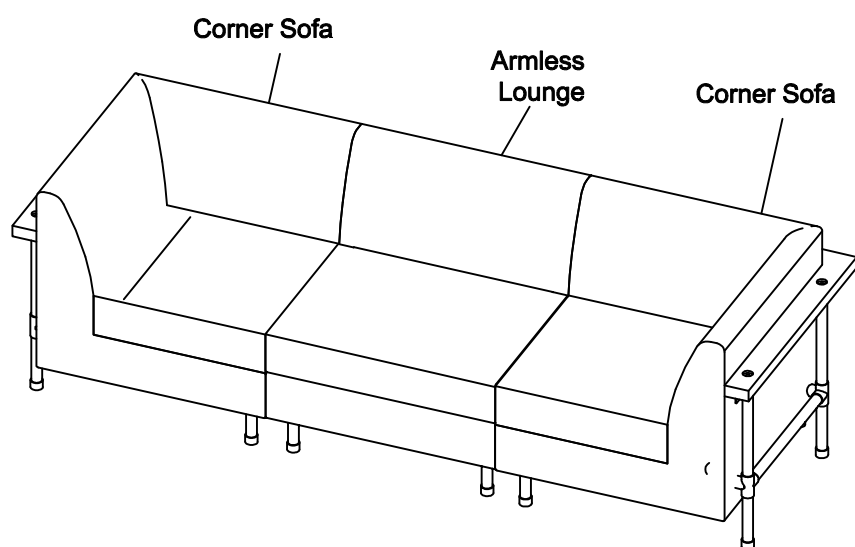

**Option 3**

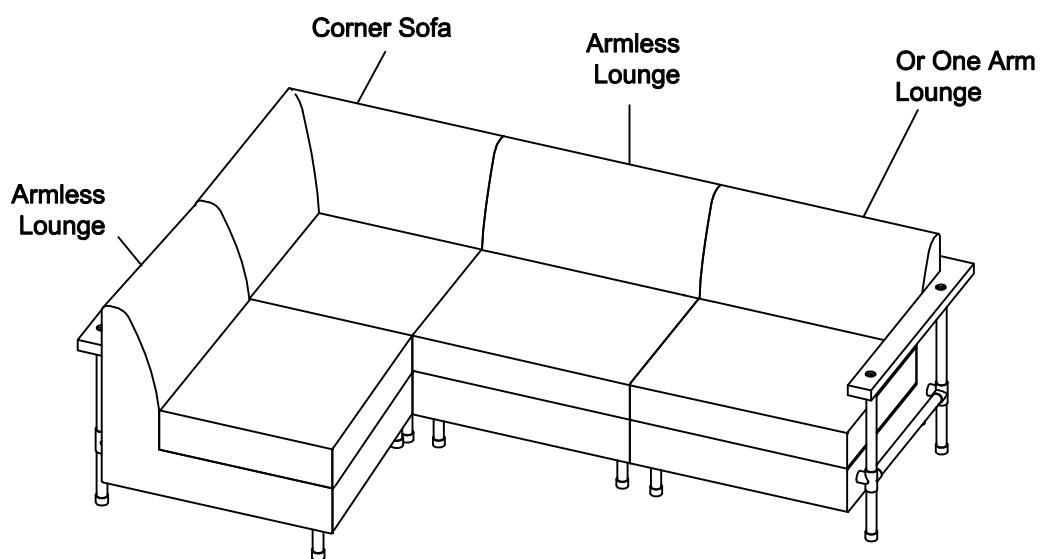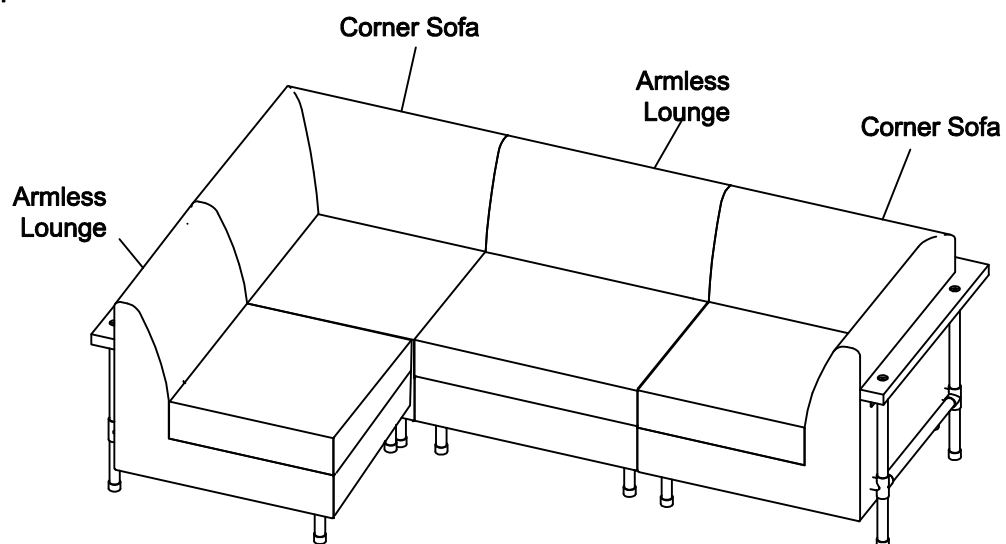

**Thank you for your purchase**