

## ASSEMBLY INSTRUCTIONS

## Description: Sharon Accent Chair

## Important safety instructions:


- Please carefully read all instructions before assembling.
- For your safety and ease, assembly by two or more adults is recommended.
- Keep instructions for future use.

## Pre-assembly:

- Do not discard any contents until after assembly is complete to avoid accidentally discarding small parts or hardware.
- Remove all parts and hardware from box along with any plastic protective packaging.

## Parts List

Item	Description	QTY
P1	Seat Cushion	1
P2	Left Arm	1
P3	Back Frame	1
P4	Right Arm	1
P5	Back Cushion	1

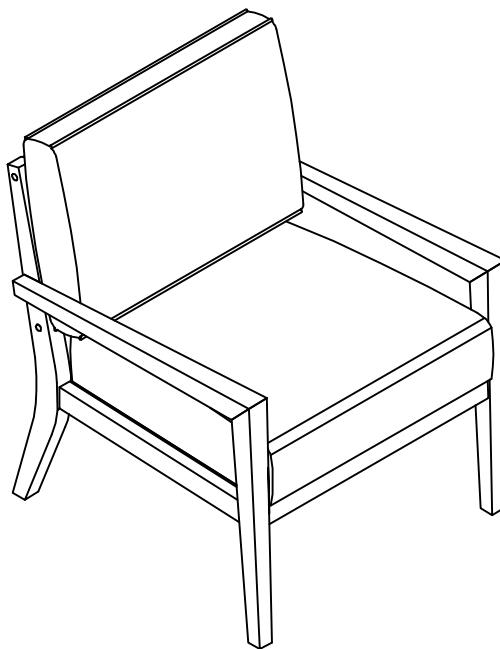


## Hardware List

Item	Description	QTY
H1	Long Bolts Ø1/4"**2" L	6
H2	Short Bolts Ø1/4"**1-1/2"	4
H3	Lock Washers Ø1/4"	10
H4	Big flat washers Ø1/4" (19mm)	6
H5	Small flat washers Ø1/4" (12mm)	4
H6	Allen Wrench 1/4"	1
H7	Wooden Plugs	4

## Assembly Procedures:


Step 1. Assemble the lounge on a flat, soft surface such as a carpet or cloth to prevent scratching the finish. Attach seat cushion (P1) to left arm (P2) as shown below. Securely tighten the bolts with Allen wrench (H6).

(H1)x3	Long Bolts	Ø1/4"**2" L
(H3)x3	Lock Washers	Ø1/4"
(H4)x3	Big flat washers	Ø1/4" (19mm)
(H6)x1	Allen Wrench	1/4"

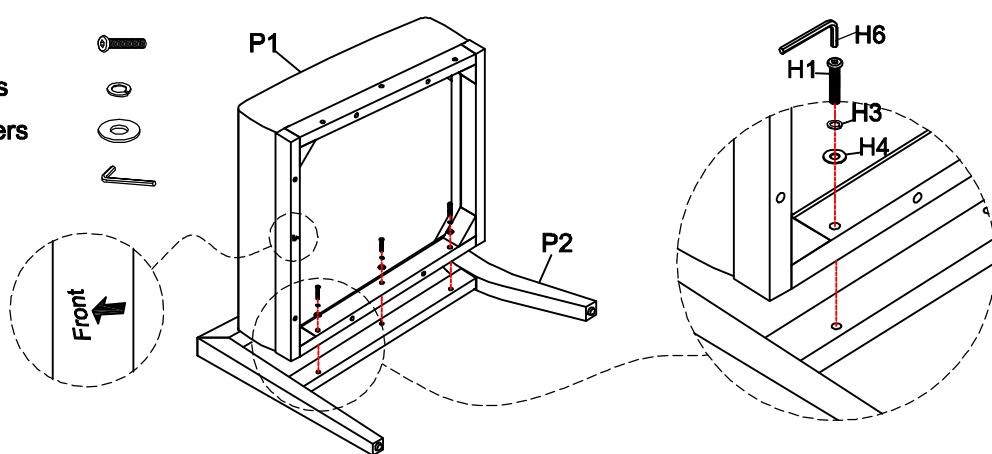


Step 2. Attach back frame (P3) to the left arm (P2) as shown below. Securely tighten the bolts with Allen wrench (H6).

(H2)x2    Short Bolts      
(H3)x2    Lock Washers      
(H5)x2    Small flat washers    

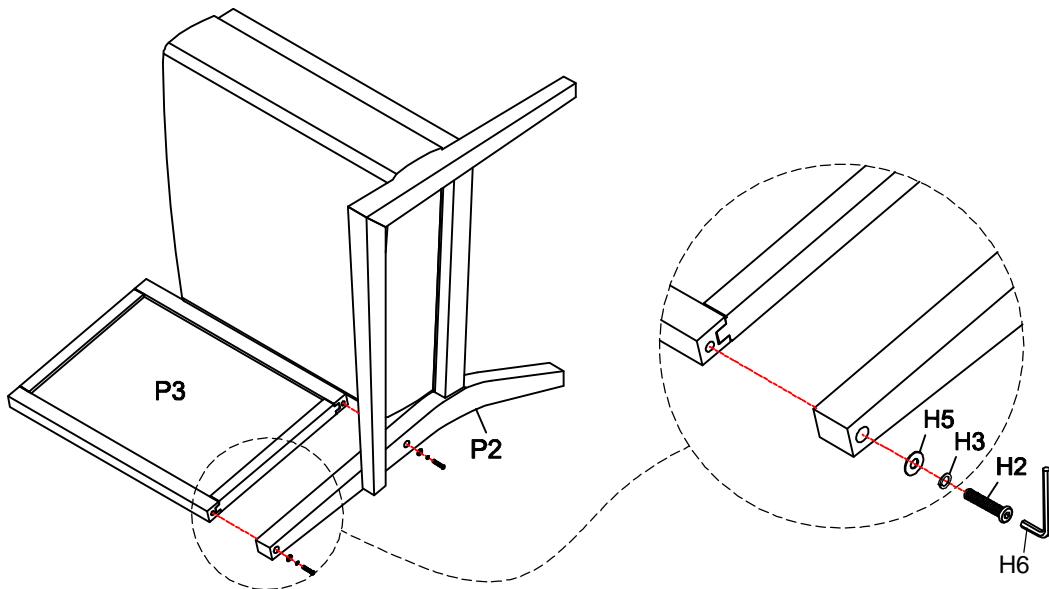


Step 3. Attach right arm (P4) to the seat cushion (P1) and back frame (P3) as shown below. Securely tighten the bolts with Allen wrench (H6).

(H1)x3    Bolts      
(H3)x3    Lock Washers      
(H4)x3    Big flat washers    

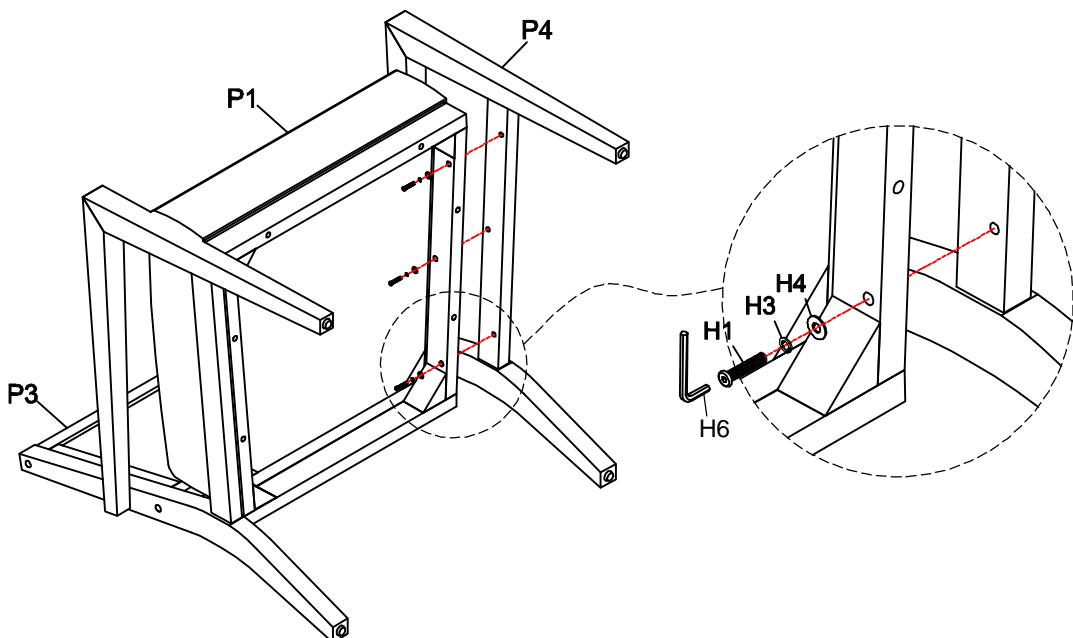

Step 4. Turn assembled lounge to an upright position. Then attach the assembled right arm (P4) to the back frame (P3) as shown below. Securely tighten the bolts with Allen wrench (H6) .


(H2)x2 Short Bolts   
(H3)x2 Lock Washers   
(H5)x2 Small flat washers 

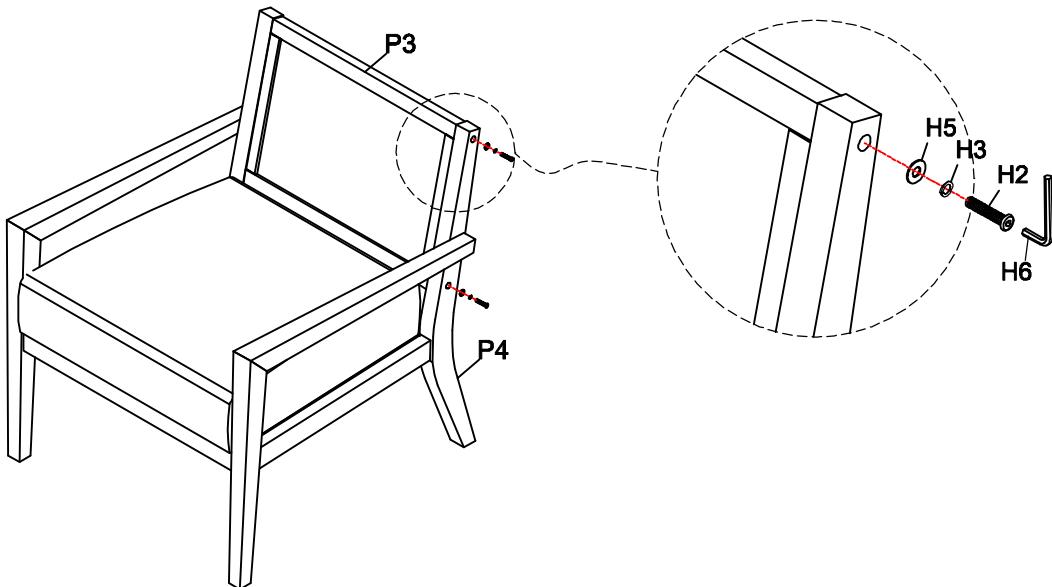

Step 5.

- 1) Make sure the assembled lounge is level and securely tighten all the bolts with Allen wrench (H6).
- 2) Attach wooden plugs (H7) to each exposed bolt holes, tighten with rubber hammer to knock the wooden plug till its tighten. **Note:** use a soft cloth between the wooden plug and hammer to prevent damage to wooden plug finish.
- 3) Put the back cushion (P5) on the assembled lounge.
- 4) Assembly is complete. **Failure to follow these instructions may cause the bolts to misalign during assembly.**

(H7)x4 Wooden Plugs 

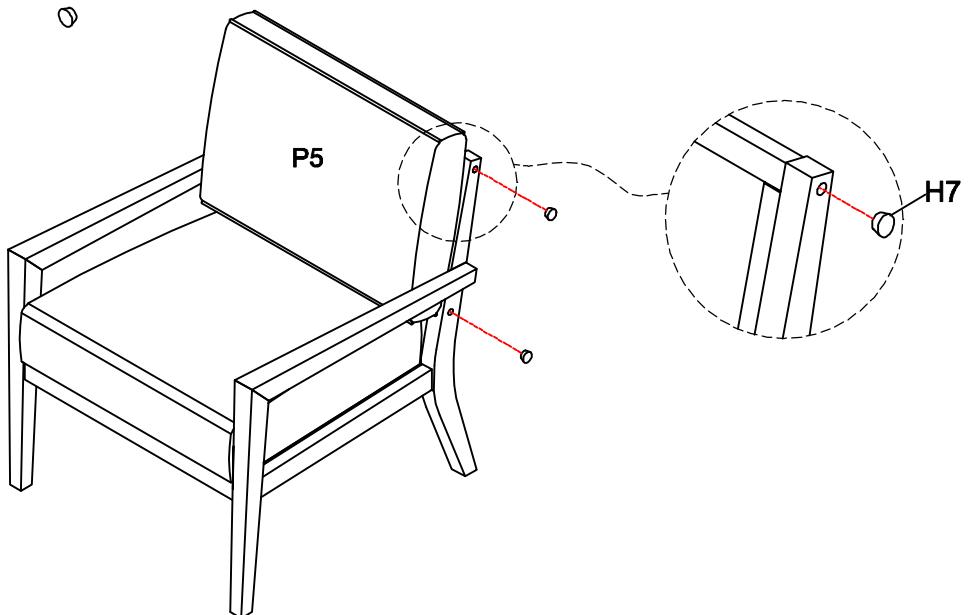

ADDITIONAL NOTE ABOUT SAFETY: BOLTS MAY LOOSEN DURING NORMAL EVERYDAY USE. THEY SHOULD BE PERIODICALLY INSPECTED AND RE-TIGHTENED TO PREVENT DAMAGE OR INJURY. ALWAYS CHECK TO BE SURE THAT ALL HARDWARE IS KEPT TIGHTENED.

Thank you for your purchase