

ASSEMBLY INSTRUCTIONS

Description: Garrett Lounge

Important safety instructions:


- Please carefully read all instructions before assembling.
- For your safety and ease, assembly by two or more adults is recommended.
- Keep instructions for future use.

Pre-assembly:

- Do not discard any contents until after assembly is complete to avoid accidentally discarding small parts or hardware.
- Remove all parts and hardware from box along with any plastic protective packaging.

Parts List

Item	Description	QTY
P1	Left Metal Arm	1
P2	Right Metal Arm	1
P3	Stretchers	2
P4	Back Cushion	1
P5	Seat Cushion	1
P6	Wood Arm Rests	2

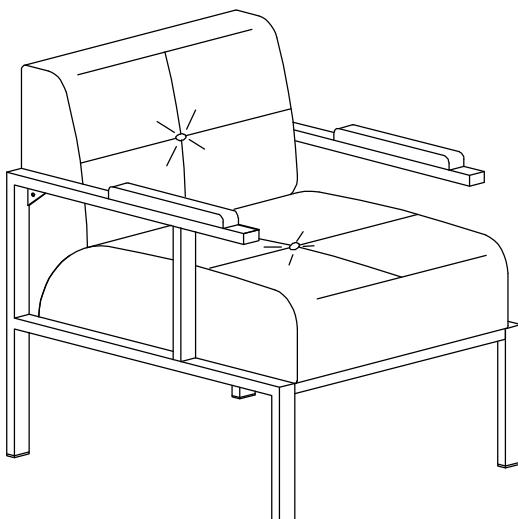


Hardware List

Item	Description	QTY
H1	Short Bolts Ø1/4"**5/8"L	8
H2	Medium Bolts(Short) Ø1/4"**1-1/8"L	2
H3	Countersunk Bolts Ø1/4"**1-3/8"L	4
H4	Medium Bolts(Long) Ø1/4"**2"L	4
H5	Long Bolts Ø1/4"**2-3/8"L	2
H6	Lock Washers 1/4"	2
H7	Flat washers 1/4"	2
H8	Allen Wrench 1/4"	1


Assembly Procedures:

Step 1. Assemble the lounge on a flat, soft surface such as a carpet or cloth to prevent scratching the finish. Attach the stretcher (P3) between the right metal frame (P2) and the left metal frame (P1) as shown below.

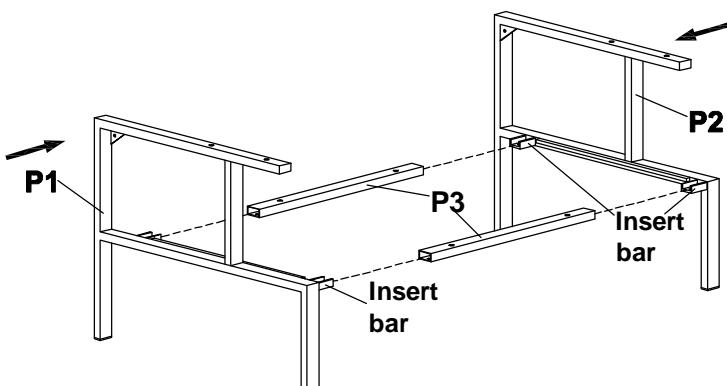


Step 2. Loosely tighten the bolts (H1) to the stretcher and side metal frame (P1 & P2) by Allen wrench (H8).

(H1)x8 **Short Bolts** 
(H8)x1 **Allen Wrench** 

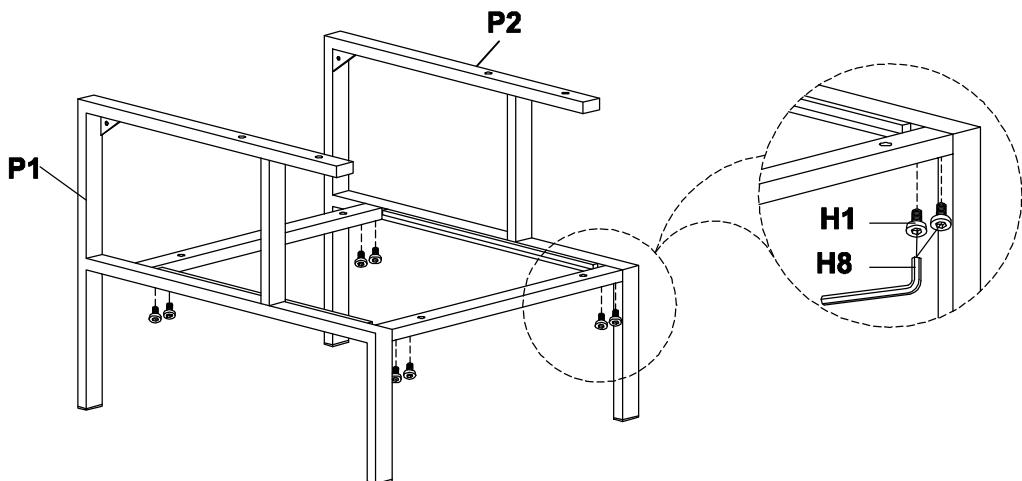

Step 3. Open the bottom covering of seat cushion (P5), then attach the seat cushion (P5) to the back cushion (P4) as shown below. Loosely tighten the bolts with Allen wrench (H8).


(H5)x2 **Long Bolts** 
(H6)x2 **Lock Washers** 
(H7)x2 **Big flat washers** 

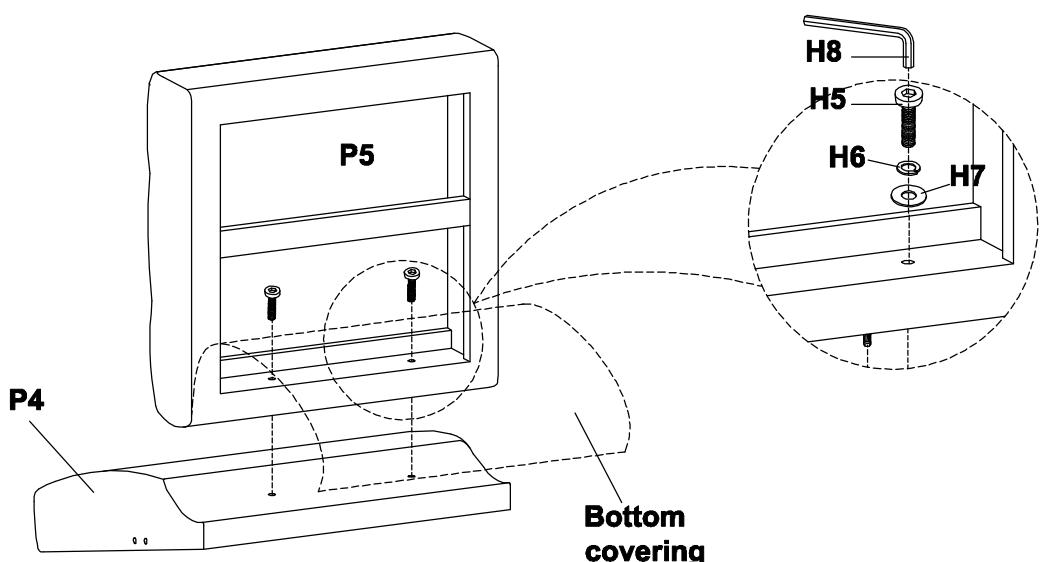

Step 4. Attach the assembled lounge (P4, P5) to the assembled frame (P1, P2, P3) using bolts (H2 & H4). Loosely tighten the bolts with Allen wrench (H8).

(H2)x2 Medium Bolts(Short) 

(H4)x4 Medium Bolts(Long) 

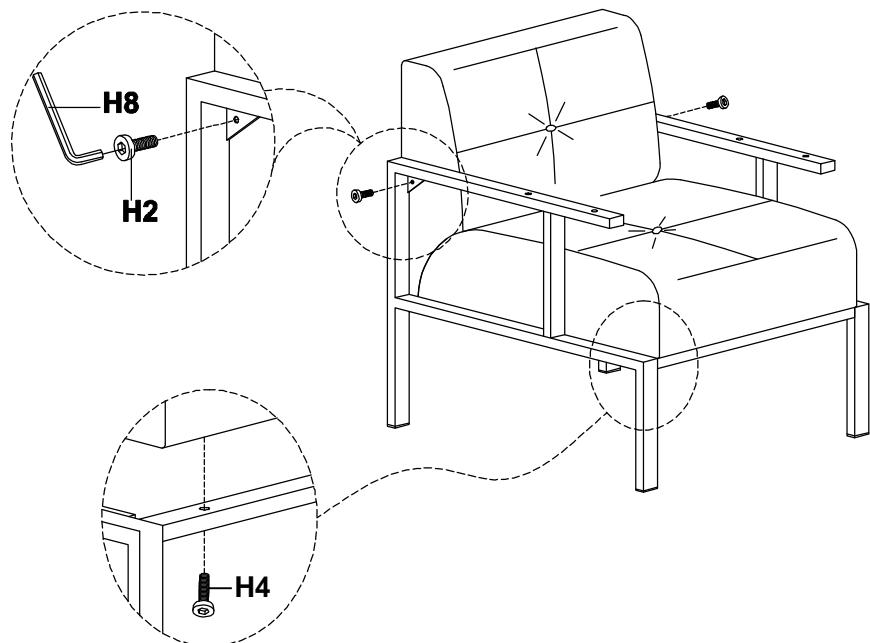


Step 5.

- 1) Attach the arm rests (P6) to the metal arm (P1, P2) following the arrow direction on the bottom of arm rest (P6) and the top of metal arm (P1, P2). Loosely tighten all bolts with Allen wrench (H8).
- 2) Securely tighten all bolts, but do not over tighten the bolts.
- 3) Assembly are complete. Failure to follow these instructions may cause the bolts to misalign during assembly.

(H3)x4 Countersunk Bolts 

Arrow on the bottom of arm rest (P6)

Arrow on the top of metal arm (P1, P2)

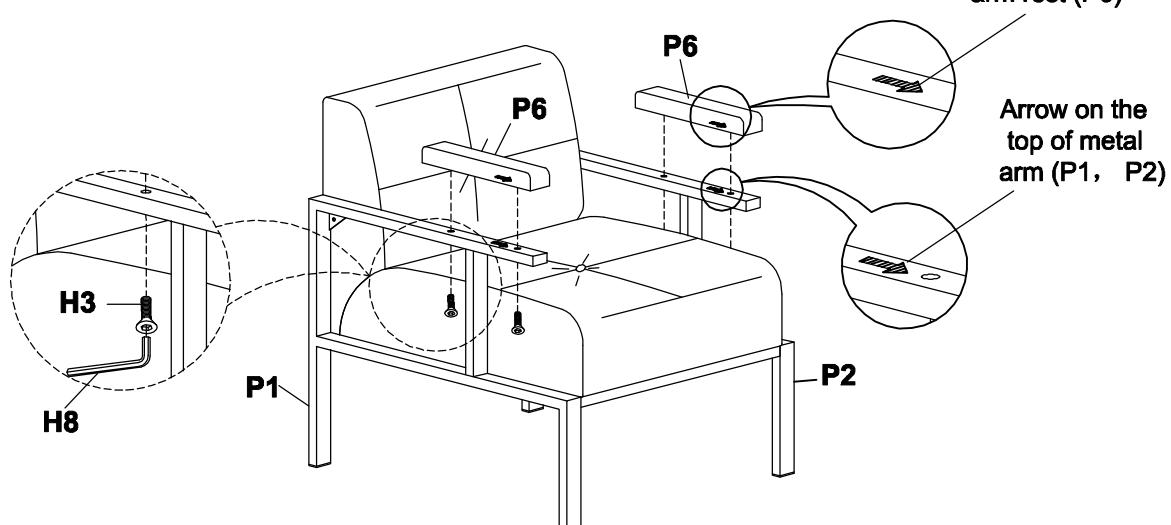

ADDITIONAL NOTE ABOUT SAFETY: BOLTS MAY LOOSEN DURING NORMAL EVERYDAY USE. THEY SHOULD BE PERIODICALLY INSPECTED AND RE-TIGHTENED TO PREVENT DAMAGE OR INJURY. ALWAYS CHECK TO BE SURE THAT ALL HARDWARE IS KEPT TIGHTENED.

Thank you for your purchase