

ASSEMBLY INSTRUCTIONS

Description: Presley Lounge Chair


Important safety instructions:

- Please carefully read all instructions before assembling.
- For your safety and ease, assembly by two or more adults is recommended.
- Keep instructions for future use.

Pre-assembly:


- Do not discard any contents until after assembly is complete to avoid accidentally discarding small parts or hardware.
- Remove all parts and hardware from box along with any plastic protective packaging.

Parts List

Item	Description		QTY
P1	Seat Cushion		1
P2	Back Cushion		1
P3	Left Arm		1
P4	Right Arm		1
P5	Short Rail		3
P6	Long Rail		2

Hardware List

Item	Description		QTY
H1	Short Bolts Ø1/4"**5/8"		10
H2	Medium Bolts Ø1/4"**1"		4
H3	Long Bolts Ø5/16"**1-1/2"		3
H4	Small Lock Washers 1/4"		4
H5	Big Lock Washers 5/16"		3
H6	Small Flat washers 1/4"		4
H7	Big Flat washers 5/16"		3
H8	Small Allen Wrench 1/4"		1
H9	Big Allen Wrench 5/16"		1

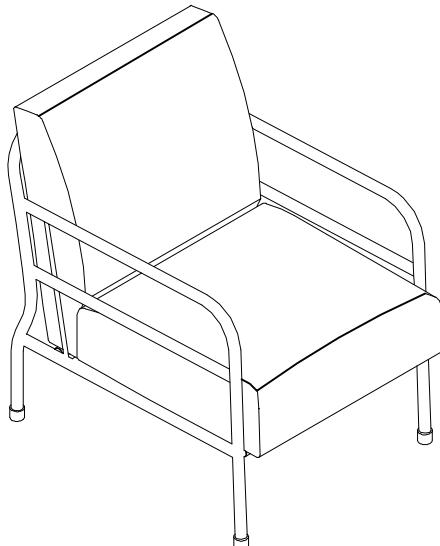


Assembly Procedures:

Step 1. Assemble the lounge on a flat, soft surface such as a carpet or cloth to prevent scratching the finish. Attach short rails (P5) and long rails (P6) to right arm (P4) as shown below. Securely tighten the bolts with small Allen wrench (H8).

(H1)x5 Short Bolts Ø1/4"**5/8" 


(H8)x1 Small Allen Wrench 1/4" 

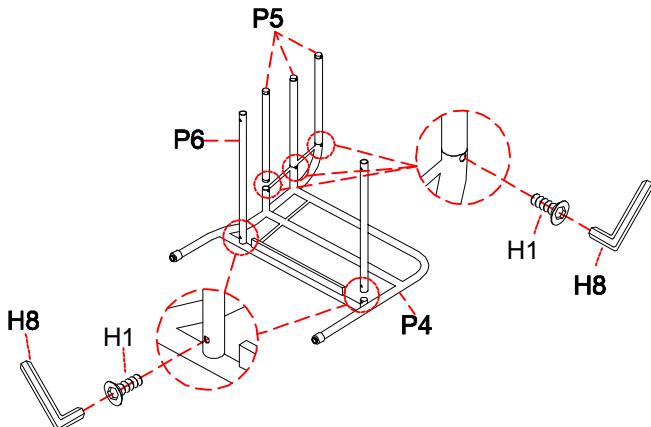

Step 2. Attach left arm (P3) to short rails (P5) and long rails (P6) as shown below. Securely tighten by small Allen wrench (H8).

(H1)x5 Short Bolts Ø1/4"**5/8" 

(H8)x1 Small Allen Wrench 1/4" 

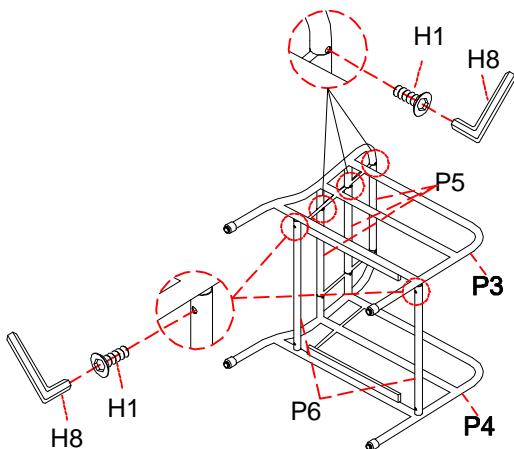


Step 3. Open the bottom covering, then attach seat cushion (P1) to back cushion (P2) as shown below, Loosely tighten by big Allen wrench (H9) .

(H3)x3 Long Bolts Ø5/16"**1-1/2" 

(H5)x3 Big Lock Washers 5/16" 

(H7)x3 Big Flat washers 5/16" 


(H9)x1 Big Allen Wrench 5/16" 

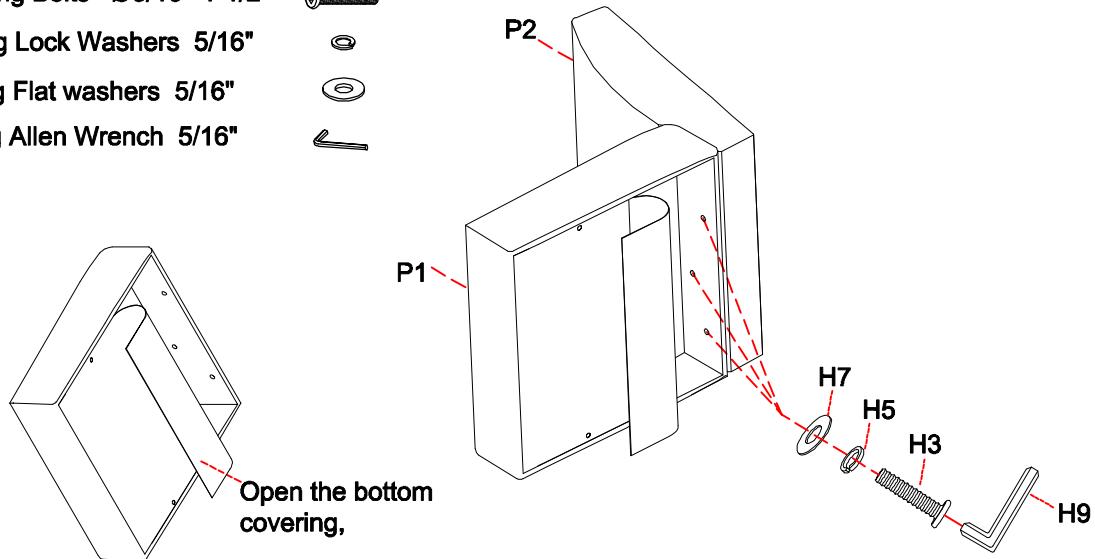

Step 4.


- a. Put the seat cushion (P1) and back cushion (P2) to the assembled lounge frame,
- b. Securely tighten all bolts on Step 4 with big Allen wrench(H9).
- c. Attached the seat cushion (P2) to the assembled lounge frame as shown blow, Securely tighten the bolt with small Allen wrench(H8).

(H3)x4 Medium Bolts Ø 1/4"**1" 
(H4)x4 Small Lock Washers 1/4" 
(H6)x4 Small Flat washers 1/4" 
(H8)x1 Small Allen Wrench 1/4" 

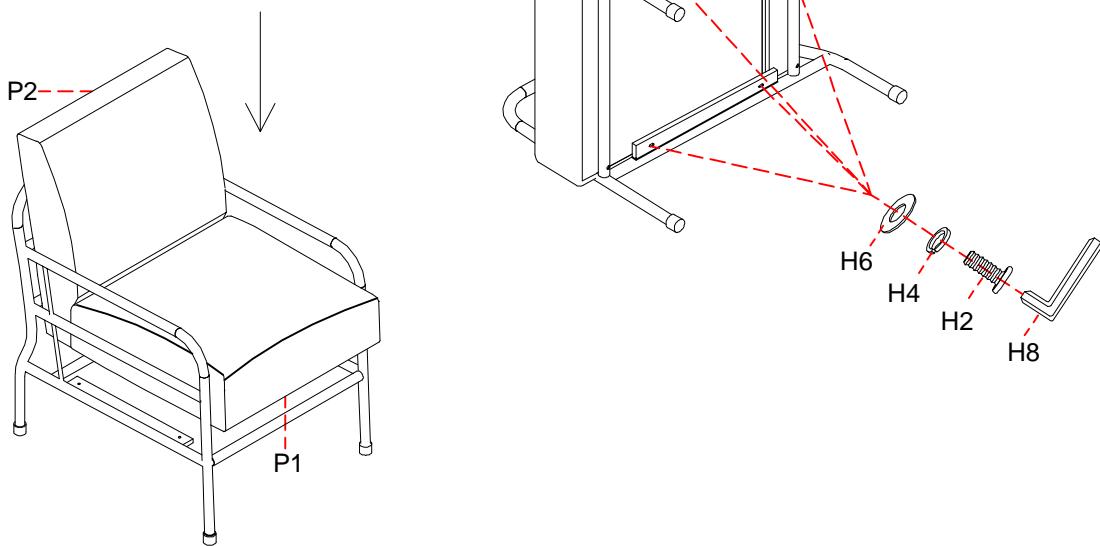

Step 5.

- 1) Turn the assembled lounge to an upright position. Make sure the assembled lounge is level.
- 2) Assembly is complete. **Failure to follow these instructions may cause the bolts to misalign during assembly.**

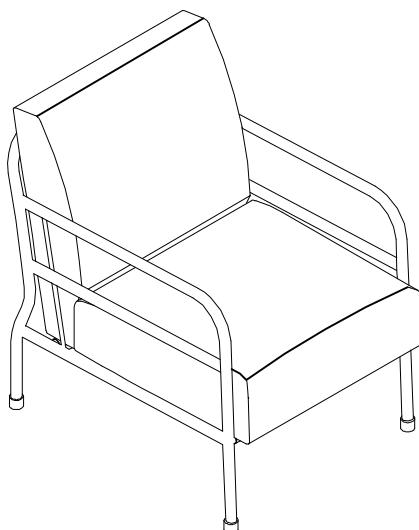

ADDITIONAL NOTE ABOUT SAFETY: BOLTS MAY LOOSEN DURING NORMAL EVERYDAY USE. THEY SHOULD BE PERIODICALLY INSPECTED AND RE-TIGHTENED TO PREVENT DAMAGE OR INJURY. ALWAYS CHECK TO BE SURE THAT ALL HARDWARE IS KEPT TIGHTENED.

Thank you for your purchase