

## ASSEMBLY INSTRUCTIONS

## Description: Molly Corner Chair

## Important safety instructions:


- Please read carefully all instructions before assembly.
- For your safety and ease, assembly by two or more adults is recommended.
- Keep instructions for future use.

## Pre-assembly:

- Do not discard any content until assembly is complete to avoid accidentally discarding small parts or hardware.
- Take out all parts and hardware from box.

## Parts List

Item	Description	QTY
P1	Seat	1
P2	Back	1
P3	Arm	1
P4	Legs	4
P5	Long Pillow	1
P6	Short Pillow	1

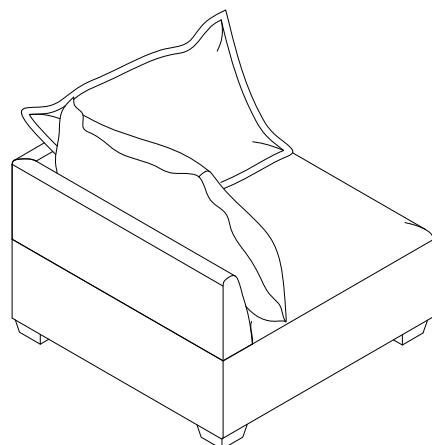

## Hardware List

Item	Description	QTY
H1	Long Bolts Ø 1/4"**2-1/2"	8
H2	Short Bolts Ø 1/4"**1-3/4"	10
H3	Lock Washers 1/4"	18
H4	Flat Washers 1/4"	18
H5	Allen Wrench 1/4"	1

## DISCLAIMER:

WHEN PROPERLY ASSEMBLED, THIS ITEM IS SAFE FOR INTENDED USE. SELLER IS NOT LIABLE FOR ANY DAMAGES RESULTING FROM ITEM BEING IMPROPERLY ASSEMBLED AFTER PURCHASE.

## Assembly Procedures:


Step 1. Assemble the chair on a flat, soft surface such as a carpet or cloth to prevent scratching the finish. To locate the hardware, please turn the chair upside down, you will find the components beneath the fabric cover that is secured by zipper underneath the seat cushion. Legs and hardware box could be located beneath the fabric cover. Open the fabric cover, take out the parts, then attach the back (P2) to the bottom of seat (P1) align the located dowels and the holes as shown below.

(H2)x5 Short Bolts Ø 1/4"\*\*1-3/4"

(H3)x5 Lock Washers 1/4"

(H4)x5 Flat Washers 1/4"

(H5)x1 Allen Wrench 1/4"

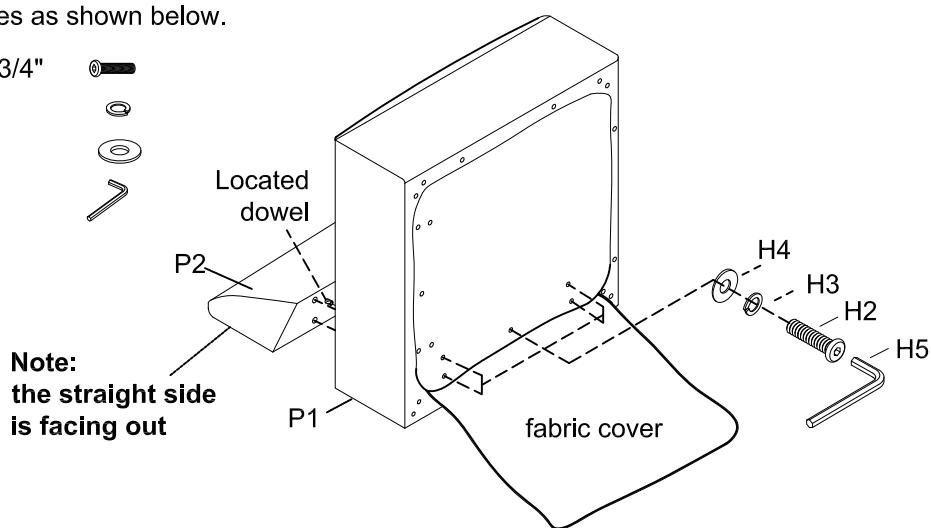

Step 2. Attach the arm (P3) to assembled seat (P1) align the located dowels and the holes as shown.

(H2)x5 Short Bolts Ø 1/4"\*\*1-3/4"




(H3)x5 Lock Washers 1/4"



(H4)x5 Flat Washers 1/4"



(H5)x1 Allen Wrench 1/4"

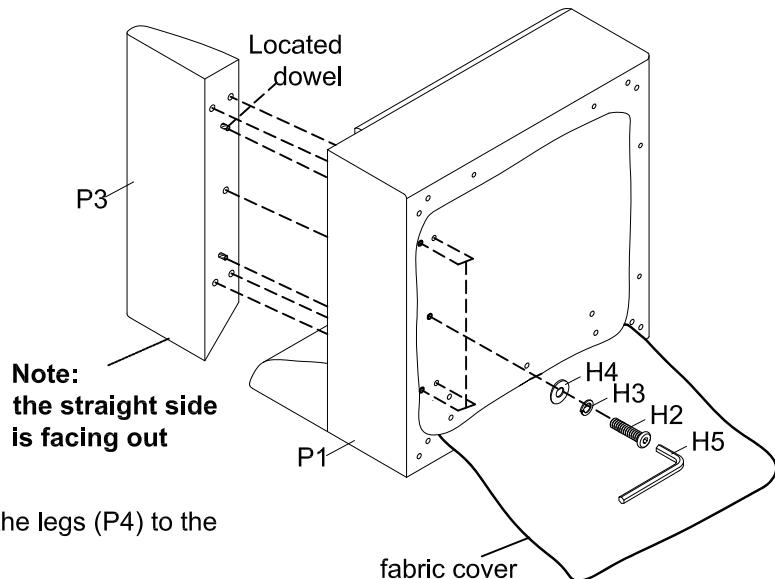

Step 3. Recover the fabric cover, then attach the legs (P4) to the bottom of seat (P1) as shown.

(H1)x8 Long Bolts Ø 1/4"\*\*2-1/2"




(H3)x8 Lock Washers 1/4"



(H4)x8 Flat Washers 1/4"




(H5)x1 Allen Wrench 1/4"

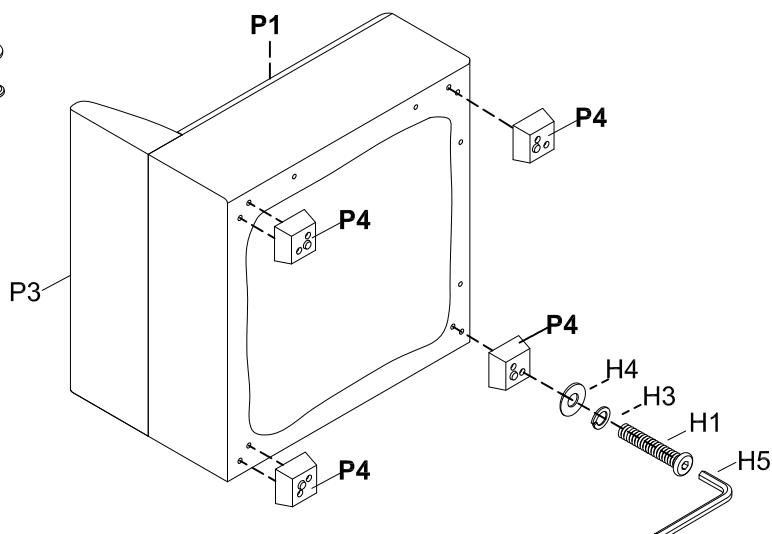

Step 4. Securely tighten all bolts with Allen wrench (H4), turn the assembled chair to an upright position. Put the pillows (P5 & P6) on the the chair, assembly is complete.

**Failure to follow these instructions may cause the bolts to misalign during assembly.**

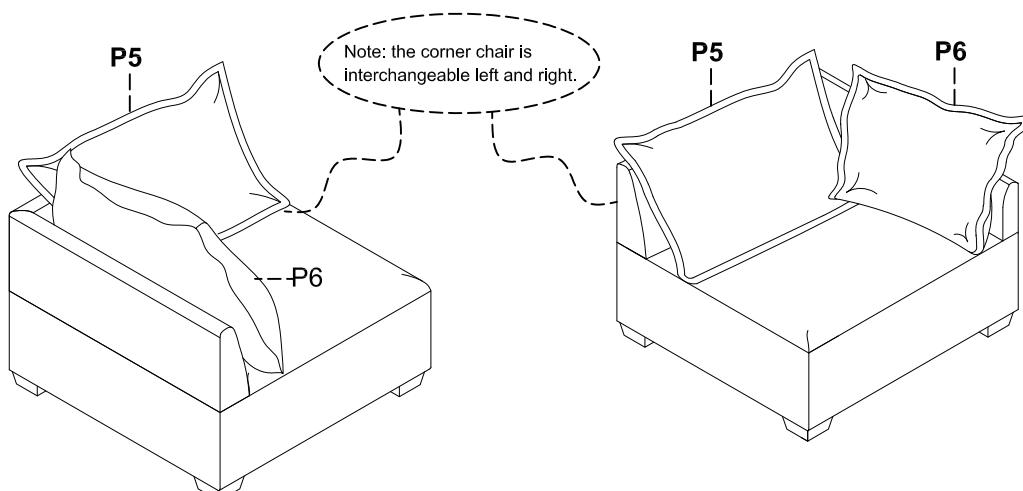

**ADDITIONAL NOTE ABOUT SAFETY:**

**BOLTS MAY LOOSEN DURING NORMAL EVERYDAY USE.**

**THEY SHOULD BE INSPECTED AT LEAST EVERY 3 MONTHS AND RE-TIGHTENED AS NEEDED TO PREVENT DAMAGE OR INJURY, AND ENSURE STABILITY.**

Thank you for your purchase