



# DANNON RECLINER

## Assembly Instruction:

### PARTS LIST

No.	DESCRIPTION	IMAGE	QTY
P1	FRONT LEGS		2
P2	BACK LEGS		2
P3	BACKREST		1
P4	SEAT		1

### HARDWARE LIST


No.	DESCRIPTION	IMAGE	QTY
H1	Bolts $\varphi 5/16*1"$		8
H2	Allen Wrench $\varphi 5/16"$		1

**NOTE:**PO# is located underneath/inside of each item. Please be prepared to provide this # should any claim be necessary.


**CAUTION:** Item is heavy assembly should be performed by two people.

Estimate assembly time: 5 minutes

Step1.1.Lay the Seat(P4) upside down on protective carpet ,Take out the legs and hardwares underneath the seat.

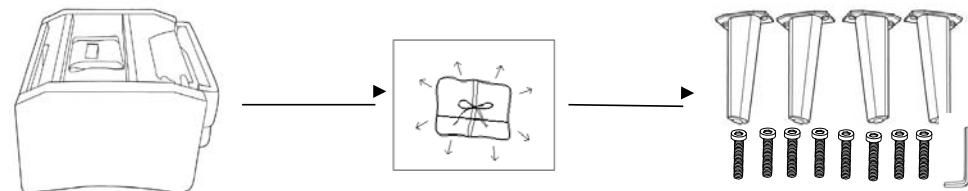

Step 2. Attach the Legs(P1&P2) to the seat frame by using Bolts (H1). Securely tighten all bolts with Allen Wrench (H2). Insert the small metal arms on the sides of the Chair Backrest(P3) into the prefabricated slide lock gadget on the Chair Seat(P4) as shown above.

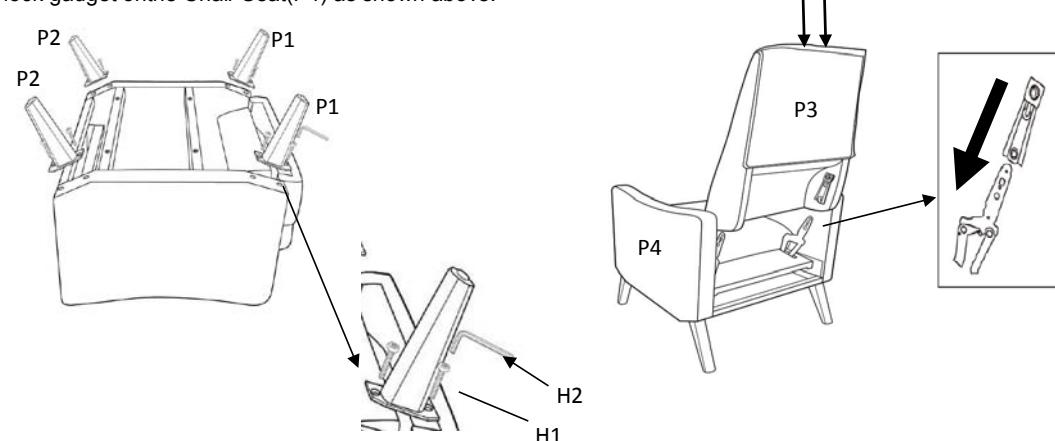

Step3.Smooth down the fabric flap on the Chair Backrest.Run your hands down both sides of the flap,from top to bottom,allowing the velcro tape to adhere to the flap under the seat of the chair.

