

ASSEMBLY INSTRUCTIONS

Description: Alina Counter stool
Alina Bar stool








Important safety instructions:

- Please carefully read all instructions before assembling.
- For your safety and ease, assembly by two or more adults is recommended.
- Keep instructions for future use.






Pre-assembly:


- Do not discard any contents until after assembly is complete to avoid accidentally discarding small parts or hardware.
- Remove all parts and hardware from box along with any plastic protective packaging.

Parts List

Item	Description		QTY
P1	Chair Top		1
P2	Front Legs		2
P3	Back Left Leg	 (P3)	1
P4	Back Right Leg	 (P4)	1
P5	Back Stretcher	 (P5)	1
P6	Front Stretcher	 (P6)	1
P7	Side Stretchers		2

Hardware List

Item	Description		QTY
H1	Bolts Ø5/16"x2"L		8
H2	Lock Washers 5/16"		8
H3	Flat Washers 5/16"		8
H4	Allen Wrench 5/16"		1
H5	Screws #8*1-1/2"		8

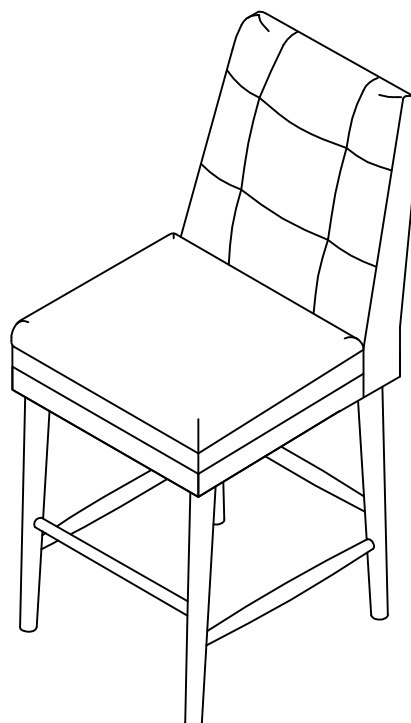

Assembly Procedures:

Step 1. Assemble the stool on a flat, soft surface such as a carpet or cloth to prevent scratching the finish. Insert stretcher (P5) between the back left leg (P3) and right leg (P4) following the labels "P3", "P4", "P5" on the back left leg (P3), back right leg (P4) and back stretcher (P5), then loosely attach back right leg (P4) to the bottom of chair top (P1) as shown below.

(H1)x4 Bolts Ø5/16"x2"L




(H2)x4 Lock Washers 5/16"



(H3)x4 Flat Washers 5/16"



(H4)x1 Allen Wrench 5/16"

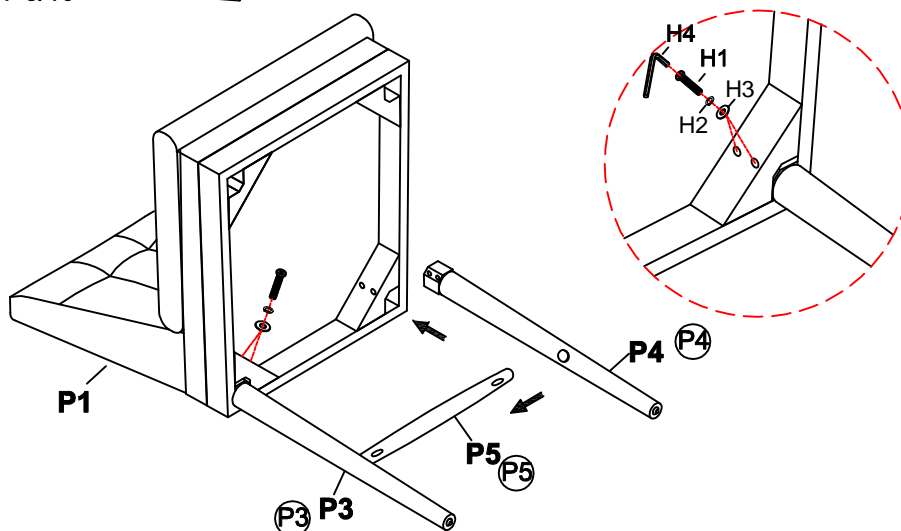

Step 2. Insert one side stretcher (P7) between the back right leg (P4) and one front leg (P2), then loosely attach front leg (P2) to bottom of chair top (P1) as shown below.


(H1)x2 Bolts Ø5/16"x2"L



(H2)x2 Lock Washers 5/16"




(H3)x2 Flat Washers 5/16"

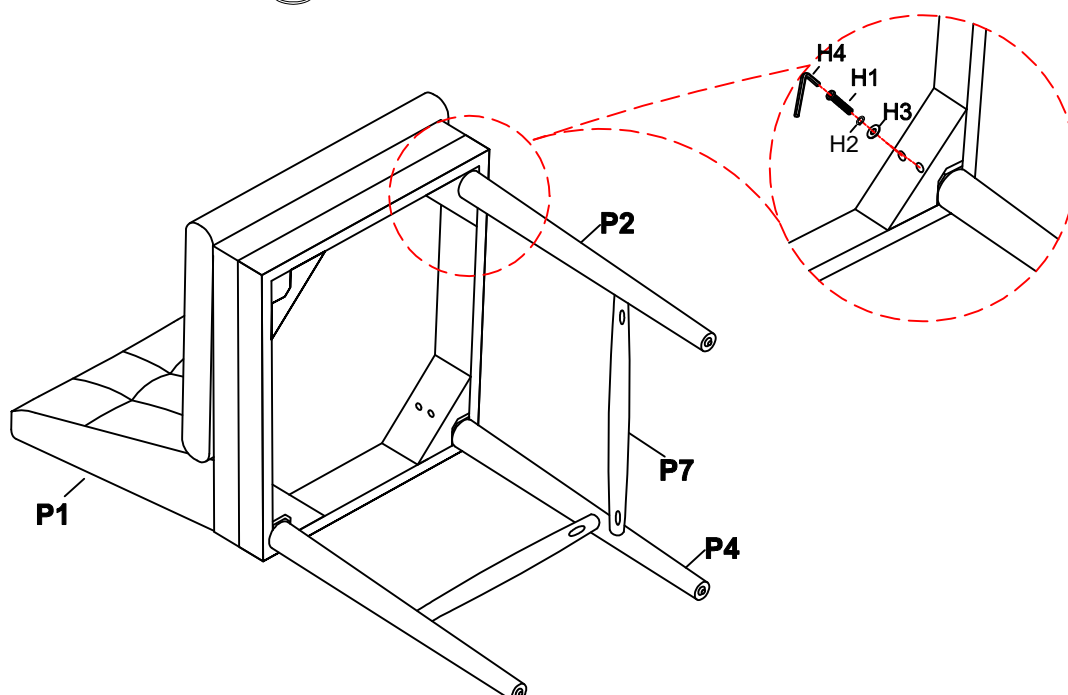

Step 3.


- 1) Insert front stretcher (P6) and side stretcher (P7) to the assembled legs (P2,P3) following the label "P6" on the front leg (P6), then attach last front leg (P2) to chair top as shown below.
- 2) Make sure the screw holes face to the bottom of leg, then tighten all screws (H5) through the stretchers (P5, P6, P7) to the front legs and back legs with screw driver(not provided).

- | | | | |
|--------|--------------|------------|---|
| (H1)x2 | Bolts | Ø5/16"x2"L |  |
| (H2)x2 | Lock Washers | 5/16" |  |
| (H3)x2 | Flat Washers | 5/16" |  |
| (H5)x8 | Screws | #8*1-1/2" |  |

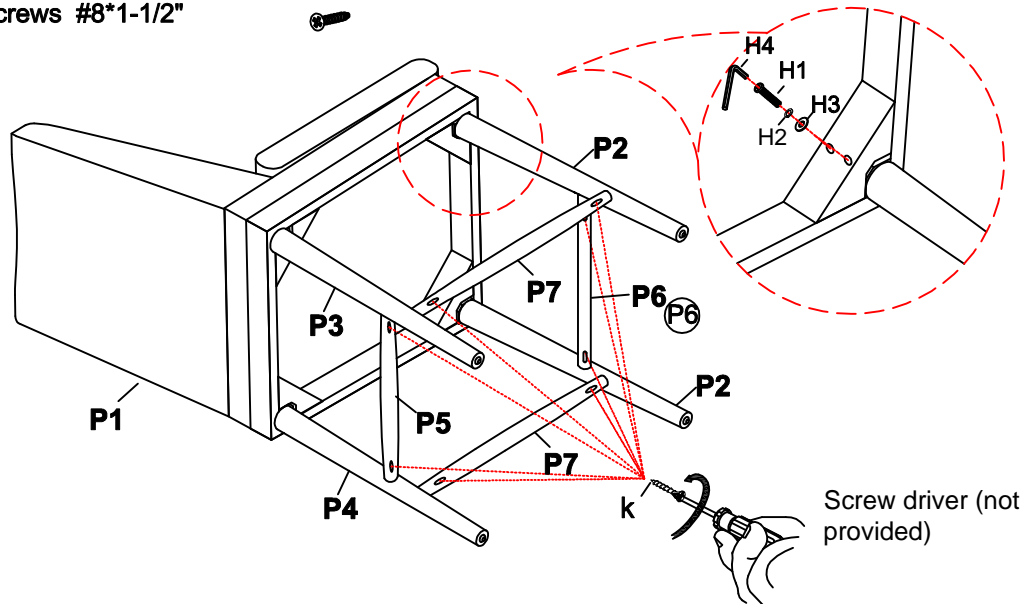

Step 4.

- 1) Make sure the stool is level and securely tighten all bolts by Allen wrench (H4). Turn the assembled stool to an upright position
- 2) Assembly is complete. **Failure to follow these instructions may cause the bolts to misalign during assembly.**

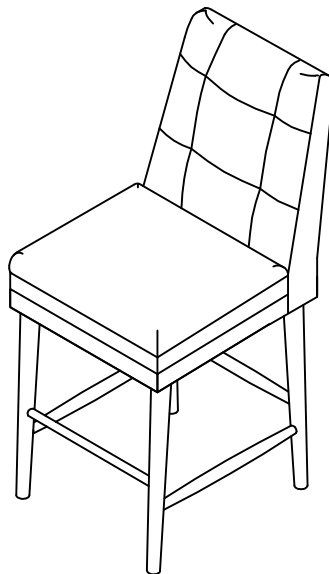

ADDITIONAL NOTE ABOUT SAFETY: BOLTS MAY LOOSEN DURING NORMAL EVERYDAY USE. THEY SHOULD BE PERIODICALLY INSPECTED AND RE-TIGHTENED TO PREVENT DAMAGE OR INJURY. ALWAYS CHECK TO BE SURE THAT ALL HARDWARE IS KEPT TIGHTENED.

Thank you for your purchase