

ASSEMBLY INSTRUCTIONS


Description: Orlando Counter Stool

Important safety instructions:

- Please read carefully all instructions before assembly.
- For your safety and ease, assembly by two or more adults is recommended.
- Keep instructions for future use.

Pre-assembly:

- Do not discard any content until assembly is complete to avoid accidentally discarding small parts or hardware.
- Take out all parts and hardware from box.


Item	Description	QTY
P1	Bar Stool Back	
P2	Seat Cushion	
P3	Front Left Leg	 P3
P4	Front Right Leg	 P4
P5	Left Stretcher	 P5
P6	Right Stretcher	 P6
P7	Front Stretcher	

Hardware List

Item	Description	QTY
H1	Long Bolts Ø5/16"**2-1/2"	
H2	Short Bolts Ø5/16"**2"	
H3	Flat Washers Ø5/16"	
H4	Lock Washers Ø5/16"	
H5	Allen Wrench Ø5/16"	
H6	Screws #8*1-1/4"	

DISCLAIMER:

WHEN PROPERLY ASSEMBLED, THIS ITEM IS SAFE FOR INTENDED USE. SELLER IS NOT LIABLE FOR ANY DAMAGES RESULTING FROM ITEM BEING IMPROPERLY ASSEMBLED AFTER PURCHASE.

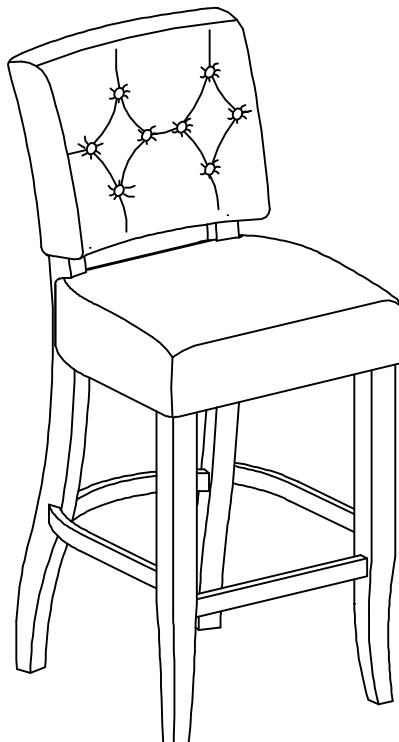

Assembly Procedures:


Step 1. Assemble the counter stool on a flat, soft surface such as a carpet or cloth to prevent scratching the finish. Attach the seat cushion (P2) to the stool back (P1). securely tighten all bolts with Allen wrench (H5).

(H1)x4 Long Bolts Ø5/16" *2-1/2" 

(H3)x4 Flat Washers Ø5/16" 

(H4)x4 Lock Washers Ø5/16" 

(H5)x1 Allen Wrench Ø5/16" 

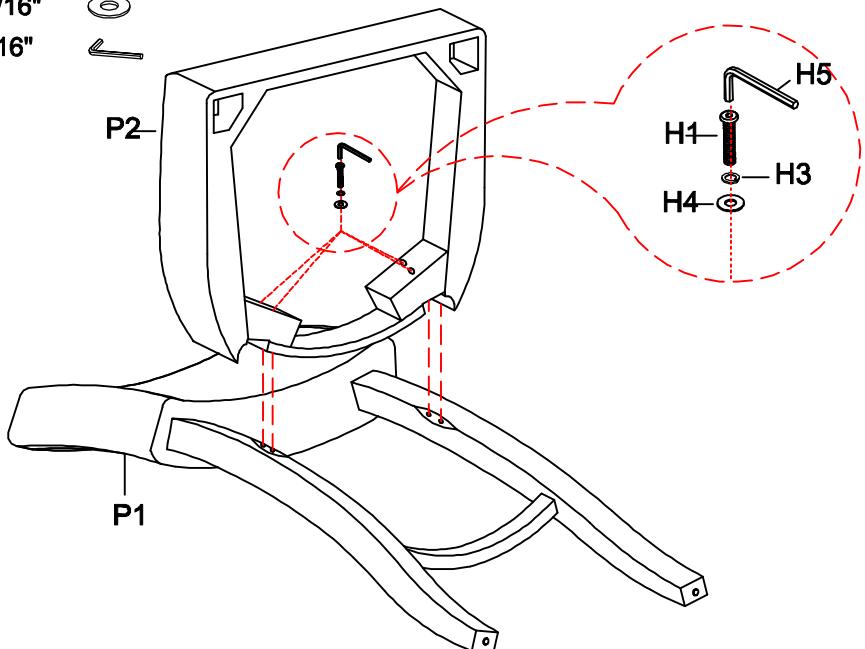


Step 2. Insert the left stretcher (P5) to the leg of stool back (P1) according to the label "P5" at the hole in the leg of stool back and the front end of left stretcher (P5). Loosely attach the front leg (P3) to the bottom of seat cushion (P2) and the left stretcher (P5) according to the label "L" as shown below. Securely tighten all bolts with Allen wrench (H5). Do not tighten the bolts at this time.

(H2)x2 Short Bolts Ø5/16" *2" 

(H3)x2 Flat Washers Ø5/16" 

(H4)x2 Lock Washers Ø5/16" 

(H5)x1 Allen Wrench Ø5/16" 

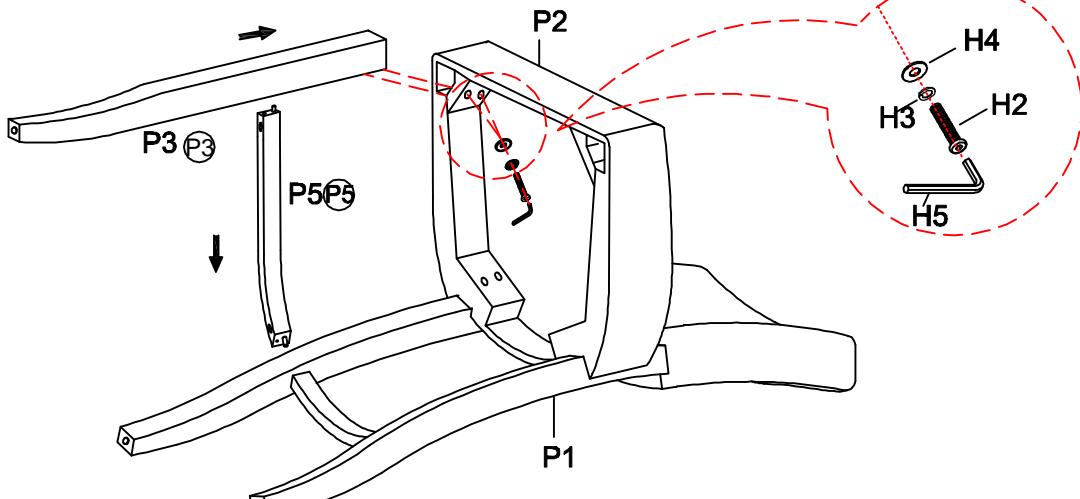

Step 3.

- 1) Insert the right stretcher (P6) to the leg of counter stool back (P1) according to the label "P6" at the hole in the leg of stool back and the front end of right stretcher (P6). Loosely attach the front leg (P4) to the seat (P2) according to the label "P4" as shown below. Securely tighten all bolts with Allen wrench (H6).
- 2) Insert the front stretcher (P7) between the front legs.
- 3) Securely tighten all bolts, but do not over tighten the bolts.
- 4) Tighten all screws (H7) through the stretchers (P5, P6, P7) to the front legs and stool back legs with screw driver(not provided).


(H2)x2 Short Bolts Ø5/16" *2" 

(H3)x2 Flat Washers Ø5/16" 


(H4)x2 Lock Washers Ø5/16" 

(H5)x1 Allen Wrench Ø5/16" 

(H6)x6 Screws #8*1-1/4" 

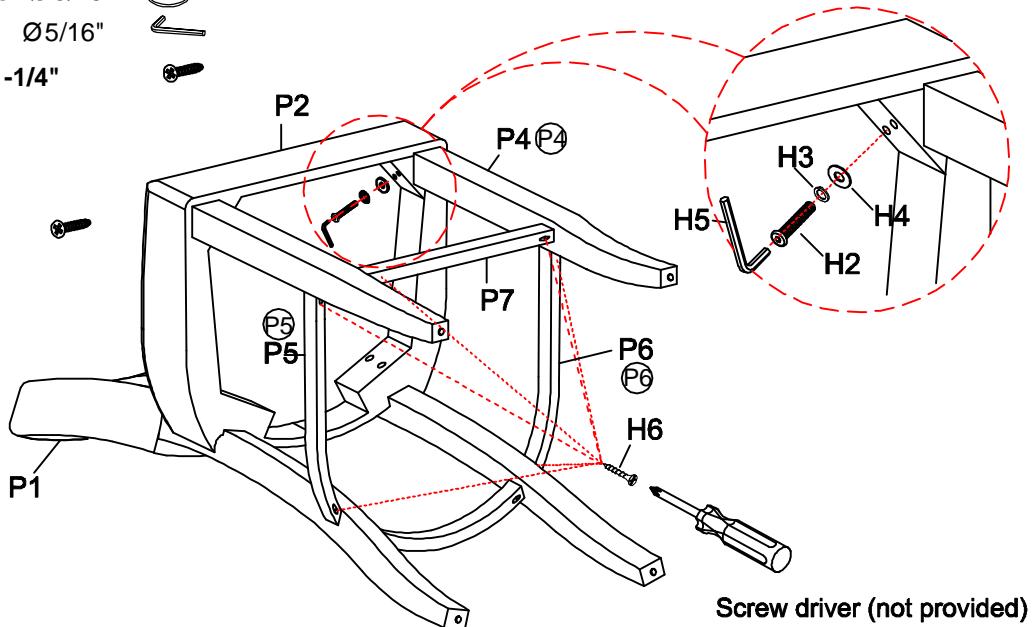

Step 4. Turn the assembled stool to an upright position. Securely tighten all bolts with Allen wrench (e).
Assembly is complete.

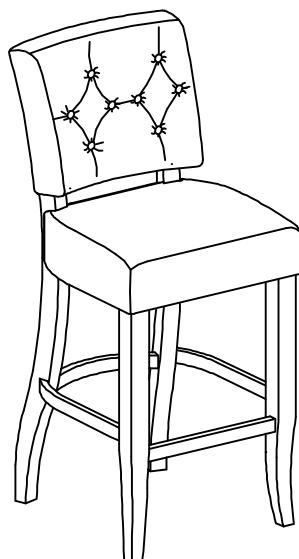

ADDITIONAL NOTE ABOUT SAFETY: BOLTS MAY LOOSEN DURING NORMAL EVERYDAY USE. THEY SHOULD BE PERIODICALLY INSPECTED AND RE-TIGHTENED TO PREVENT DAMAGE OR INJURY. ALWAYS CHECK TO ENSURE THAT ALL HARDWARE IS KEPT TIGHTENED.

Thank you for your purchase