

Description: Nola Counter stool**Important safety instructions:**


- Please carefully read all instructions before assembling.
- For your safety and ease, assembly by two or more adults is recommended.
- Keep instructions for future use.

Pre-assembly:

- Do not discard any contents until after assembly is complete to avoid accidentally discarding small parts or hardware.
- Remove all parts and hardware from box along with any plastic protective packaging.

Parts List

Item	Description	QTY
P1	Chair Top	1
P2	Legs 1	2
P3	Legs 2	2
P4	Front Stretcher(Long)	1
P5	Side Stretcher(Middle)	2
P6	Back Stretcher (Short)	1

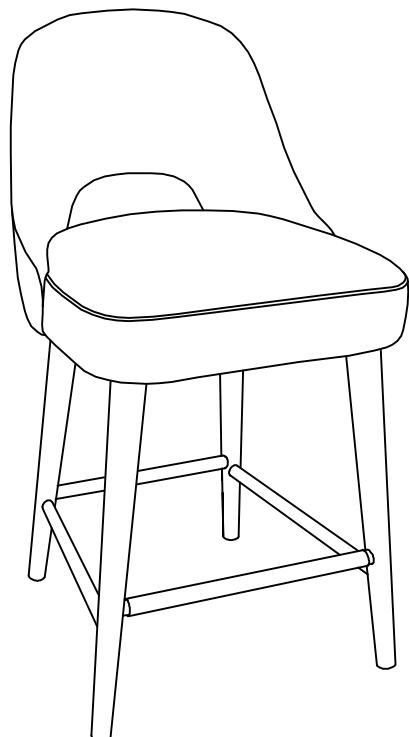
**Hardware List**

Item	Description	QTY
H1	Bolts Ø5/16" *2"	8
H2	Lock Washers 5/16"	8
H3	Flat Washers 5/16"	8
H4	Allen Wrench 5/16"	1
H5	Screws #8*1-1/2"	8

Assembly Procedures:


Step 1. Assemble the stool on a flat, soft surface such as a carpet or cloth to prevent scratching the finish. Insert front stretcher(Long) (P4) between the leg 1(P2) and leg 2 (P3) following the labels "P2", "P3", "P4" on the leg 1 (P2), leg 2 (P3) and front stretcher (P4) accordingly, then loosely attach leg 1 (P2) and leg 2 (P3) to the bottom of chair top (P1) as shown below.

(H1)x4	Bolts	$\varnothing 5/16" * 2" L$	
(H2)x4	Lock Washers	5/16"	
(H3)x4	Flat Washers	5/16"	
(H4)x1	Allen Wrench	5/16"	

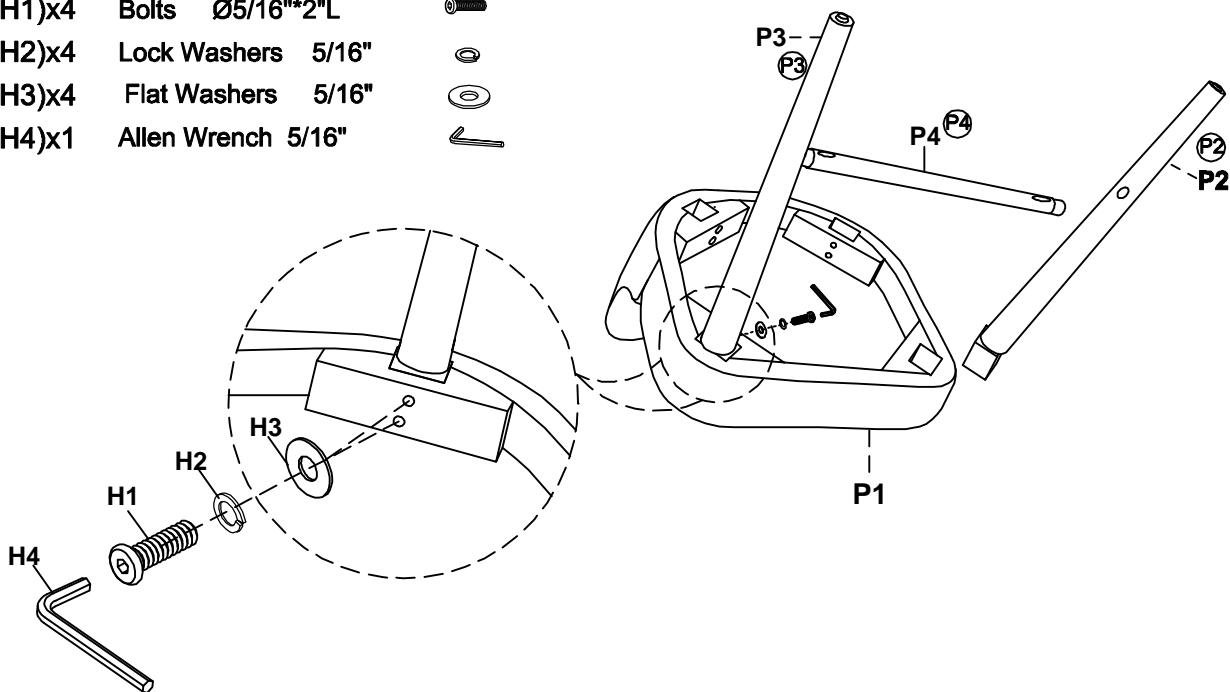

Step 2. Insert one side stretcher (P5) between leg 1 (P2) and leg 2 (P3), then loosely attach leg 2 (P3) to bottom of chair top (P1) as shown below.

(H1)x2	Bolts	$\varnothing 5/16" * 2" L$	
(H2)x2	Lock Washers	5/16"	
(H3)x2	Flat Washers	5/16"	
(H4)x1	Allen Wrench	5/16"	

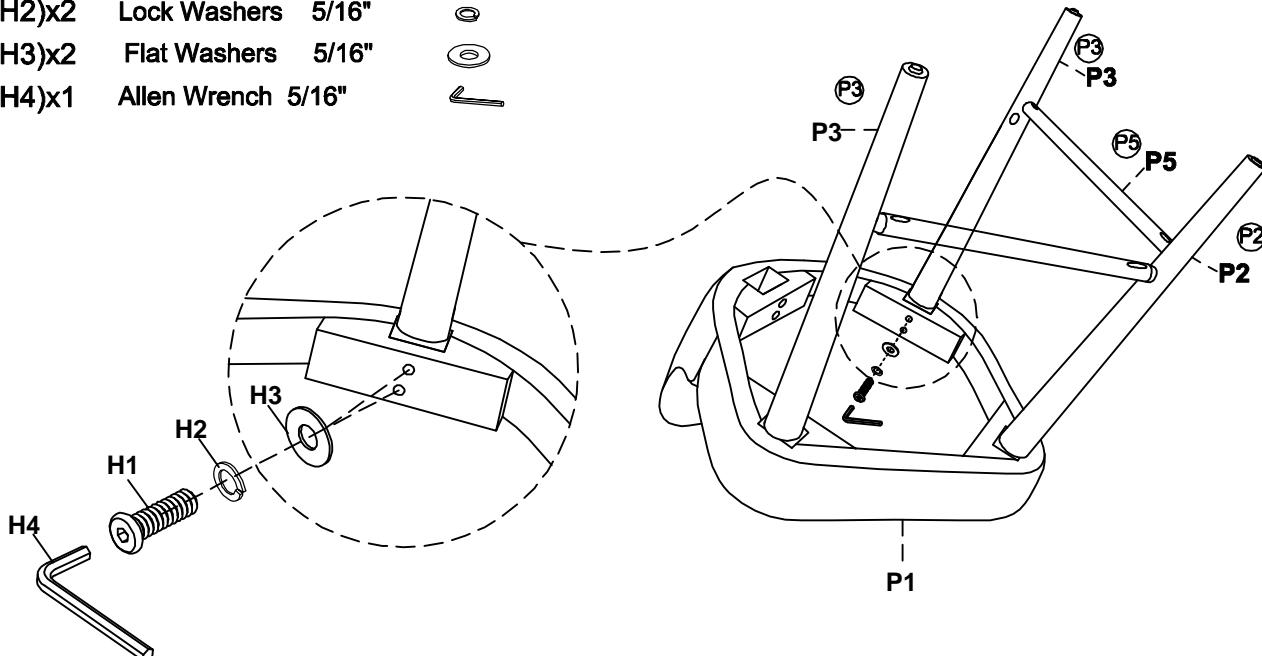

Step 3.

1) Insert back stretcher (P6) and side stretcher (P5) between the assembled the legs (P2,P3) and last leg 1(P2) following the label (P5, P6) on the back stretcher (Short) (P6) and side stretcher (Middle) (P5) as shown below. Loosely attach last leg 1 (P2).

2) Tighten all screws (H5) through the stretchers (P4, P5, P6) to the legs 1(P2) and legs 2 (P3) with screw driver(not provided).

(H1)x2 Bolts Ø5/16" *2" L



(H2)x2 Lock Washers 5/16"



(H3)x2 Flat Washers 5/16"




(H4)x1 Allen Wrench 5/16"



(H5)x8 Screws #8*1-1/2"




Screw driver (not provided)

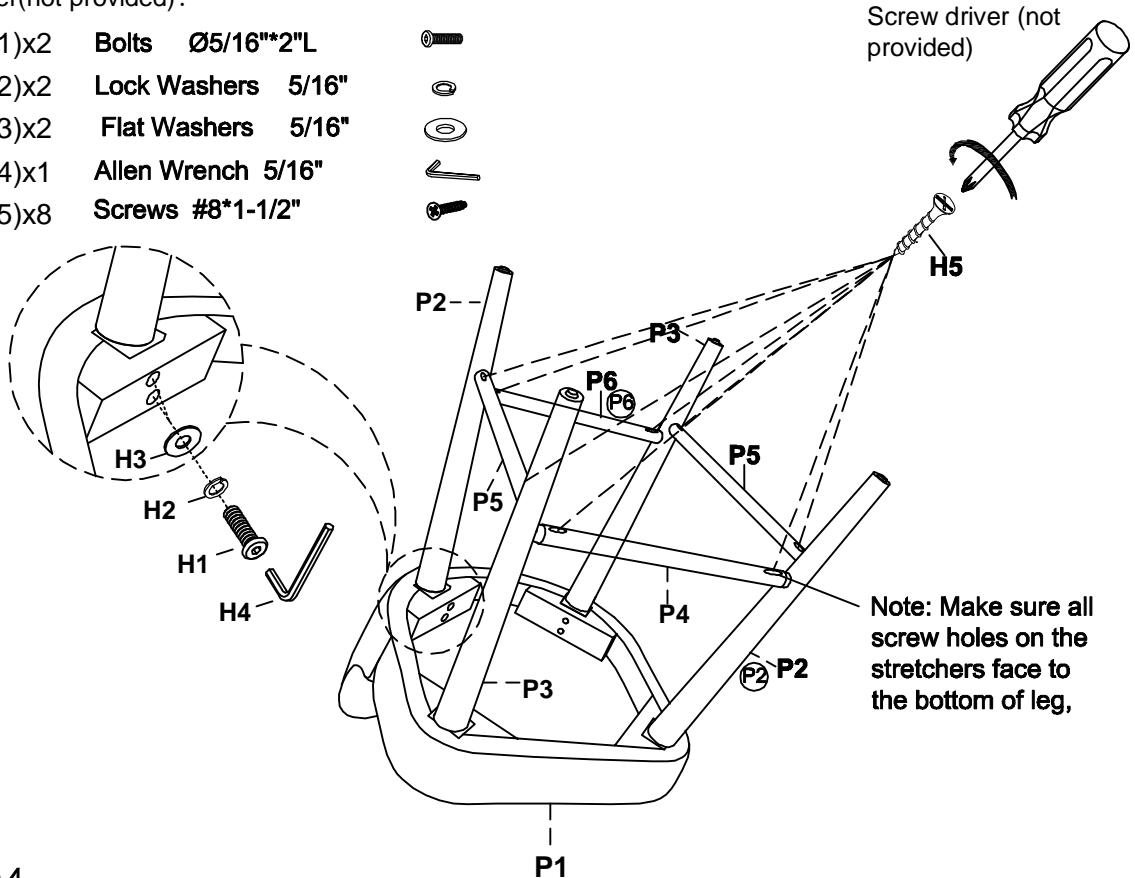

Step 4.

1) Make sure the stool is level and securely tighten all bolts by Allen wrench (H4). Turn the assembled stool to an upright position

2) Assembly is complete. **Failure to follow these instructions may cause the bolts to misalign during assembly.**

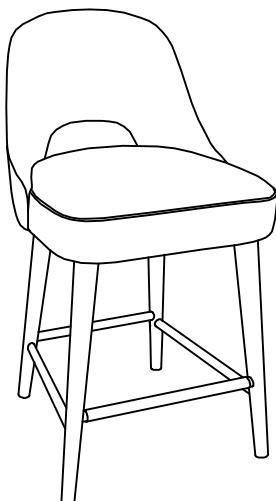

ADDITIONAL NOTE ABOUT SAFETY: BOLTS MAY LOOSEN DURING NORMAL EVERYDAY USE. THEY SHOULD BE PERIODICALLY INSPECTED AND RE-TIGHTENED TO PREVENT DAMAGE OR INJURY. ALWAYS CHECK TO BE SURE THAT ALL HARDWARE IS KEPT TIGHTENED.

Thank you for your purchase