

ASSEMBLY INSTRUCTIONS

Description: Kelly Cane Arm Bench





Important safety instructions:

- Please carefully read all instructions before assembling.
- For your safety and ease, assembly by two or more adults is recommended.
- Keep instructions for future use.







Pre-assembly:


- Do not discard any contents until after assembly is complete to avoid accidentally discarding small parts or hardware.
- Remove all parts and hardware from box along with any plastic protective packaging.

Parts List

Item	Description		QTY
P1	Seat Cushion		1
P2	Back Frame		1
P3	Left Arm	 (P3)	1
P4	Right Arm	 (P4)	1





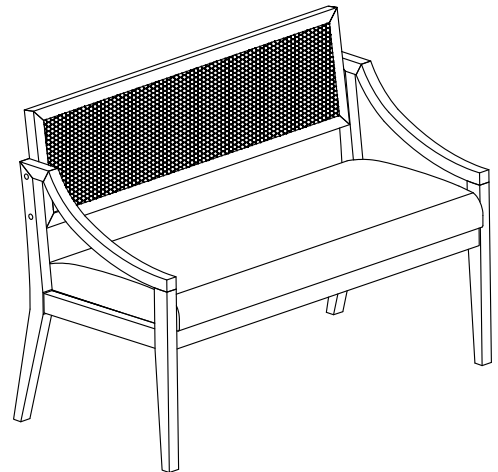Hardware List


Item	Description		QTY
H1	Long Bolts	 Ø1/4"*1-1/2"	14
H2	Lock Washers	 1/4"	14
H3	Small Flat washers	 1/4"*12mm	4
H4	Big Flat washers	 1/4"*19mm	10
H5	Wooden Plugs		4
H6	Allen Wrench	 1/4"	1







Assembly Procedures:

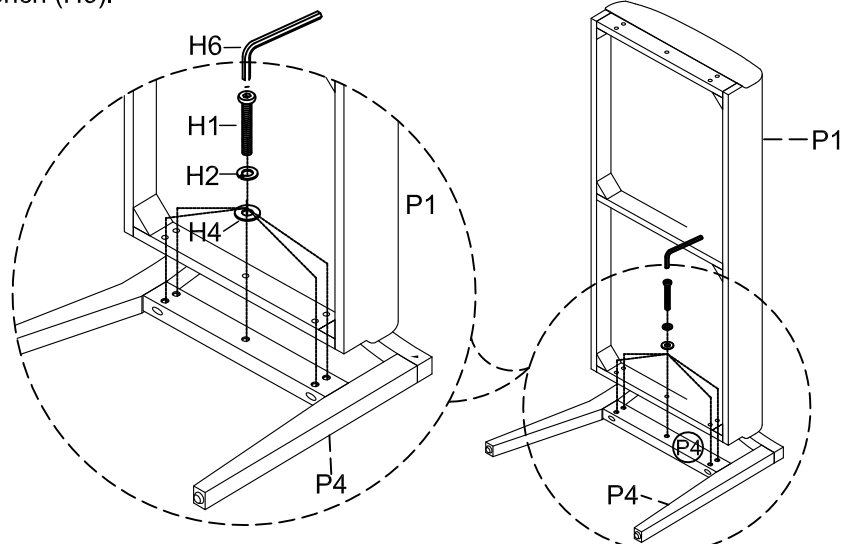
Step 1. Assemble the bench on a flat, soft surface such as a carpet or cloth to prevent scratching the finish. Attach seat cushion (P1) to right arm (P4), please note the label "P4" on the left arm (P4) as shown below. Loosely tighten the bolts with Allen wrench (H6).

- (H1)x5 Bolts 
- (H2)x5 Lock Washers 
- (H4)x5 Big Flat washers 
- (H6)x1 Allen Wrench 





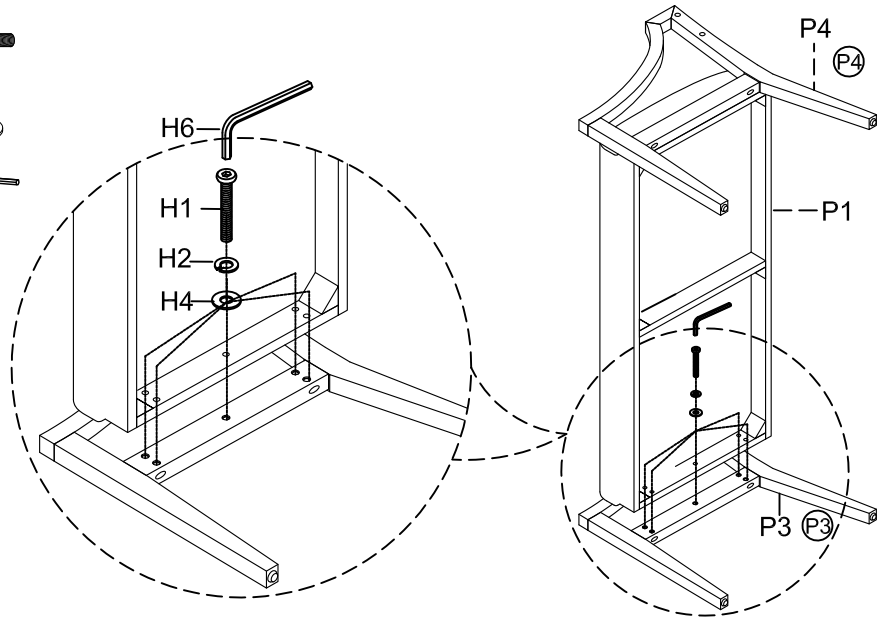


Step 2. Loosely attach the assembled cushion (P1) to left arm (P3) as shown below. Loosely tighten the bolts with Allen wrench (H6).

- (H1)x5 Bolts 
- (H2)x5 Lock Washers 
- (H4)x5 Big Flat washers 
- (H6)x1 Allen Wrench 



Step 3. Loosely attach the back frame (P2) to left arm (P3) and right arm (P4) as shown below. Loosely tighten the bolts with Allen wrench (H6).


- (H1)x4 Bolts 
- (H2)x4 Lock Washers 
- (H3)x4 Small Flat washers 
- (H6)x1 Allen Wrench 

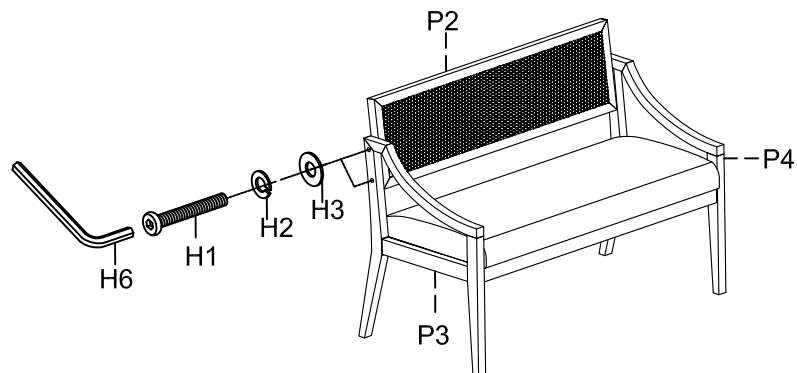

Step 5.

- 1) Make sure the assembled bench is level and securely tighten all the bolts with Allen wrench (H6).
- 2) Attach wooden plugs (H5) to each exposed bolt holes, tighten with rubber hammer to knock the wooden plug till its tighten. **Note:** use a soft cloth between the wooden plug and hammer to prevent damage to wooden plug finish.
- 3) To level bench. After completing all other steps, stand the bench upright on all four legs. If there is a gap between a leg and the floor, please adjust the adjustable leveler up or down under each leg..
- 4) Assembly is complete. **Failure to follow these instructions may cause the bolts to misalign during assembly.**

- (H5)x4 Wooden Plugs 

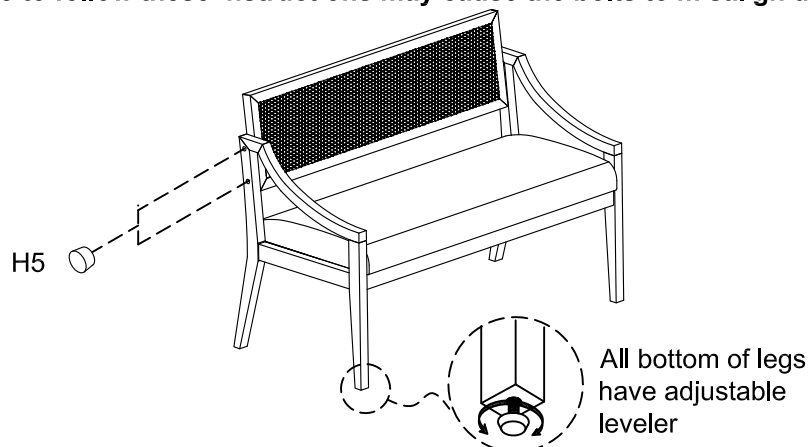

ADDITIONAL NOTE ABOUT SAFETY: BOLTS MAY LOOSEN DURING NORMAL EVERYDAY USE. THEY SHOULD BE PERIODICALLY INSPECTED AND RE-TIGHTENED TO PREVENT DAMAGE OR INJURY. ALWAYS CHECK TO BE SURE THAT ALL HARDWARE IS KEPT TIGHTENED.