

ASSEMBLY INSTRUCTIONS

Description: Loveseat

Important safety instructions:


- Please carefully read all instructions before assembling the loveseat.
- For your safety and ease, assembly by two or more adults is recommended.
- Keep instructions for future use.

Pre-assembly:

- Do not discard any contents until after assembly is complete to avoid accidentally discarding small parts or hardware.
- Remove all parts and hardware from box along with any plastic protective packaging.

Parts List

Item	Description	QTY
P1	Back Top Rail	1
P2	Seat Metal Frame	1
P3	Stretcher	1
P4	Left Side Metal Frame	1
P5	Right Side Metal Frame	1
P6	Back Cushion	1
P7	Seat Cushion	1
P8	Upholstery Arm Rests	2

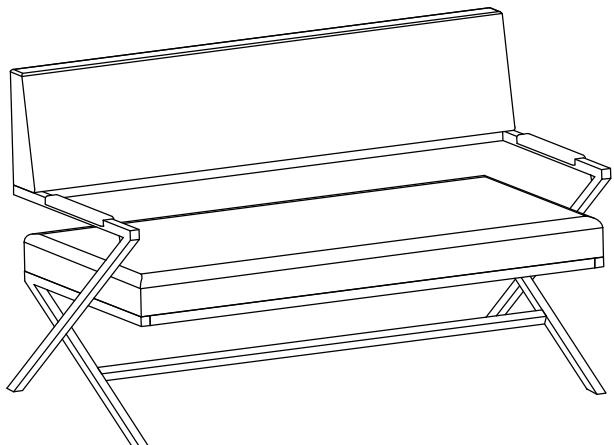


Hardware List

Item	Description	QTY
H1	5/8" length Bolts 5/8" * Ø1/4"	12
H2	1" length Bolts 1" * Ø1/4"	10
H3	1 1/2" length Bolts 1 1/2" * Ø1/4"	4
H4	2" length Bolts 2" * Ø1/4"	8
H5	Allen Wrench 4mm	1

Assembly Procedures:


Step 1. Assemble the loveseat on a flat, soft surface such as a carpet or cloth to prevent scratching the finish. Insert each inserted bar on left side metal frame (P4) and right side metal frame (P5) to the end of seat metal frame (P2) and stretcher (P3), do not tighten the bolts at this time.

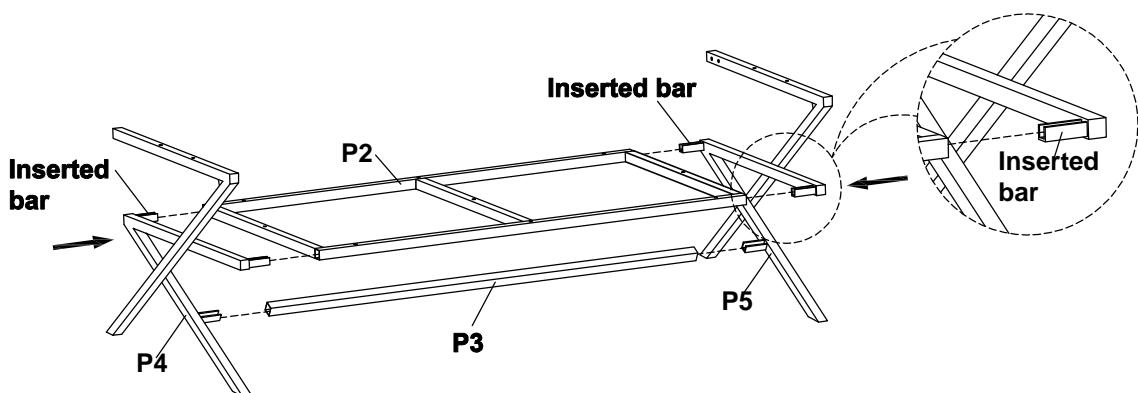

Step 2.

- 1) Loosely attach back top rail (P1) to left/right side frame(P4/P5) as shown below
- 2) Use $\frac{5}{8}$ "L Bolts (H1) and 1" L Bolts (H2) to loosely attach left side metal frame (P4) and right side metal frame (P5) to seat metal frame (P2) and stretcher (P3). Securely tighten all bolts with Allen wrench (H5).


(H1)x12 **$\frac{5}{8}$ " length Bolts Ø1/4"** 
(H2)x4 **1" length Bolts Ø1/4"** 
(H5)x1 **Allen Wrench 4mm** 

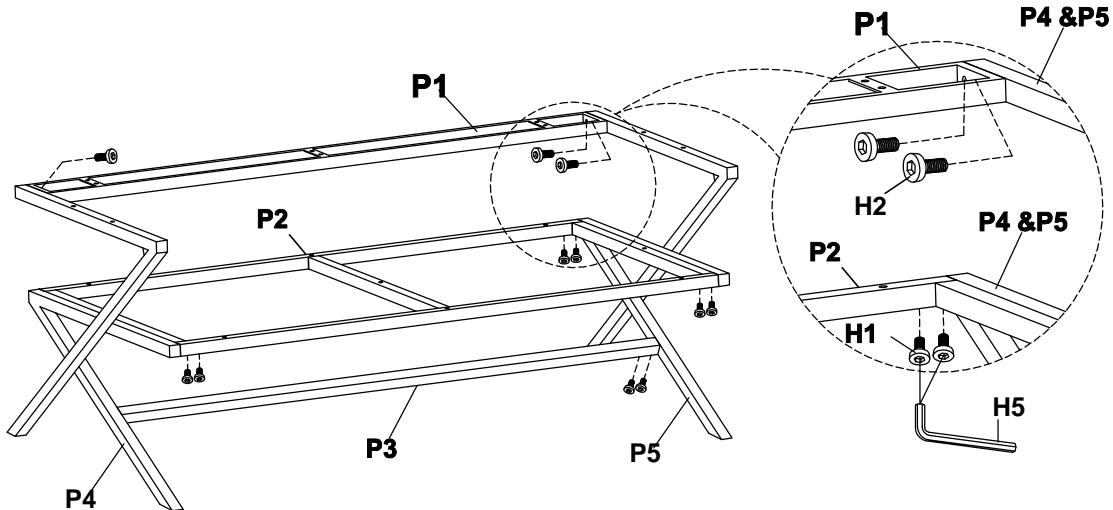

Step 3.

- 1) Attach the seat cushion (P7) to the assembled left/right side frame (P4/P5) and seat metal frame (P2) using 2" bolts (P4).
- 2) Securely tighten all bolts by Allen wrench (H5).
- 3) Attach the upholstery arm rests (P8) to the left/right side metal frame (P4/P5) using $1\frac{1}{2}$ " bolts (P3).


(H3)x4 **$1\frac{1}{2}$ " length Bolts Ø1/4"** 
(H4)x8 **2" length Bolts Ø1/4"** 

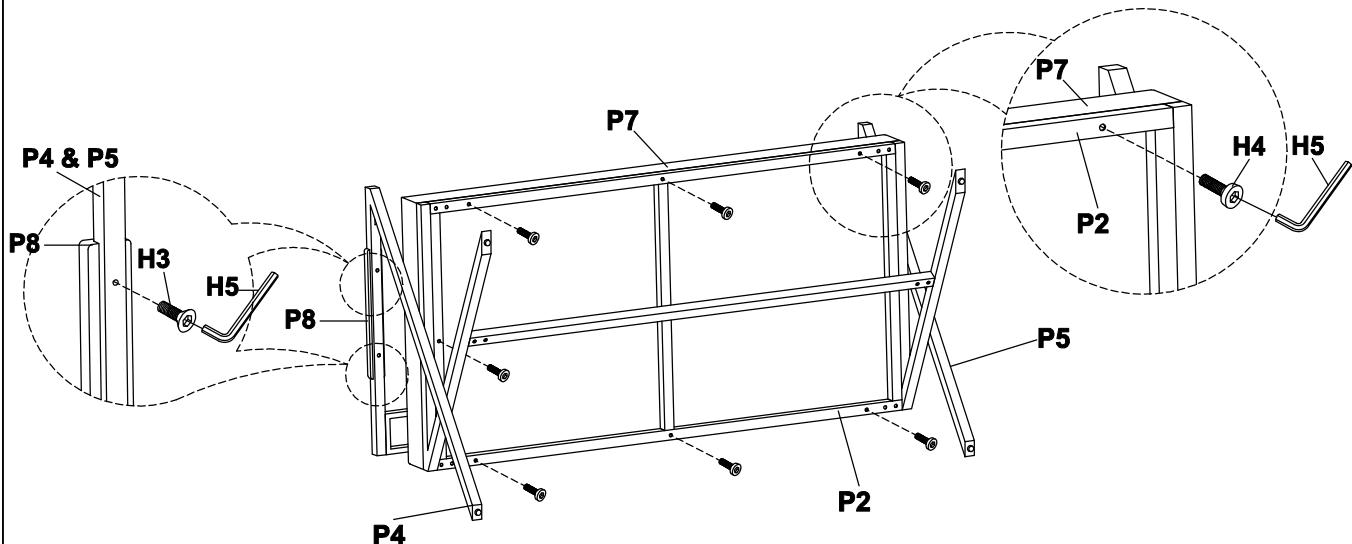

Step 4.


Loosely attach back cushion (P6) to the assembled back top rail (P1) using 1" bolts (H2) as shown below. Make sure the back cushion (P6) setting on the center of back top rail (P1) and securely tighten all bolts with Allen wrench (H5).

(H2)x6 1" length Bolts Ø1/4"

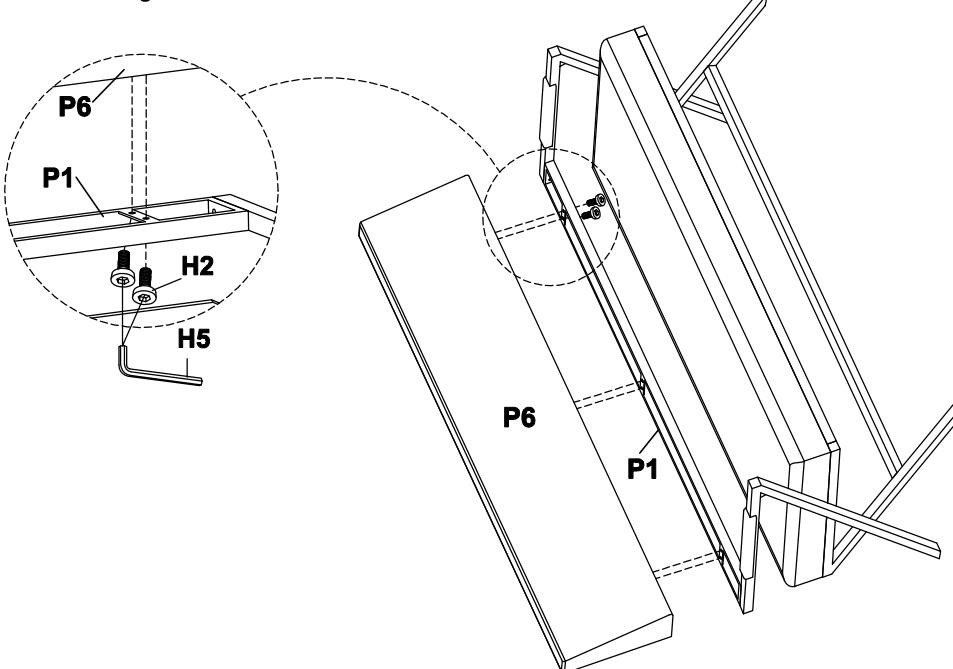

Step 5.

- 1) Turn the assembled loveseat base to an upright position.
- 2) Make sure the loveseat is level and securely tighten all bolts with Allen wrench (H5).
- 3) Leveler adjustment: Leveler are installed on the legs and adjust as needed to make sure the loveseat is level. Assembly is complete. **Failure to follow these instructions may cause the bolts to misalign during assembly.**

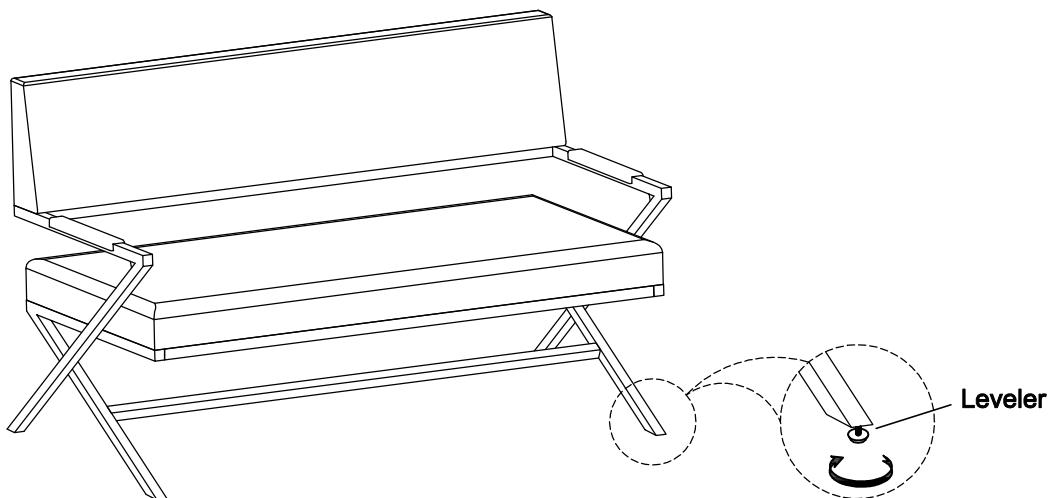

ADDITIONAL NOTE ABOUT SAFETY: BOLTS MAY LOOSEN DURING NORMAL EVERYDAY USE. THEY SHOULD BE PERIODICALLY INSPECTED AND RE-TIGHTENED TO PREVENT DAMAGE OR INJURY. ALWAYS CHECK TO BE SURE THAT ALL HARDWARE IS KEPT TIGHTENED.

Thank you for your purchase