

Description: Novak Loveseat

Important safety instructions:


- Please carefully read all instructions before assembling.
- For your safety and ease, assembly by two or more adults is recommended.
- Keep instructions for future use.

Pre-assembly:

- Do not discard any contents until after assembly is complete to avoid accidentally discarding small parts or hardware.
- Remove all parts and hardware from box along with any plastic protective packaging.

Parts List

Item	Description		QTY
P1	Right Arm		1
P2	Left Arm		1
P3	Seat Cushion		1
P4	Back Cushion		1
P5	Front Stretcher		1

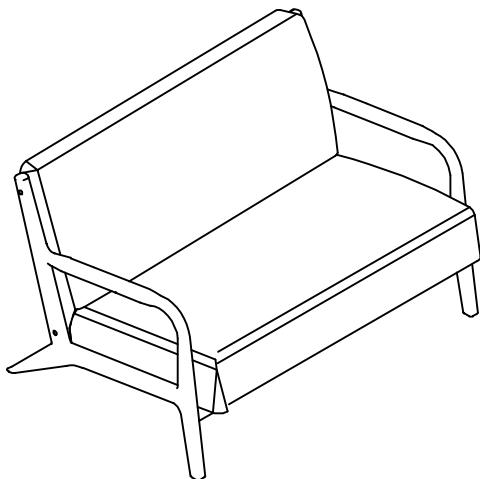**Hardware List**


Item	Description	QTY
H1	Short Bolts Ø1/4"**2"	8
H2	Long Bolts Ø1/4"**2-1/2"	4
H3	Lock Washers 1/4"	12
H4	Big flat washers 1/4" (22mm)	8
H5	Small flat washers 1/4" (12mm)	4
H6	Allen Wrench 1/4"	1
H7	Wooden Plugs	4
H8	Screws 8#*1-1/2"	2

ADDITIONAL NOTE ABOUT SAFETY: BOLTS MAY LOOSEN DURING NORMAL EVERYDAY USE. THEY SHOULD BE PERIODICALLY INSPECTED AND RE-TIGHTENED TO PREVENT DAMAGE OR INJURY. ALWAYS CHECK TO BE SURE THAT ALL HARDWARE IS KEPT TIGHTENED.

Assembly Procedures:


Step 1. Assemble the loveseat on a flat, soft surface such as a carpet or cloth to prevent scratching the finish. Open the bottom covering, then loosely attach seat cushion (P3) to back cushion (P4) as shown below.

(H2)x4 Long Bolts 
(H3)x4 Lock washers 
(H4)x4 Big Flat washers 
(H6)x1 Allen wrench 

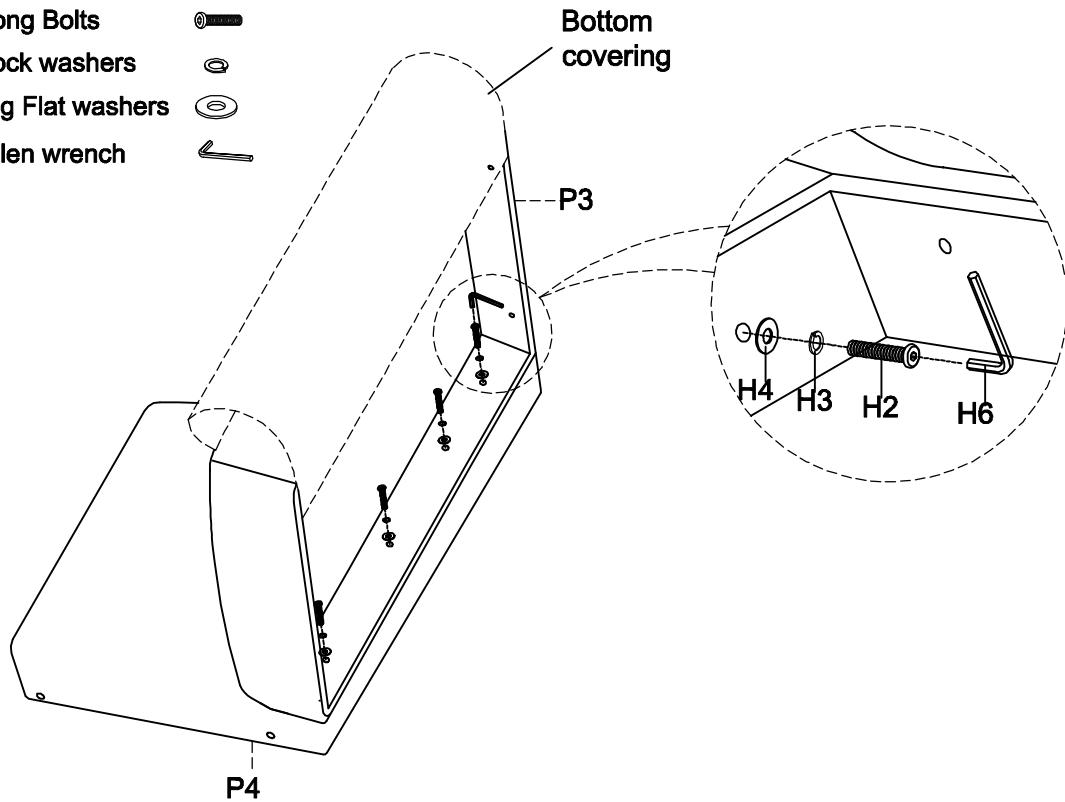


Step 2. Attach left arm (P2) to seat cushion (P3) and back cushion (P4). Loosely tighten by Allen wrench (H6) as shown below.

(H1)x4 Short Bolts 
(H3)x4 Lock washers 
(H4)x2 Big Flat washers 
(H5)x2 Small Flat washers 
(H6)x1 Allen wrench 

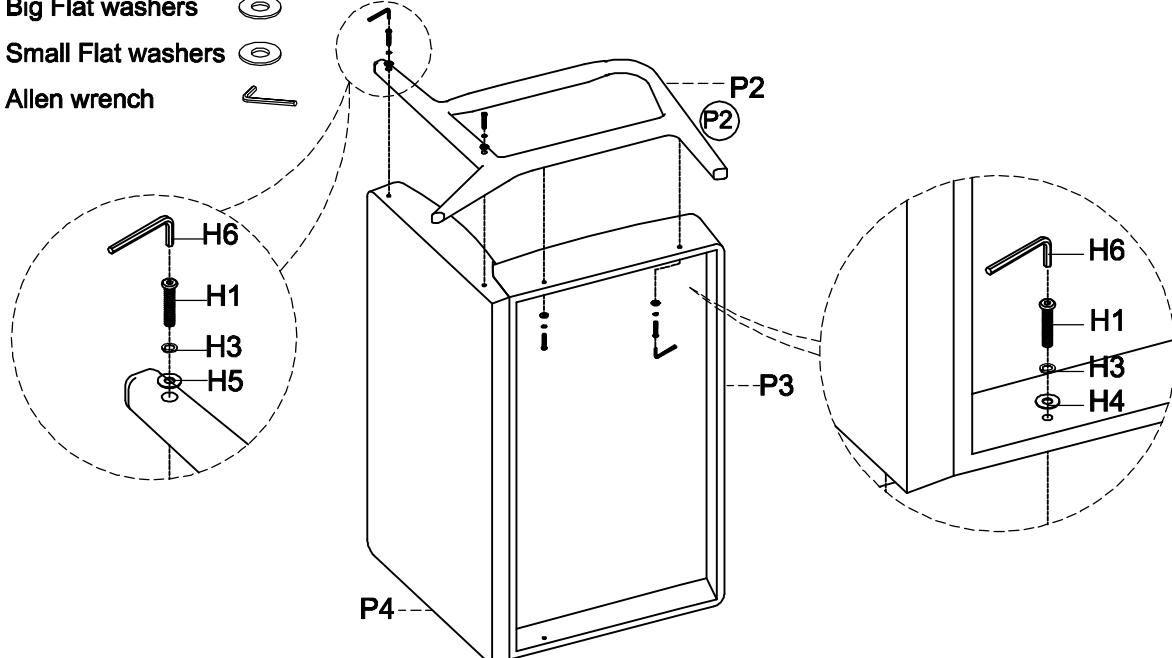


Step 3. Insert front stretcher (P5) to left arm (P2) with two located dowels. Note: the hole on the front stretcher (P5) should be face to the bottom of legs. Attach right arm (P1) to the front stretcher (P5), seat cushion (P3) and back cushion (P4). Securely tighten all bolts by Allen wrench (H6).

(H1)x4 Short Bolts 
 (H3)x4 Lock washers 
 (H4)x2 Big Flat washers 
 (H5)x2 Small Flat washers 
 (H6)x1 Allen wrench 

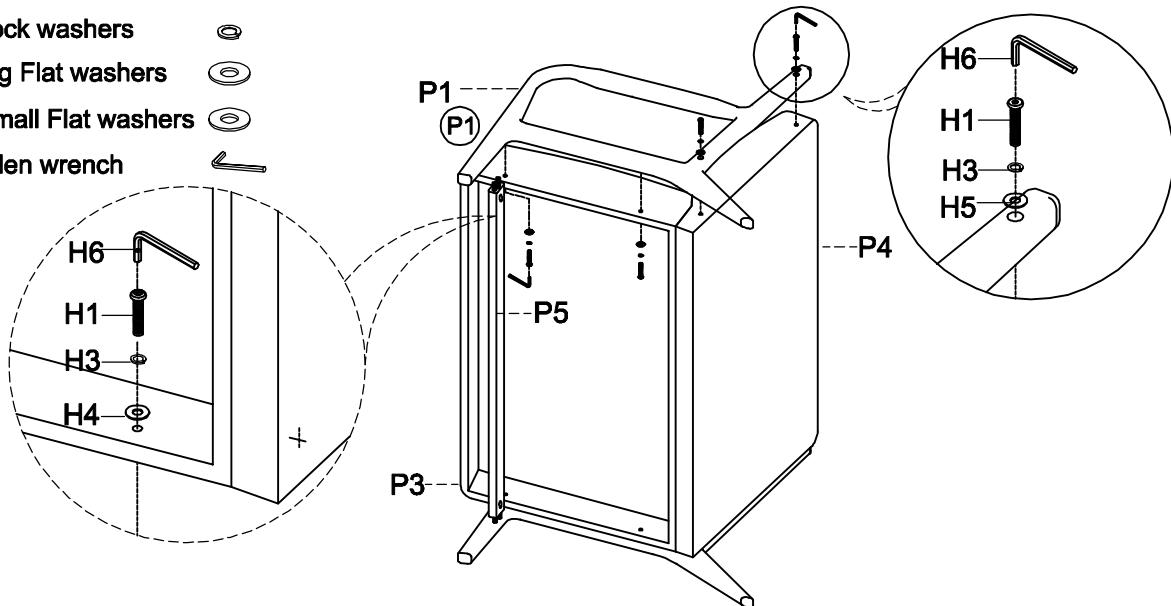

Step 4. Tighten screws (H8) through the front stretcher (P5) to the right arm (P1) and left arm (P2) with screwdriver (not provided).


(H8)x2 Screw 

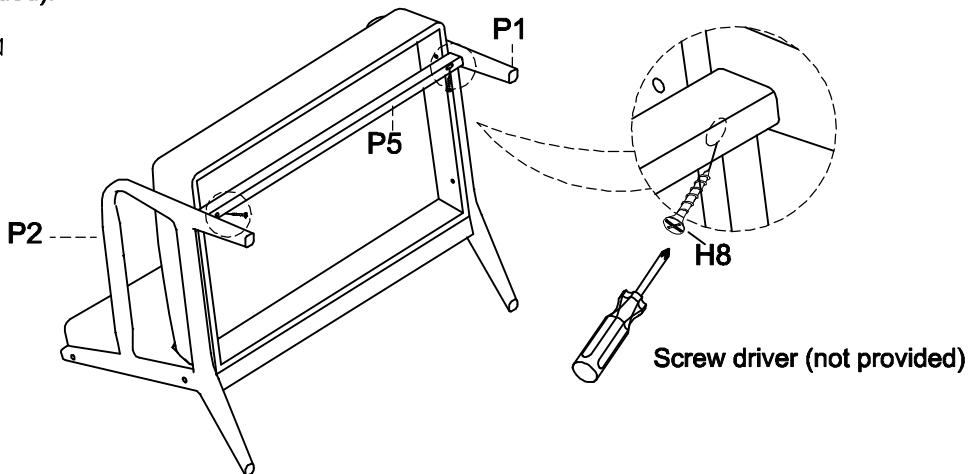

Step 5.

- Make sure the lounge is level and securely tighten all the bolts with Allen wrench (H6), but do not over tighten the bolts.
- Attach wooden plugs (H7) to each bolt hole, tighten with rubber hammer to knock the wooden plug till its tighten. Note: use a soft cloth between the wooden plug and hammer to prevent damage to wooden plug finish. Assembly is complete.
- Failure to follow these instructions may cause the bolts to misalign during assembly.

(H7)x4 Wooden Plugs 

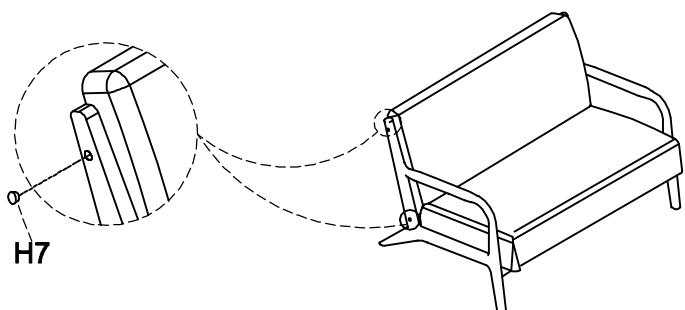

Thank you for your purchase