



Monroe Corner

Assembly instructions:

PARTS LIST

No.	DESCRIPTION	IMAGE	QTY
P1	Legs		5
P2	Plastic washer		5
P3	Corner		1


NOTE: PO# is located underneath/inside of each item. Please be prepared to provide this # should any claim be necessary.

CAUTION: Item is heavy assembly should be performed by two people.



Estimate assembly time: 5 minutes

Step 1. Turn the Corner(P3) upside down and lay on protective carpet.

Open the cushion and take out the legs under the sofa bottom.

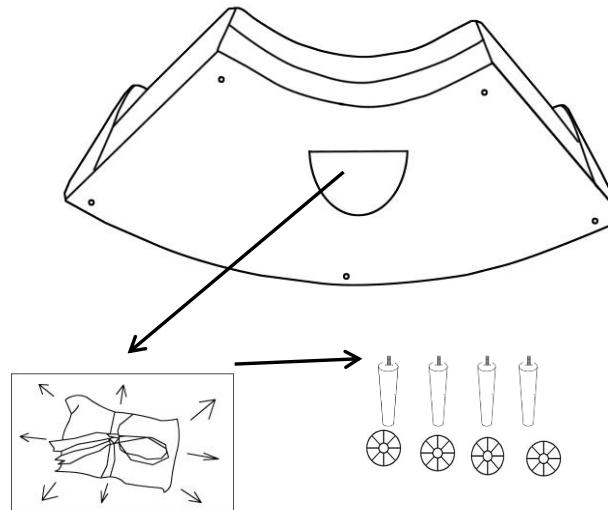

Step 2. Screw in the legs(P1)into the screw holes underneath the corner (P3) using the plastic washers (P2) By rotating legs clockwise.

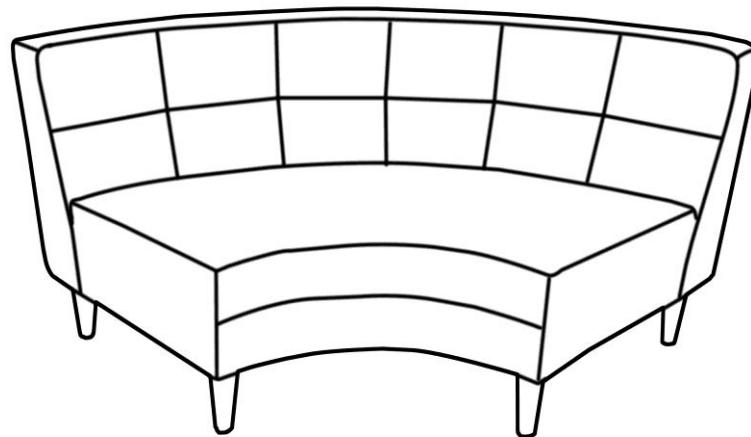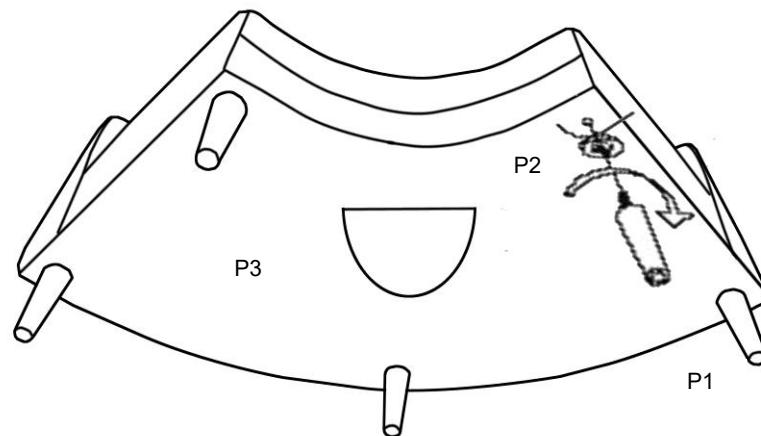

ASSEMBLY COMPLETED