











## Auburn Corner

### Assembly Instruction:

#### PARTS LIST

No.	DESCRIPTION	IMAGE	QTY
P1	Legs		4
P2	Corner		1
P3	Back Cushions		2
P4	Seat Cushion		1

#### HARDWARE LIST


No.	DESCRIPTION	IMAGE	QTY
H1	Bolts Ø5/16*1-3/16"		12
H2	Lock Washers Ø5/16"		12
H3	Flat Washers Ø5/16"		12
H4	Allen Wrench Ø3/16"		1

**NOTE:**PO# is located underneath/inside of each item. Please be prepare to provide this # should any claim be necessary.


**CAUTION:** Item is heavy assembly should be performed by two people.

**Estimate assembly time: 5 minutes**

Step 1. Remove legs & hardware from underneath seat cushion of corner (P2).

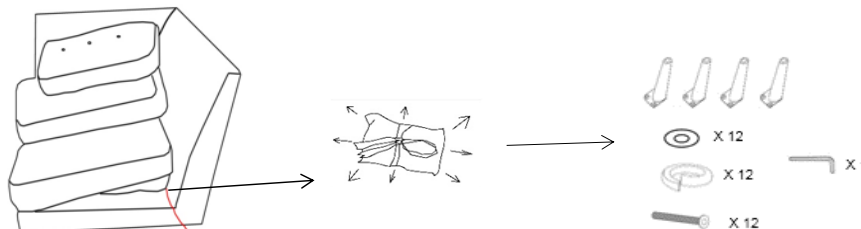


Step 2. Place the corner (P2) onto a protective cloth. Using bolts (H1), lock washers (H2), flat washers (H3), connect legs (P1) to corner (P2). Tighten bolts (H1) with Allen Wrench (H4).

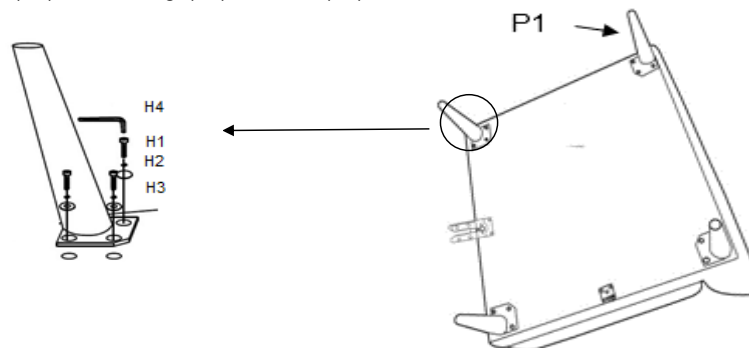


Step 3. Place the corner upright on a level surface. put back cushions (P3) and seat cushion (P4) on it. Corner assembly is complete.

**To combine or separate corner and lounge, please refer to next step.**

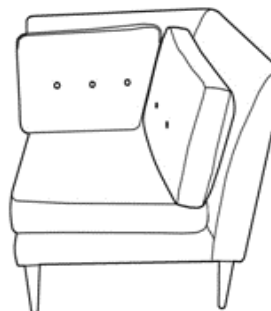

Step 4. Insert the small metal on the bottom into the prefabricated slide lock gadget on the bottom as shown below.

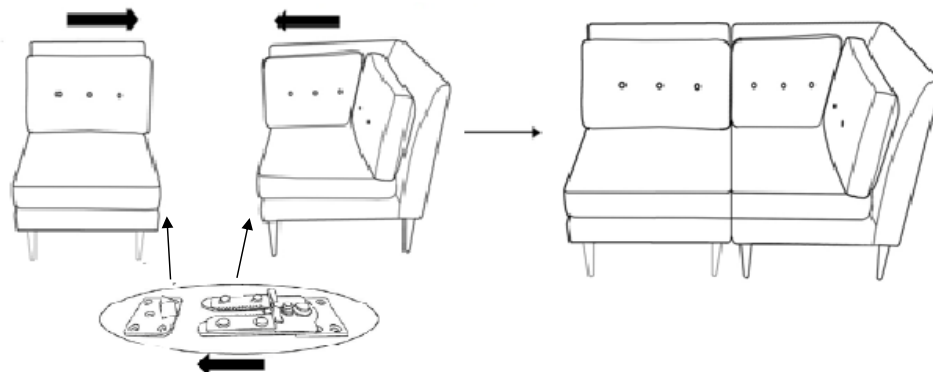

Step 5. Lift the right corner and separate the metal connector. Separate the lounge and corner.

