



Jimbo Loveseat

Assembly Instruction:

PARTS LIST

No.	DESCRIPTION	IMAGE	QTY
P1	Legs		4
P2	Backrest		1
P3	Armrest		1
P4	Seat Frame		1
P5	Short Arm Cushion		1
P6	Long Back Cushion		2

HARDWARE LIST


No.	DESCRIPTION	IMAGE	QTY
H1	Bolts $\varnothing 5/16" \times 2-12/16"$		8
H2	Lock Washers $\varnothing 5/16"$		8
H3	Flat Washers $\varnothing 5/16"$		8
H4	Allen Wrench $\varnothing 3/16"$		1
H5	Plastic washer		4

NOTE: PO# is located underneath/inside of each item. Please be prepared to provide this # should any claim be necessary.


CAUTION: Item is heavy assembly should be performed by two people.

Estimate assembly time: 10 minutes


Step 1. Open the carton and take out all legs, hardware package, seat frame, all backrest and cushions.

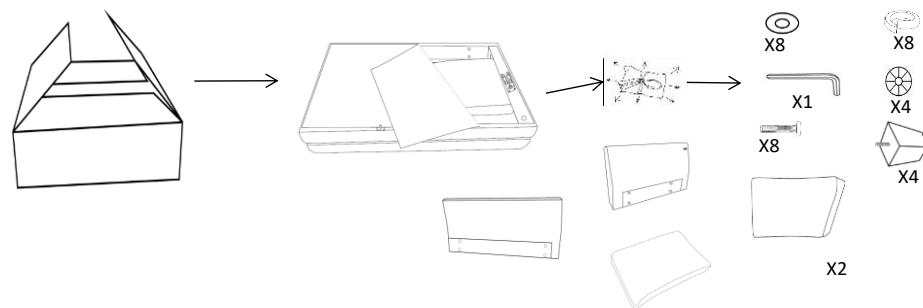


Step 2. Connect backrest (P2) and armrest (P3) by metal lock on the edge of these two parts.

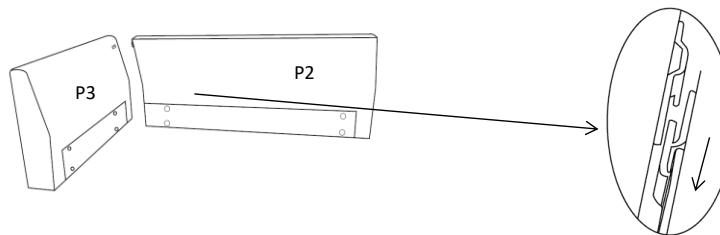


Step 3. Open the black fabric under the seat frame. Align the holes on seat frame (P4), backrest (P2) and armrest (P3) then insert bolts (H1) with flat washers (H3), lock washers (H2), securely tighten all bolts by using allen wrench (H4).

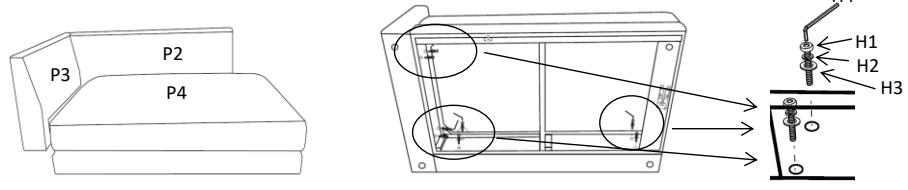

Step 4.Close the black fabric of the bottom.Screw in the legs (P1) using Plastic Washer (H5) for each. Screw tight to the right angle.

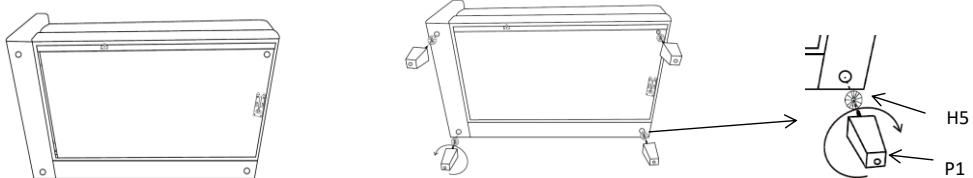

Step 5.Place loveseat upright on a level surface.Ensure the cushions(P5&P6) is properly attached.Assembly is complete.

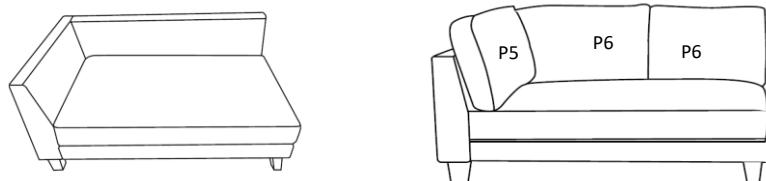

Step 6.Insert the small metal on the bottom into the prefabricated slide lock gadget on the bottom as shown below .

