



# ASSEMBLY INSTRUCTIONS

Description: Novak Dining Side Chair (set of 2)





**Important safety instructions:**

- Please read carefully all instructions before assembly.
- For your safety and ease, assembly by two or more adults is recommended.
- Keep instructions for future use.







**Pre-assembly:**

- Do not discard any content until assembly is complete to avoid accidentally discarding small parts or hardware.
- Take out all parts and hardware from box.

**Parts List**

Item	Description		QTY
P1	Left Chair Frame		1
P2	Right Chair Frame		1
P3	Seat		1
P4	Chair Back		1

**Hardware List**


Item	Description		QTY
H1	Bolt M6 x 40mm		6
H2	Bolt M6 x 60mm		6
H3	Wood plug		4
H4	Flat Washer 6 x 14mm		12
H5	Lock Washer 6 x 14mm		12
H6	Allen Wrench		1

**Assembly Procedures:**

Assemble the chair on a flat, soft surface such as a carpet or cloth to prevent scratching the finish.


Step 1: Attach left chair frame (P1), Seat ( P3 ), Chair back ( P4) using Lock washer (H5), Flat washer (H4) and Bolt (H1, H2) as shown below.

- (H1) x 3 Bolt M6 x 40mm
- (H2) x 4 Bolt M6 x 60mm
- (H4) x 7 Flat Washer 6 x 14
- (H5) x 7 Lock Washer 6
- (H6) x 1 Allen Wrench

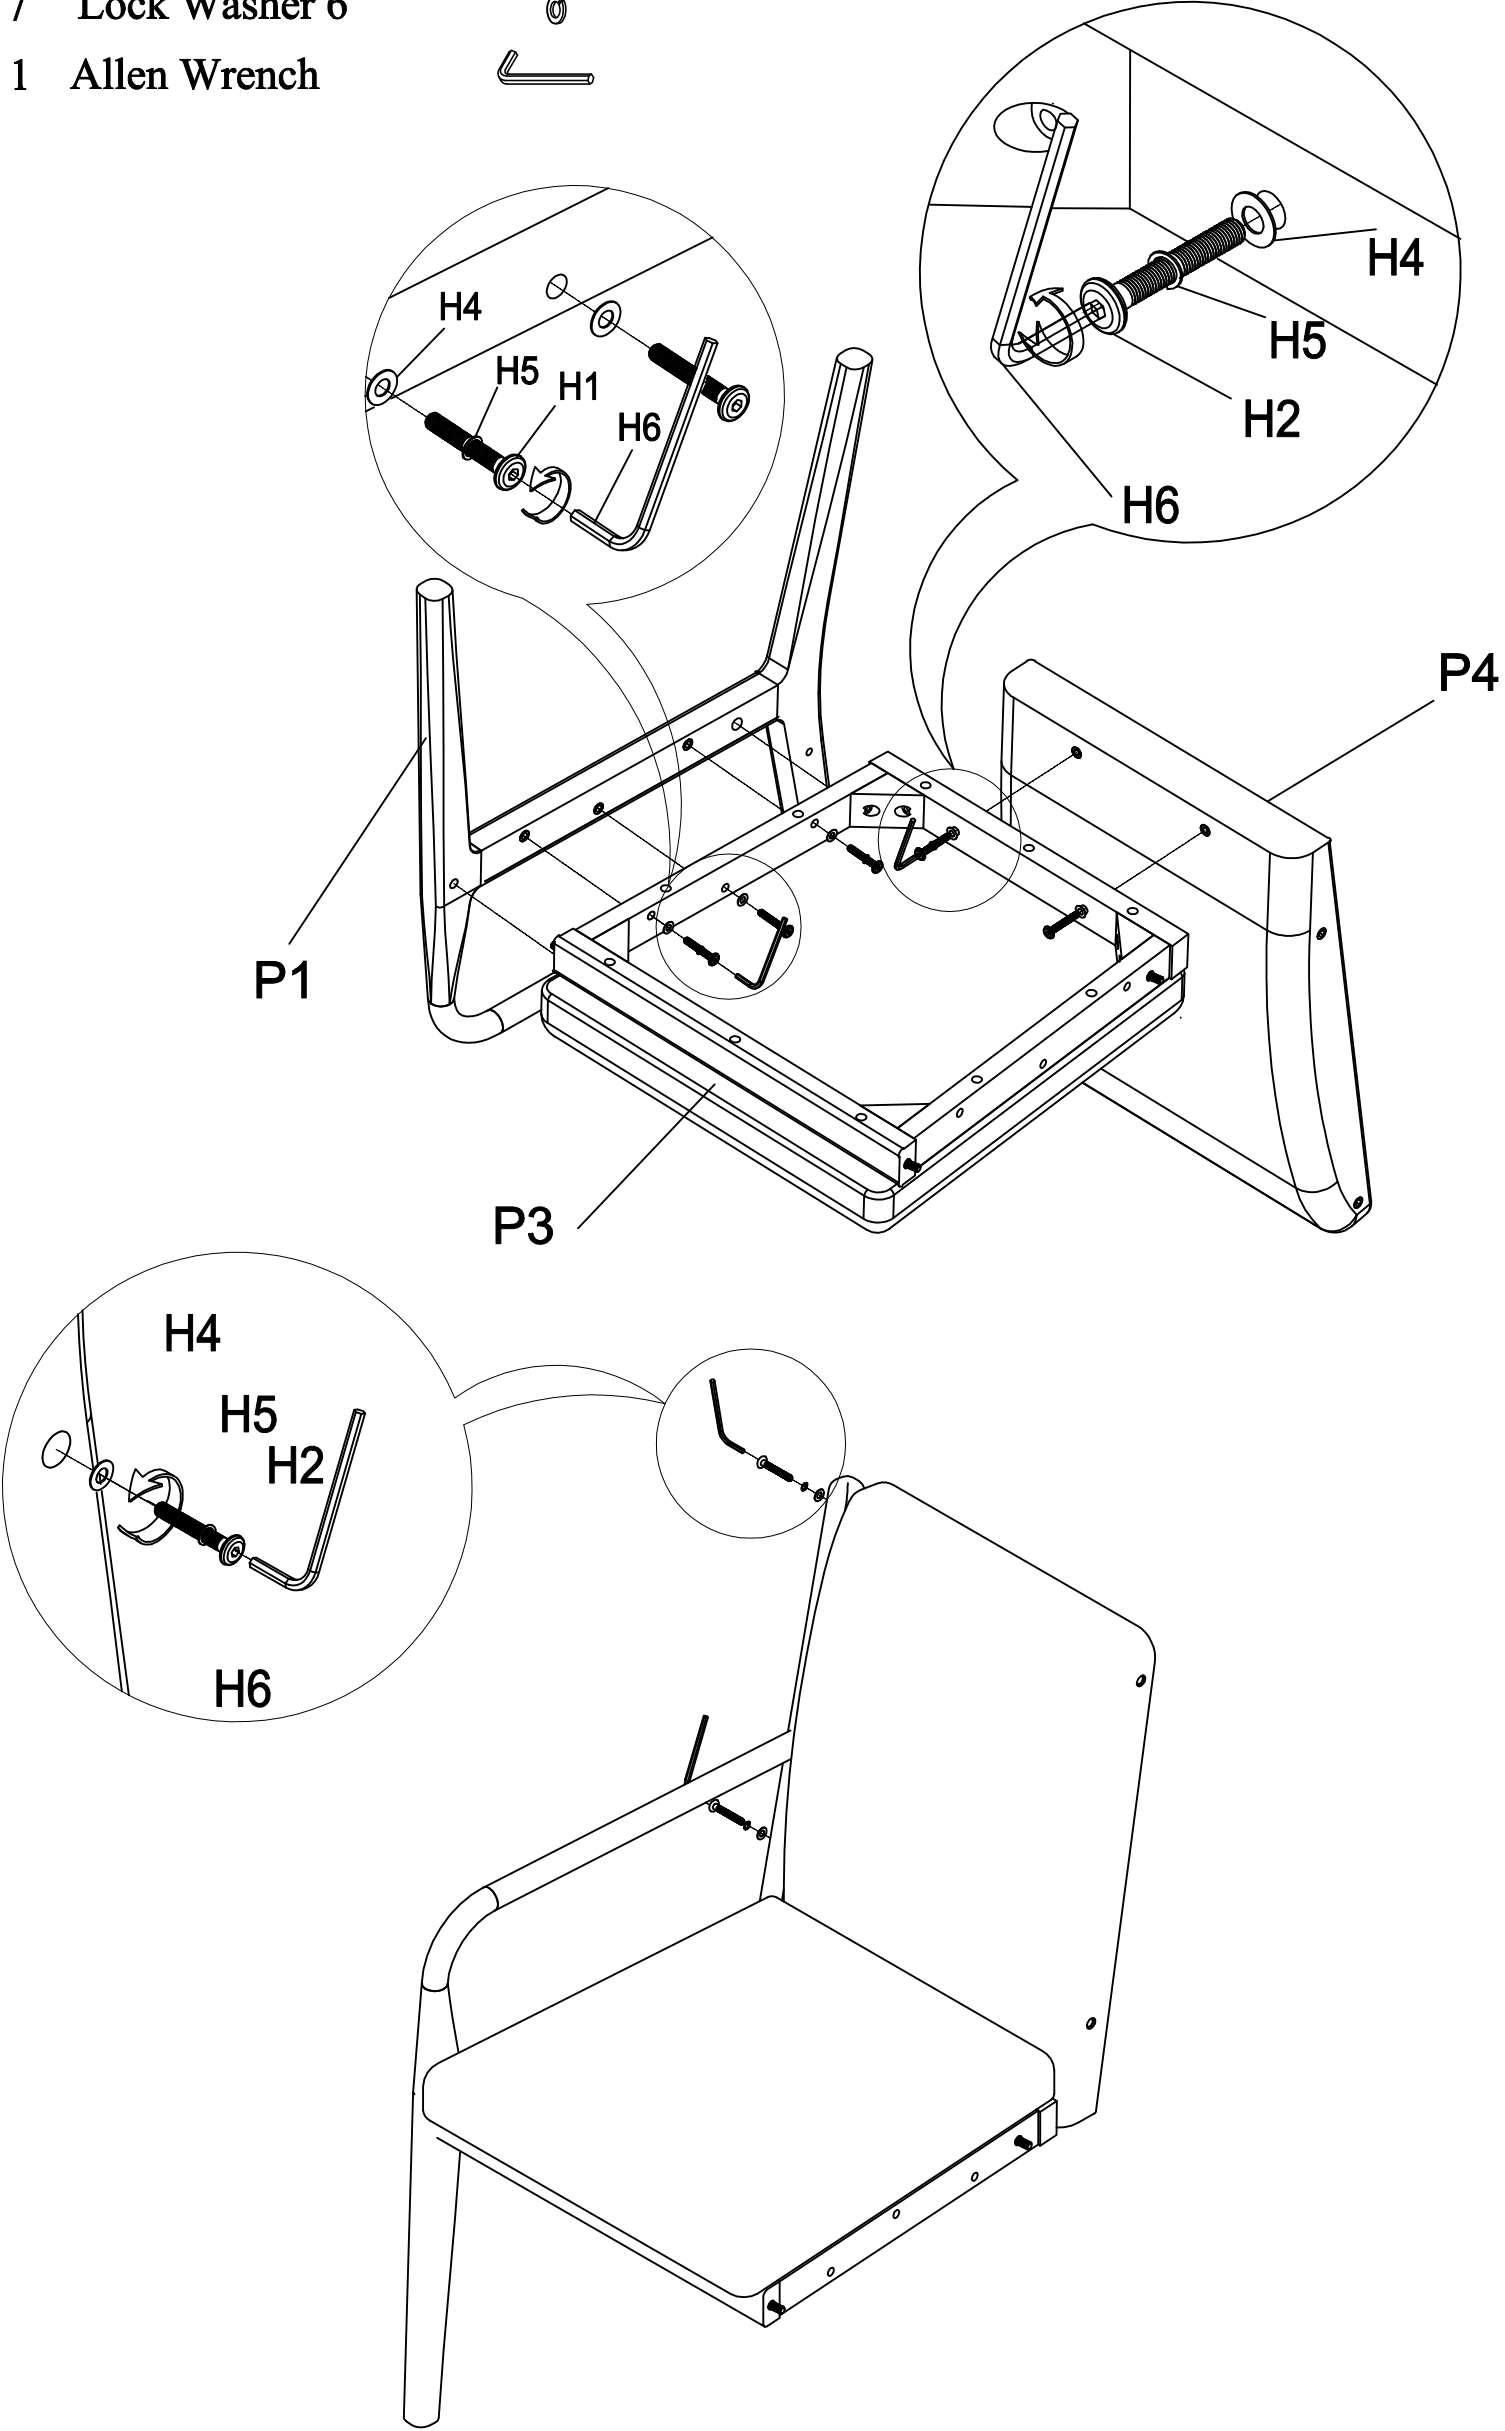


Step 2: Attach Right chair frame (P2), Seat ( P3 ), Chair back ( P4) using Lock washer (H5), Flat washer (H4) and Bolt (H1,H2) as shown below.

- (H1) x 3 Bolt M6 x 40mm
- (H2) x 2 Bolt M6 x 40mm
- (H4) x 5 Flat Washer 6 x 14
- (H5) x 5 Lock Washer 6
- (H6) x 1 Allen Wrench

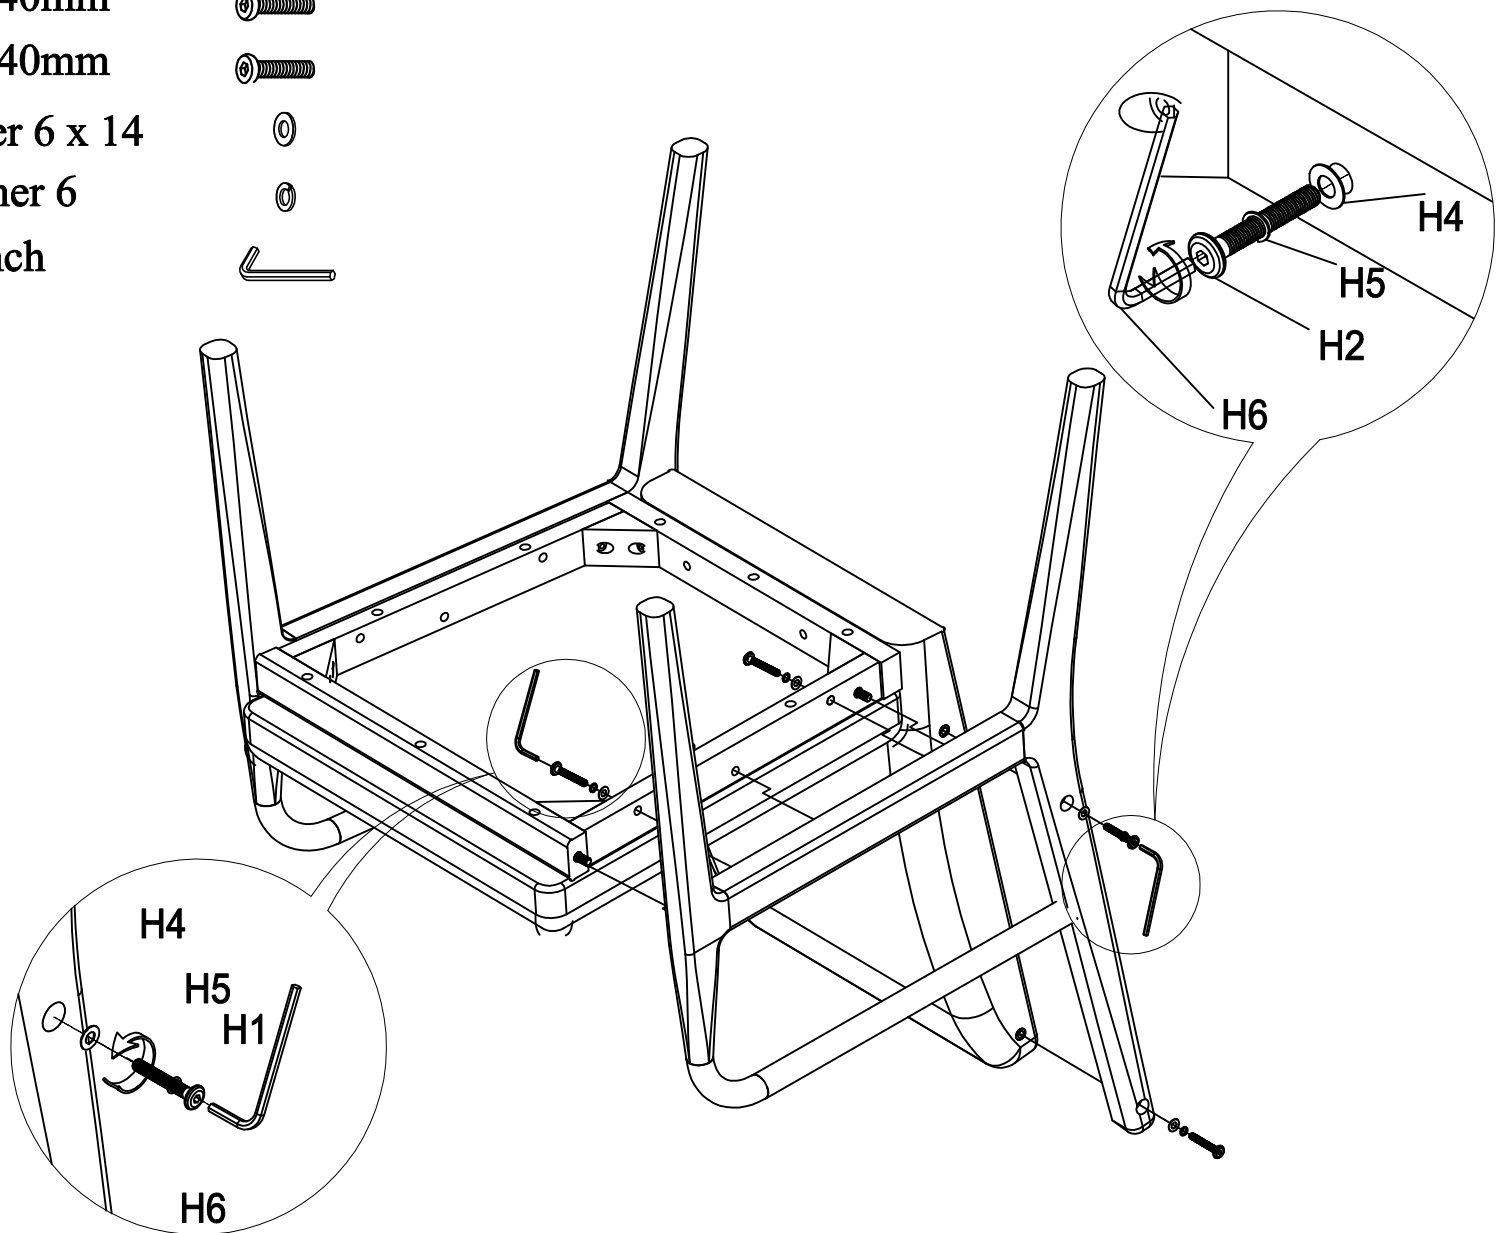

Step 3: Attach Wood plug (H3) to chair frame (P1, P2) as shown below. Assembly is complete.

- (H3) x 4 Wood plug

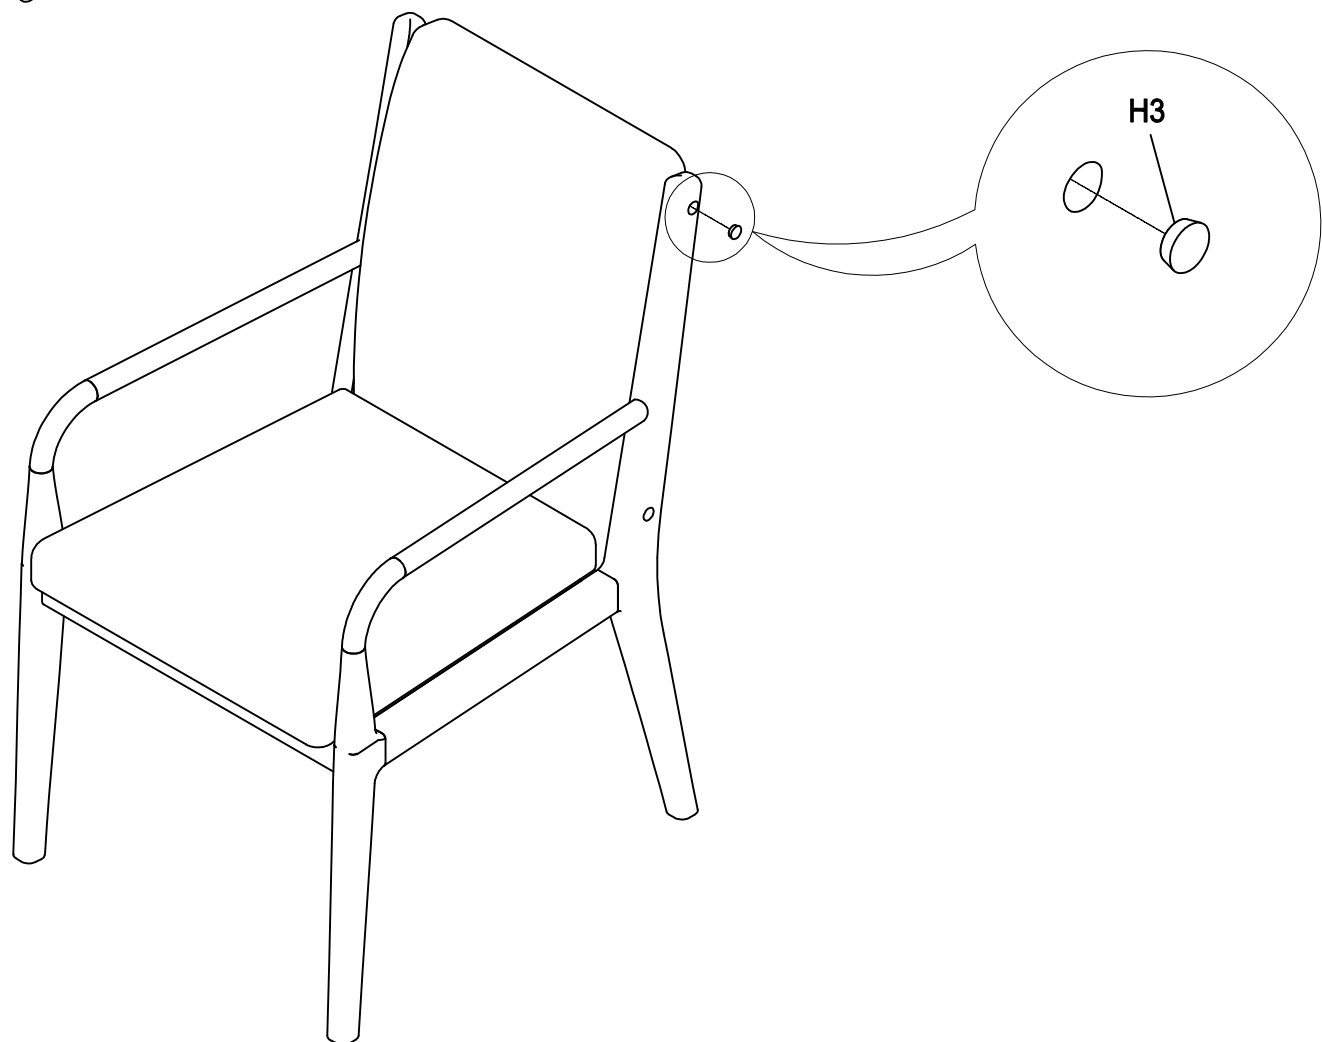

**ADDITIONAL NOTE ABOUT SAFETY: BOLTS MAY LOOSEN DURING NORMAL EVERYDAY USE. THEY SHOULD BE PERIODICALLY INSPECTED AND RE-TIGHTENED TO PREVENT DAMAGE OR INJURY. ALWAYS CHECK TO ENSURE THAT ALL HARDWARE IS KEPT TIGHTENED.**

Thank you for your purchase