

**Important safety instructions:**

- Please read carefully all instructions before assembly.
- For your safety and ease, assembly by two or more adults is recommended.
- Keep instructions for future use.

**Pre-assembly:**

- Do not discard any content until assembly is complete to avoid accidentally discarding small parts or hardware.
- Take out all parts and hardware from box.

**Parts List**

Item	Description	QTY
P1	Headboard Frame (L)	1
P2	Headboard Frame (R)	1
P3	Footboard	1
P4	Side Rails	2
P5	Slats	5
P6	Support Legs	5/10
P7	Back Bottom Support Rail	1
P8	Back Top Mending Plate	1

**Hardware List**

Item	Description	QTY
H1	Small Short Bolts Ø1/4" x 30mm	4
H2	Small Medium Bolts Ø1/4" x 40mm	4
H3	Small Long Bolts Ø1/4" x 60mm	4
H4	Small Lock Washers Ø1/4"	12
H5	Small Flat Washers Ø1/4"	12
H6	Big Bolts Ø5/16" x 20mm	8
H7	Big Lock Washers Ø5/16"	8
H8	Big Flat Washers Ø5/16"	8
H9	Allen Wrench	1
H10	Screws Ø4*30mm	10

**\*\*\*Attention: 10 Support Legs for King Bed  
and 5 Support Legs for Queen Bed**


**DISCLAIMER:**

**WHEN PROPERLY ASSEMBLED, THIS ITEM IS SAFE FOR INTENDED USE. SELLER IS NOT LIABLE FOR ANY DAMAGES RESULTING FROM ITEM BEING IMPROPERLY ASSEMBLED AFTER PURCHASE.**

## Assembly Procedures:

Step 1: Assemble the bed on a flat, soft surface such as a carpet or cloth to prevent scratching the finish. Open the back covering of Left Headboard Frame (L) (P1). Then attach Left Headboard Frame (L) (P1) to Right Headboard Frame (R) (P2) as shown below.


(H3)x4	Small Long Bolts Ø1/4" x 60mm	
(H4)x4	Small Lock Washers Ø1/4"	
(H5)x4	Small Flat Washers Ø1/4"	
(H9)x1	Allen Wrench	

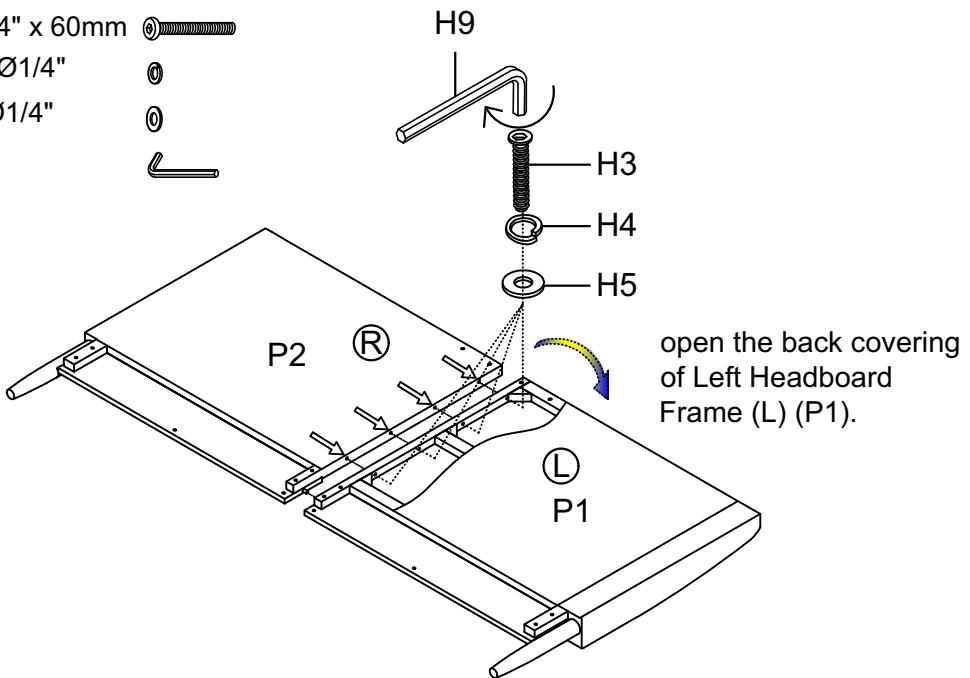

## Step 2:


- Attach Back Bottom Support Rail (P7) to Headboard Frame (P1, P2) as shown below.
- Attach Back Top Mending Plate (P8) to Headboard Frame (P1, P2) as shown below.
- Securely tighten all bolts with Allen Wrench (H9).

(H1)x4	Small short Bolts Ø1/4" x 30mm	
(H2)x4	Small Medium Bolts Ø1/4" x 40mm	
(H4)x8	Small Lock Washers Ø1/4"	
(H5)x8	Small Flat Washers Ø1/4"	
(H9)x1	Allen Wrench	

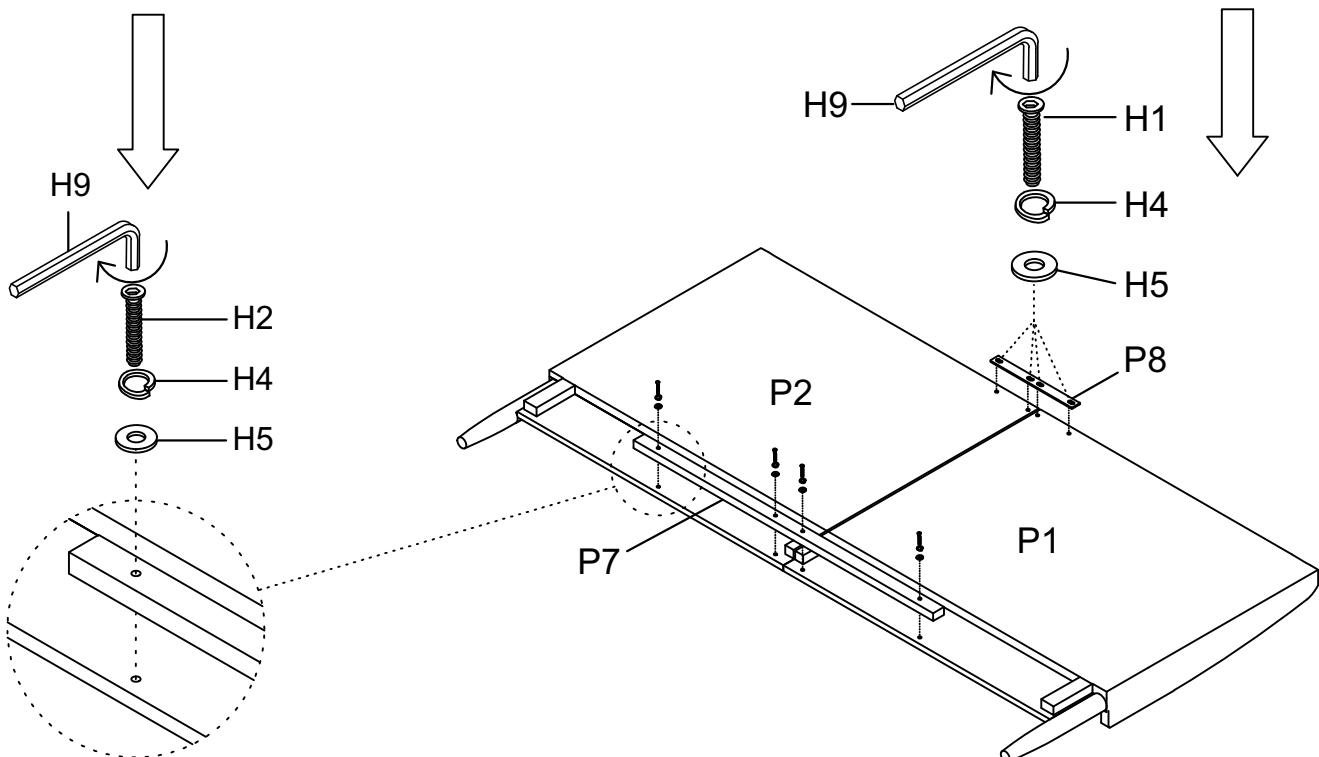


Step 3: Attach Side Rails (P4) to Headboard (P1, P2) as shown below.

(H6)x4 Big Bolts Ø5/16" x 20mm   
(H7)x4 Big Lock Washers Ø5/16"   
(H8)x4 Big Flat Washers Ø5/16"   
(H9)x1 Allen Wrench 

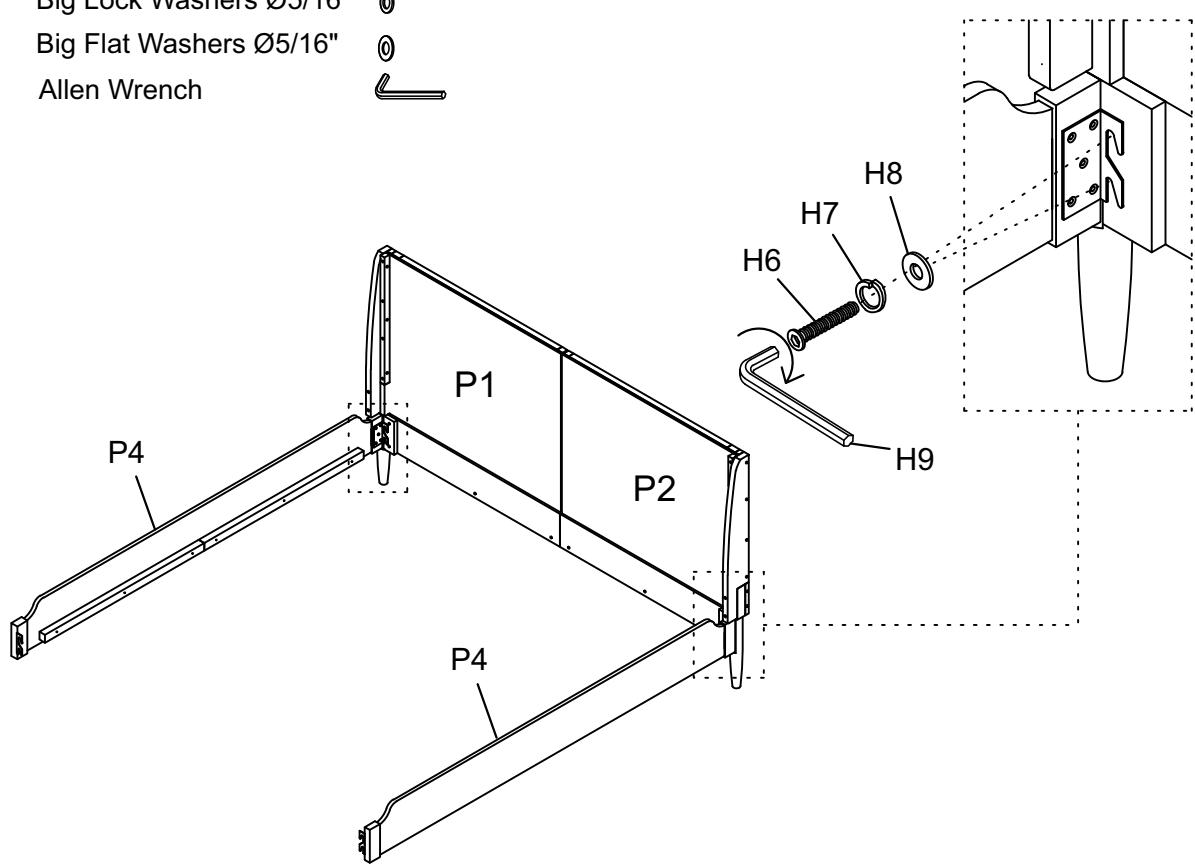

Step 4: Attach Side Rails (P4) to Footboard (P3) as shown below


(H6)x4 Big Bolts Ø5/16" x 20mm   
(H7)x4 Big Lock Washers Ø5/16"   
(H8)x4 Big Flat Washers Ø5/16"   
(H9)x1 Allen Wrench 

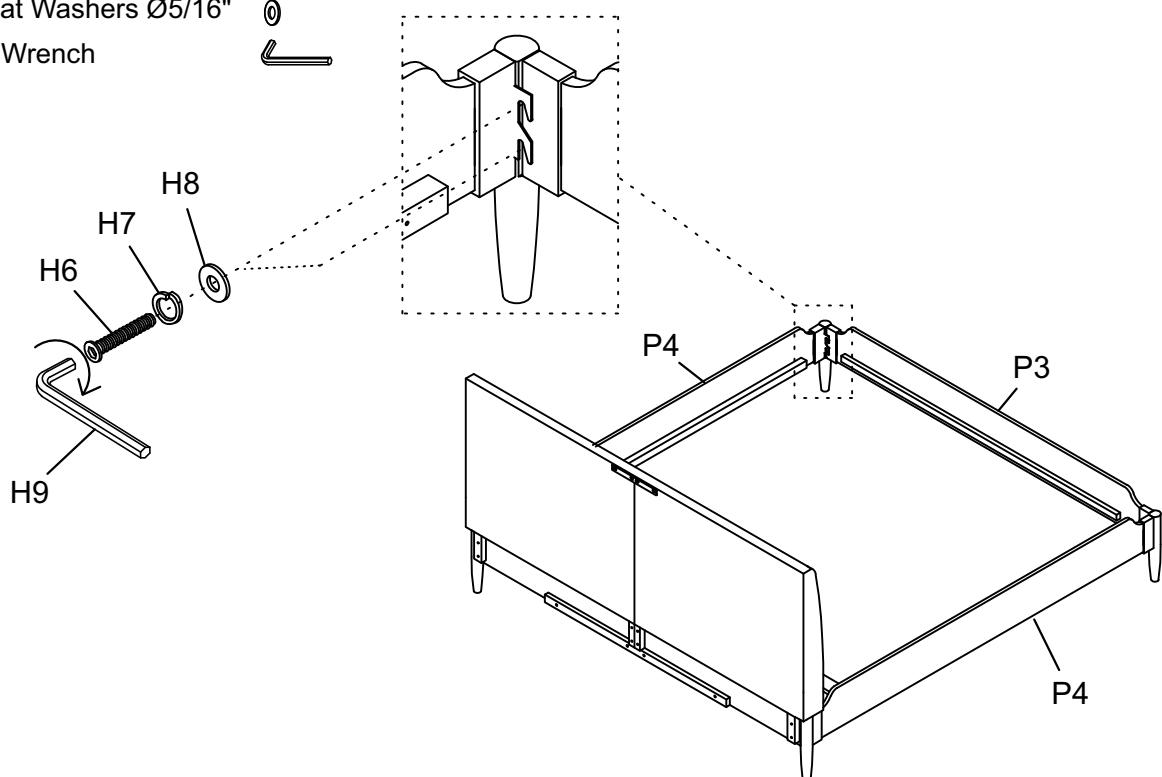

Step 5: Attach the Support Legs (P6) to Slats (P5) as shown below. Then attach Slats (P5) to Side Rails (P4) as shown below.


(H10)x10 Screws Ø4\*30mm

\*\*\*Attention: 10 Support Legs for King Bed  
and 5 Support Legs for Queen Bed

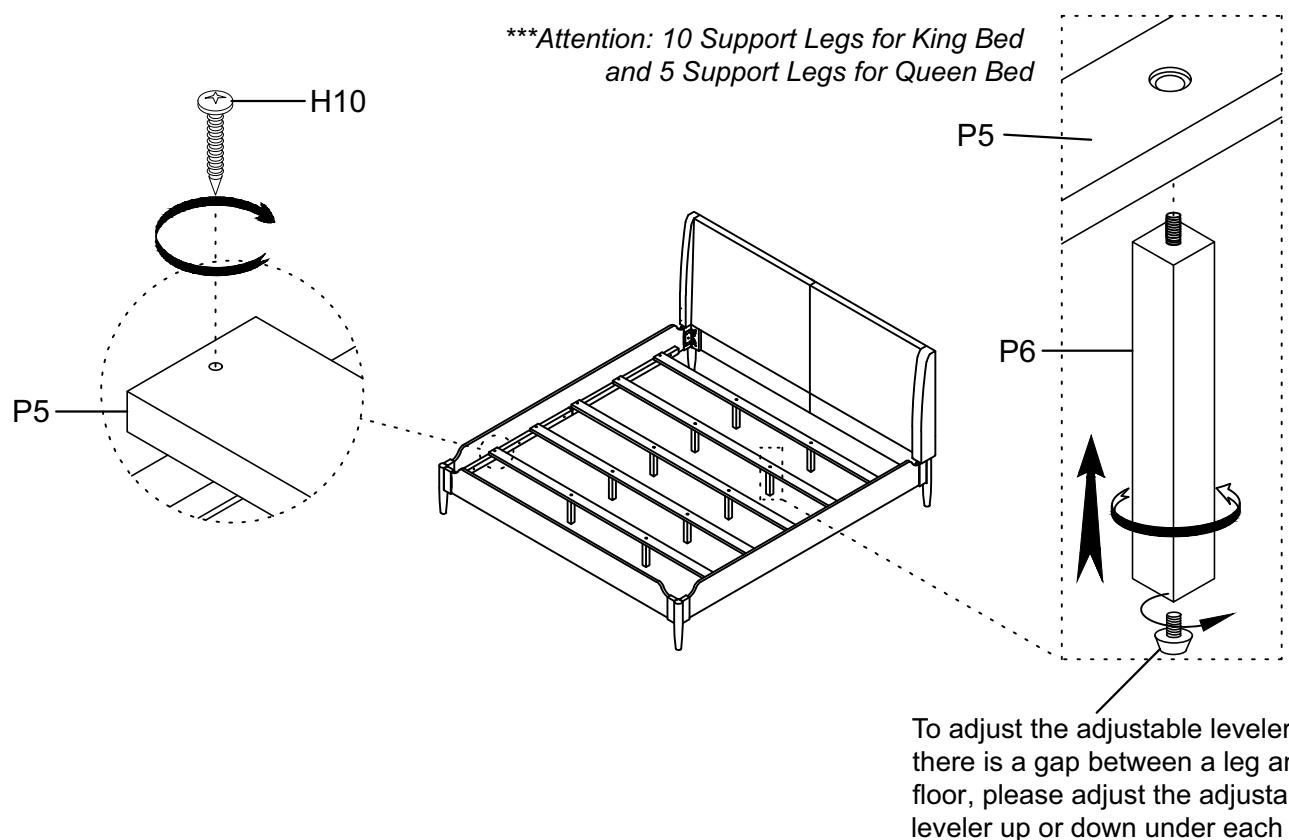

To adjust the adjustable leveler. If there is a gap between a leg and the floor, please adjust the adjustable leveler up or down under each leg.

Step 6: Securely tighten all the Bolts with Allen Wrench (H9). Assembly is complete.

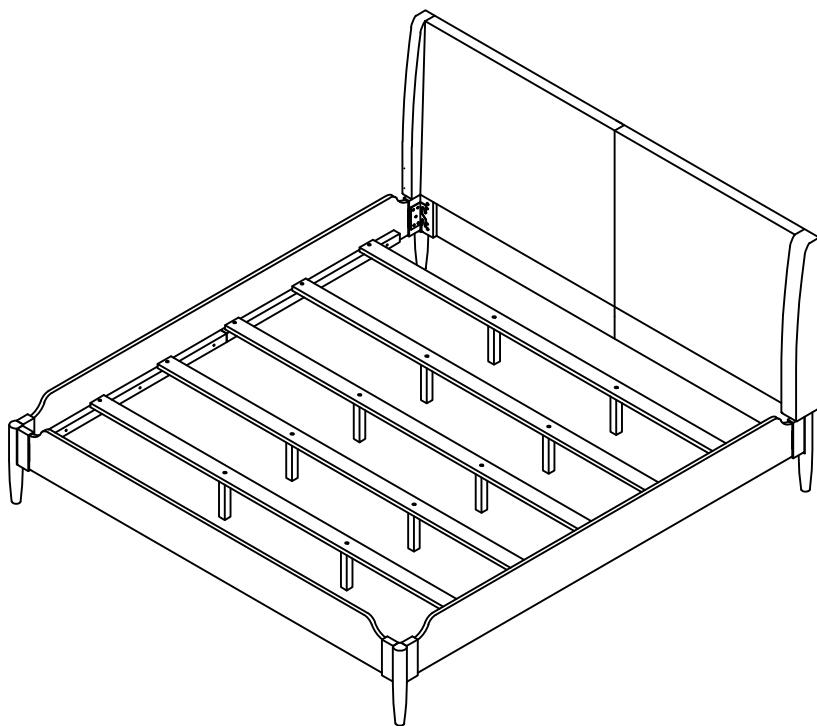

**ADDITIONAL NOTE ABOUT SAFETY: BOLTS MAY LOOSEN DURING NORMAL EVERYDAY USE. THEY SHOULD BE PERIODICALLY INSPECTED AND RE-TIGHTENED TO PREVENT DAMAGE OR INJURY. ALWAYS CHECK TO ENSURE THAT ALL HARDWARE IS KEPT TIGHTENED.**

Thank you for your purchasing